

18V
**CORDLESS
Pressure Washer**

4492298



V1:07/24

CAUTION Read the instructions before
using the machine

These instructions contain important information that will help you get the best from your pressure washer, ensuring it is assembled correctly and safely. If you need help or have damaged or missing parts, call the Customer Helpline on 0345 605 2067

**AFTER SALES SUPPORT
0345 605 2067**

SAN NO.: 0321802029ZD

SPEAR & JACKSON SINCE 1760

For more than 250 years gardeners have enjoyed high quality performance and great results using Spear & Jackson tools.

Our garden power tools combine continuous innovation and the latest in manufacturing technologies with a proud heritage.

Each product is carefully designed with performance, comfort and durability firmly in mind, which has earned Spear & Jackson an enviable reputation as a maker of tools to trust.

3 YEAR GUARANTEE

As a testament to the quality of our products, we offer a 3 year manufacturers warranty and a comprehensive after sales service.

The warranty covers manufacturing faults, however in the event that the item has been deliberately damaged, used in a commercial environment or disassembled then the warranty will be null and void.

Please retain proof of purchase.

7 DAYS A WEEK TECHNICAL SUPPORT

We want you to get the best out of our products. Our easy-to-read instruction manual guides you with best practice use and maintenance tips. Please call **0345 605 2067** for technical support, we can solve around 80% of questions directly over the phone.

We hope you enjoy your product and we look forward to any feedback, as this allows us to develop even better products for the future.

Argos Limited, London, EC1N 2HT, UK.

[Argos \(N.I.\) Ltd](#), Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.
<https://bit.ly/Coreservice-Spear-Jackson>

CONTENTS

Safety Information	03
Description of symbols	03
General safety	05
Safety warnings for high pressure washer	05
Safety warnings for battery pack and charger battery safety instructions	08
Charger safety instructions	09
Vibration and noise reduction	13
Emergency	13
Residual risks	13
Box Contents / Parts	15
Assembly	16
Preparation	17
Operation	19
Before starting.....	19
Switching on/off.....	19
Adjusting working pressure.....	20
Using the foam sprayer.....	21
Using the brush.....	21
Overview of cleaning	22
Maintenance	23
Storing, transport	23
Disposal	23
Technical Data	24
Troubleshooting	25
Guarantee	26

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

DESCRIPTION OF SYMBOLS

The following warning symbols appear throughout this manual and indicate the appropriate safety measures you should take when operating and maintaining the pressure washer.

WARNING SYMBOLS ON THE MACHINE



Caution / Warning.



Read the instruction manual.



Wear hearing protection.



Wear eye protection.



Wear respiratory protection.



Wear protective gloves.



Wear protective, slip-resistant footwear.



Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is.

IPX7

Degree of protection against water



This product is not suitable for connection to the potable water mains.



Do not direct the water jet onto people, animals, electrical equipment or onto the product itself.

T3.15A



With fuse 3.15 A



Guaranteed sound power level value in dB.



Only use the battery charger indoors.



Store indoors. Never store the pressure washer outdoors.



Do not dispose of battery packs in rivers or immerse in water.



Do not dispose of battery packs in fire. They will explode or leak and cause injury.



Do not expose battery packs to heat in excess of 45°C.

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine



Recycle electrical waste products in an environmentally safe way where facilities exist.



Charger is of protection class II. That means it is equipped with enhanced or double insulation.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



The product complies with the applicable UK Conformity Assessed directives and an evaluation method of conformity for these directives was done.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



Crossed out dust bin. Batteries and battery packs should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.




Batteries contain Lithium-ion. Do not dispose of batteries in household waste.

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

GENERAL SAFETY

 **WARNING:** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

Machines shall not be used by children. Children should be supervised to ensure that they do not play with the machine. This machine can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and understand the hazards involved.

SAFETY WARNINGS FOR HIGH PRESSURE WASHER

WARNING: This product has

been designed for use with the cleaning agent supplied or recommended by the manufacturer. The use of other cleaning agents or chemicals may adversely affect the safety of the machine.

WARNING: During use of high pressure washer, aerosols may be formed. Inhalation of aerosols can be hazardous to health.

WARNING: High pressure jets can be dangerous if subject to misuse. Never direct the jet at persons, live electrical equipment or the product itself.

- The liquid must not be directed towards equipment containing electrical components, such as the interior of ovens.

WARNING: Do not use the machine within range of persons unless they wear protective clothing.

WARNING: Do not direct the jet against yourself or others in order to clean clothes or

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

foot-wear.

WARNING: Risk of explosion
- Do not spray flammable liquids.

WARNING: High pressure washer shall not be used by children or untrained personnel.

WARNING: High pressure hoses, fittings and couplings are important for the safety of the product. Use only hoses, fittings and couplings recommended by the manufacturer.

WARNING: To ensure machine safety, use only original spare parts from the manufacturer or approved by the manufacturer.

WARNING: Water that has flowed through backflow preventers is considered to be non-potable.

WARNING: Remove the battery from the product during cleaning or maintenance and when replacing parts or converting the machine to another function.

WARNING: Do not use the machine if a supply cord or important parts of the machine are damaged, e.g. safety devices, high pressure hoses, trigger gun.

WARNING: Always switch off the mains disconnecting switch when leaving the machine unattended.

- Never use the product with inflammable or toxic liquids, or liquids with characteristics incompatible with its proper operation.
- Never use the product outdoors in the rain.
- Never lock the gun trigger in the operating position.
- Check that the product is fitted with its rating label; contact your dealer if it is missing. Products without rating label must not be used, since they cannot be identified and are potentially hazardous.
- Never tamper with or adjust the setting of the

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

safety valve or the safety devices.

- Never change the original diameter of the adjustable nozzle.
- The appliance shall not be left unattended while it is connected to the supply mains.
- Do not allow vehicles to drive over the pressure hose.
- Do not move the product by pulling on the pressure hose.
- When directed towards tyres, tyre valves or other pressurised components, the high pressure jet is potentially dangerous. Do not apply a jet stream and always keep the nozzle at a distance of at least 30 cm during cleaning.
- Protect all electrical conductors against the water jet.
- High pressure may cause parts to rebound: wear all the protective clothing and equipment needed

to ensure the operator's safety.

- Wear appropriate Personnel Protection Equipment (PPE) while operation e.g. safety boots, safety gloves, safety helmets with visors, hearing protection etc.
- Be aware of kick-back: grip the gun firmly when squeezing the trigger.
- Comply with the regulations of the local water supply authority. Under EN 12729 (BA) the product can be connected directly to the mains drinking water supply only if the supply hose is fitted with a backflow preventer device with drainage facility.
- Discharge residual pressure before disconnecting the hose from the product.
- Check before each use, and at regular intervals, that all metal fasteners are tight and the product's

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

components are in good condition; inspect for broken or worn parts.

- The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Keep the appliance out of reach of children when it is energized or cooling down.

WARNING: Use only detergents compatible with the high pressure hose cladding materials or other cladding materials.

SAFETY WARNINGS FOR BATTERY PACK AND CHARGER BATTERY SAFETY INSTRUCTIONS

CAUTION! Use only approved replacement batteries; other batteries may cause injury or damage to the product.

Use with approved battery charger.

- Recharge only with the charger specified by the

manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack. Incorrect use may result in electric shock, overheating or leakage of corrosive liquid from the battery.

- Use product only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water.

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

If liquid contacts eyes, additionally see medical help. Liquid ejected from the battery may cause irritation or burns.

- Be aware of possible hazards when not using your battery tool or when changing accessories. To reduce risk, remove the safety key and battery pack from the machine while not in operation. This will reduce the risk of electric shock, fire or serious personal injury.
- Do not place appliances or their batteries near fire or heat. Continuous intense sunlight, fire or other heat sources may cause an increased danger of explosion.
- Do not crush, drop or damage the battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged

battery immediately.

- Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of an open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- Do not charge battery in a damp or wet location. Following this rule will reduce the risk of electric shock.
- Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperature below 4°C or above 40°C. This is important as it can prevent serious damage to the battery pack.
- Do not disassemble the battery and avoid

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

mechanical damage to the battery. Risk of short circuit and fumes may be emitted. Ensure fresh air and seek medical assistance in the event of discomfort.

- Always remove battery pack from your tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.
- Always remove battery pack before storing the device. When battery becomes fully charged, unplug the charger from the power supply and remove the battery pack from the charger.
- Keep battery pack dry, clean, and free from oil and grease. Always use a dry cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any solvents to clean battery pack.
- Keep the battery pack out

of the reach of children.

- Rechargeable batteries are to be removed from the appliance before being charged.
- Different type of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.

CHARGER SAFETY INSTRUCTIONS

CAUTION! Use only approved replacement batteries; other batteries may cause injury or damage to the product.

Use with approved Lithium-Ion battery.

- The plug of the charger must match the outlet. Never modify the plug in any way. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- Ensure the battery pack

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

is charged indoors only, in a dry, cool and well-ventilated environment.

- Do not subject the battery to strong sunlight over long periods and do not leave it near a heat source. Heat damages the battery and there is a risk of explosion.
- Allow a hot battery to cool before charging.
- Do not use non-rechargeable batteries!
- Do not attempt to charge battery packs other than those supplied. The charger and battery pack supplied with it are specifically designed to work together.
- Before each use, check the charger, cable and plug. Do not use a defective charger and do not disassemble the charger. Incorrect reassembly may result in the risk of fire, electric shock or electrocution.
- Protect the charger against moisture and wet

conditions. There is a danger of electric shock.

- Operate the charger only with the appropriate original batteries. Charging other batteries may result in injuries and risk of fire.
- Avoid mechanical damage to the charger. This can result in internal short circuits.
- Do not operate the charger on easily inflammable surfaces (e.g. paper, textiles, etc.). The heating of the battery charger during the charging process could pose a fire hazard.
- Do not abuse the cord of the charger. Never use the cord for carrying, pulling or unplugging the charger.
- Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- Do not operate the charger with a damaged cord or plug, which could cause

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

shorting and electric shock. If damaged, immediately discontinue use. Replace the charger with the identical unit as listed in the Product Specifications in this manual. If the power cord for this equipment is damaged, it must be replaced by the manufacturer, a customer service agent of the same or qualified person in order to prevent hazards.

- The battery of the appliance is not fully charged at the time of delivery. It therefore needs to be fully recharged before you use it for the first time. For the first recharge cycle, charge the battery pack fully. Slot the battery into the base and plug the battery charger into an outlet.
- Do not use a charger that has been dropped or received a sharp blow.
- The voltage indicated on the charger rating plate must correspond to the voltage of the power

source.

- Never touch the mains plug with wet hands.
- It is good practice to unplug the charger and remove the lithium-ion battery pack when not in use.

The following information applies to professional users only but is good practice for all users:

VIBRATION AND NOISE REDUCTION

To reduce the impact of noise and vibration emission, limit the time of operation, use low-vibration and low-noise operating modes as well as wear personal protective equipment.

Take the following points into account to minimise the vibration and noise exposure risks:

- Only use the product as intended by its design and these instructions.

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

- Ensure that the product is in good condition and well maintained.
- Use correct accessories for the product and ensure they are in good condition.
- Keep tight grip on the handles/grip surface.
- Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
- Plan your work schedule to spread any high vibration tool use across a longer period of time.
- Prolonged use of the product exposes the user to vibrations that can cause a range of conditions collectively known as hand-arm vibration syndrome (HAVS) e.g. fingers going white; as well as specific diseases such as carpal tunnel syndrome. To reduce this risk when using the product, always wear protective gloves and keep your hands warm.

EMERGENCY

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

- Always be alert when using this product, so that you can recognise and handle risks early. Fast intervention can prevent serious injury and damage to property.
- Switch off and disconnect from the power supply if there are malfunctions. Have the machine checked by a qualified professional and repaired, if necessary, before you operate it again.

RESIDUAL RISKS

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise

SAFETY INFORMATION

Please read these instructions fully before operating or maintaining your machine

in connection with the structure and design of this product:

- Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained
- Injuries and damage to property due to broken attachments or the sudden impact of hidden objects during use.
- Danger of injury and property damage caused by flying objects.



WARNING!


This product produces an electromagnetic field during operation! This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical

implant manufacturer before operating this product!

BOX CONTENTS

PARTS

- 1 Pressure washer
- 2 5 in 1 lance and nozzle
- 3 Hose and filter
- 4 Extension lance
- 5 Battery pack
- 6 Charger
- 7 Foam bottle
- 8 Net bag
- 9 Fixed brush
- 10 Foldable bucket
- 11 Nozzle pin
- 12 Manual

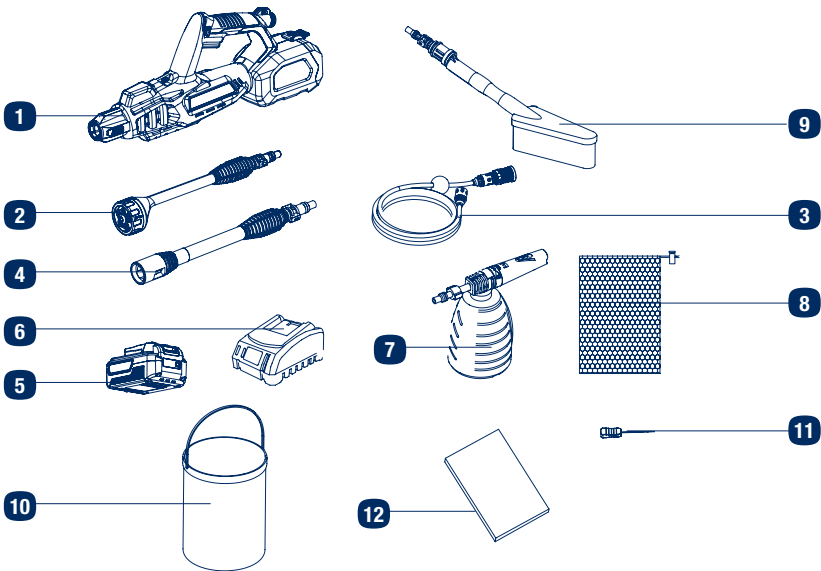


If there are any parts missing, please call the customer helpline on 0345 605 2067

ASSEMBLY


1 Install the extension lance

Align the extension lance to the main housing and push down firmly and then rotate the lance to secure in place.

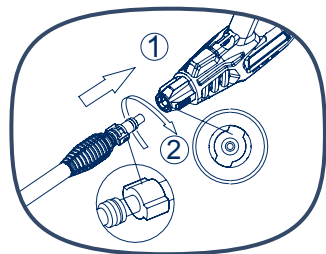



2 Fitting the 5 in 1 lance & nozzle

Align the 5 in 1 nozzle to extension lance and push down firmly and then rotate the lance to secure in place.

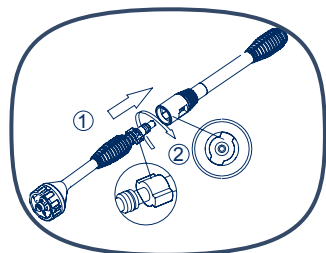

3 Connect the hose

- i. Using the pressure washer with your garden hose pipe – attach the hose pipe to the pressure washer connector and make sure that it is locked into position.
- ii. Using the pressure washer with water source in the bucket – using hose pipe supplied with the product and then connect the other hose connector to the pressure washer connector and place into the water source.

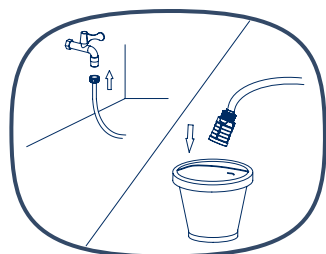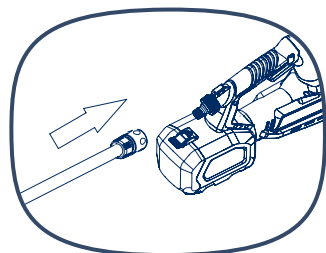

PREPARATION


1 Charging the battery pack

NOTE: Remove the battery pack from the charger after it has been fully charged.

NOTE: Battery should be fully charged before first use.

NOTE: Make sure the mains voltage is the same as rating label which is located on the charger.


- i. Connect the charger to a power supply. Red LED will light up.
- ii. To insert the battery pack into the charger, align the raised ribs of the battery pack with the grooves of the charger then push it in.
- iii. The red LED light of the charger will light up and then the green light flashes during normal charging.
- iv. After charging is complete, the charger light will turn to a solid green light and the red light will be off.
- v. Once the battery is fully charged, depress the battery release button and then remove the battery pack.

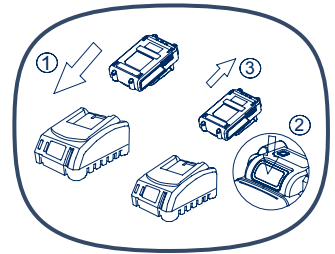

LED Light on charger (Red & Green)	Charger Status
	Stand by
	In charging
	Battery pack is fully charged
	Battery pack faulty
	Battery pack overheat

To install the battery pack

- i. Open the battery compartment door, by lifting up the door latch lever and rotating it with the battery door.
- ii. Align the groove on the battery pack with the corresponding ribs in the receptacle of the device.
- iii. Insert the battery pack with moderate force until it locks into place.
- iv. Close the battery compartment door and the catch shall be latched and then depress the latch lever- make secure the door is fully securely closed.

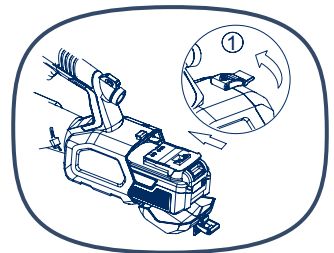


PREPARATION



To remove the battery pack from the pressure washer

- i. Open the battery door, by lifting up the door latch lever and rotating it with the battery compartment door.
- ii. Press the battery pack release button.
- iii. Remove the battery pack from the compartment.

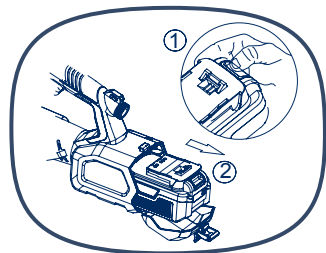

OPERATION




WARNING - Wear suitable clothing, ear and eye protection when working with the equipment.

Before starting

- i. Check the machine for visual defects.
 - ii. Check that all parts of the machine have been securely fitted.
 - iii. Check if the water connector and the inlet hose are tight.
-

Switch ON

- i. Press the safety lock button with your thumb.
- ii. Depress the switch lever. Once the machine has started then release your thumb from the lock button.
- iii. Hold the trigger down, if using the water source in the bucket, it will take at least 15 seconds to draw the water from the source.

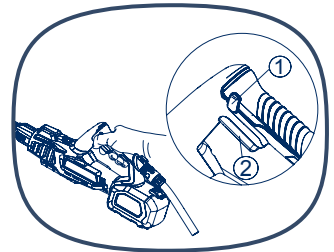

Switch OFF:

- i. Release the switch trigger.

ATTENTION! Risk of machine damage!

Never operate the machine without the water being connected as dry running may damage the pump. Use a clean water filter if the inlet water is contaminated.

OPERATION





RISK OF FATAL INJURY!

Use special care when cleaning tyres. Vehicle tyres/ tyre valves may become damaged or burst when handled improperly. First signs of damage include discolourations on the tyre. Damaged vehicle tyres/ tyre valves pose a life-threatening risk. Keep the jet at a distance of at least 30 cm!

The water jet may be dangerous when handled improperly. The jet may not be directed towards living beings (persons, animals), live equipment or the machine itself.

Adjusting working pressure

Whilst holding the lance rotate the nozzle to your selected position making sure that the nozzle is aligned with the lance arrow.

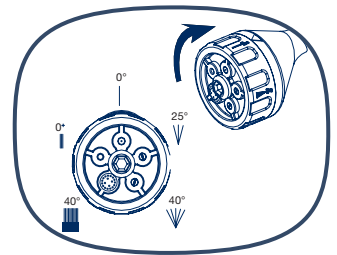
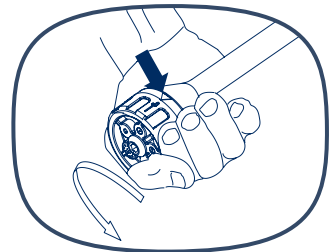


WARNING - Do not rotate the nozzle when operating the high pressure cleaner.

OPERATION


Using the foam sprayer

- i. Remove 5 in 1 nozzle and extension lance
- ii. Fill the bottle with clean detergent, and water.
- iii. Align the detergent bottle to the main housing, push down and rotate to secure in place.

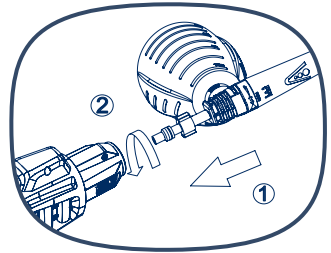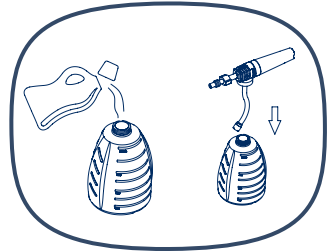

Using the brush

Align the brush to the main housing and push down firmly and rotate to secure in place.

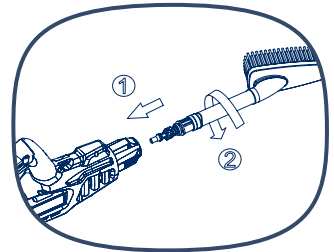

MAINTENANCE





WARNING - Be careful when using the nozzle pin.


Overview of cleaning

The pressure washer is equipped with a water filter to protect the pump. If the filter is not kept clean, the water flow to the appliance will be restricted and the pump may be damaged.


- i. Remove hose connector and take out filter.
- ii. Clean the hose connector and filter carefully using the nozzle pin.

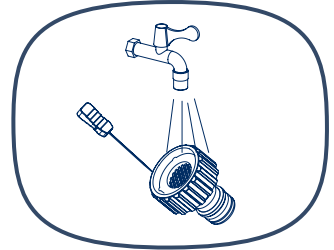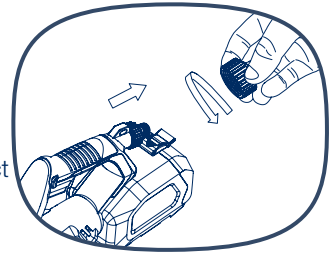

- iii. Clean the 5 in 1 nozzle carefully using the nozzle pin.

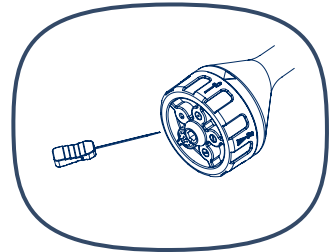

- iv. Clean the hose filter carefully using the nozzle pin.

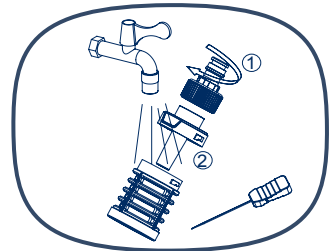

WARNING - If Salty water has been used, make sure the washer has been fully flushed out for 5 minutes using clean warm water.



WARNING - Please keep the nozzle pin away from children.

MAINTENANCE

Storing

Store the machine where it is dry and well ventilated.


When placing the machine out of service for an extended period of time, remove the cleaning agent and drain all the water left in the hoses.

Transport

If shipping, use the original packaging wherever possible.

Disposal

Disposing of the machine




Machines which are labelled with the this symbol  must not be disposed in household rubbish. You must dispose such old electrical and electronic appliances separately.

Please check with your local authority about the possibilities for correct disposal. You will thus help to avoid that damaging into the environment.

Disposing of the packaging

The packaging consists of cardboard and correspondingly marked sheets that can be recycled. Make these materials available for recycling.

TECHNICAL DATA

Model	SCLPW18
Rated voltage	18V 
Rated pressure	4 Mpa
Max pressure	4.5 Mpa
Rated flow rate	3 l/min
Max flow rate	6 l/min
Net weight	3 kg
Hose length	6m
Degree of protection against water	IPX7
A weighted sound pressure level	LpA=79.4dB(A) K=3dB(A)
Measured sound power level	L _{WA} = 88.32dB(A), Uncertainty K= 2.86dB(A)
Guaranteed sound power level	L _{WA} = 92 dB(A)
Vibration	Max. 1,48 m/s ² ; K=1,5 m/s ²
Battery pack	
Model	B0P-SP06-18ZK
Battery type	Lithium-Ion
Battery capacity	4 Ah
Voltage	18V 
Fully charging time	approx. 1.5h
Battery charger	
Model	B0Q-SP06-20ZB
Input	220-240V~, 50/60Hz 65W
Output	20V  2.4 A
Insulation protection class	II

The sound values have been determined according to noise test code given in EN 60335-2-79, using the basic standards EN ISO 3744 and may be used for comparing one tool with another. The declared vibration value may also be used in a preliminary assessment of exposure.



WARNING: The vibration emission value during actual use of the machine can differ from the declared value depending on the ways in which the machine is used. Identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the machine is switched off and when it is running idle in addition to the trigger time).

The sound intensity level for the operator may exceed 85dB(A) and ear protection measures are necessary.

TROUBLESHOOTING

Suspected malfunctions are often due to causes that the user can fix themselves. Therefore, check the product using this section. In most cases the problem can be solved quickly.



WARNING - Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!

Gloves and appropriate protective clothing must be worn when performing these instructions.

Fault/ malfunction	Cause	Remedy
Machine does not turn ON	Battery pack discharged?	Fully charge the battery pack
	Battery pack is not connected correctly onto the washer.	Install the battery pack once again.
	Safety lock off button has not been depressed.	Check start procedure 1. depress lock off 2. depress switch lever
	m/c PCB activated.	Restart the device
	Pump frozen.	Check and allow the machine to thaw
Machine water pressure too low	Hose damaged OR leaks in the connections.	Change the hose - check the hose for leaks and repair - securely tighten the screw connection
	Filter blocked.	Clean filter on the machine
	Hose is trapped or kinked.	straighten out the hose
	Inadequate water supply.	check water supply levels
	The machine /water source height is too large.	Lower the machine - maximum working height @1.5M- 5ft
Water leaks	O-ring split/broken	replace the accessory or change the O-ring
	Attachment are not installed correctly	remove & re-install the attachment correctly
	Accessories broken	replace accessories
Detergent cannot spray out	Deposits or restrictions in the detergent system	Flush with clean water and remove all debris

GUARANTEE

If your device develops a fault, please don't hesitate to contact our customer service department on 0345 605 2067, the majority of issues can be solved directly over the phone.

1. These warranty terms cover additional warranty rights and do not affect your statutory warranty rights. All our products are covered by a 3 year manufacturer warranty
2. Claims must be accompanied by Proof of Purchase. This must be in the form of a sales receipt or Bank statement and must show that the product has been purchased within the warranty period as described under point 1, from the retailer that it was originally bought from. Please keep your receipt safe or staple it to the back of this manual for future reference.
3. Our warranty covers problems caused by material or manufacturing defects, and will result in the repair of these defects or replacement of the device with a like for like or similar article.
4. Our devices have not been designed for commercial, trade or industrial applications, any signs of use of the equipment in these application or equivalent activities, invalidates the warranty.
5. The following are also excluded from our warranty:
 - A. Faults due to accidents, customer misuse or unauthorised repairs
 - B. Consumable parts such as brush and other accessories that are compatible with the product.
 - C. Failure due to lack of routine maintenance.
 - D. Failure as a result of not using the equipment in accordance with the manual and safety instructions
 - E. The adjustment of cables, pumps, or lances.

Warranty claims should be submitted before the end of the warranty period, see point 1, but a paid service exists for repairs commissioned after this period. The original warranty period remains applicable to the device even if repairs are carried out or parts are replaced.

In such cases, the work performed or parts fitted will not result in an extension of the warranty period, and no new warranty will become active for the work performed or parts fitted.

5. Please keep your sales receipt in a safe place. If it is covered by our guarantee your device will either be repaired under the terms of guarantee or we will send you a replacement device.

This device may be re-conditioned, like for like or upgraded replacement.

If you have any problems or questions concerning your garden power tool, please contact our after sales service at 0345 605 2067.