

Pos. No	Part code	Description
1	EABH011001	Left Housing
2	EABH011002	Right Housing
3	EABH011003	Blade Cover
4	EABH011004	Button Spring
5	EABH011005	Positioning Shaft
6	EABH011006	Upper Blade
7	EABH011007	Screw ST4X14mm
8	EABH011008	Lower Blade
9	EABH011009	Pendulum
10	EABH011010	Magnet
11	EABH011011	Gasket
12	EABH011012	Reflective Sheet
13	EABH011013	Aluminum Positioning Block
14	EABH011014	Screw M4x8mm
15	EABH011015	Blade Quick-release Button
16	EABH011016	Bevel Gear
17	EABH011017	Bearing 608Z
18	EABH011018	Tertiary Bracket
19	EABH011019	Tertiary Planetary Gear
20	EABH011020	Secondary Bracket
21	EABH011021	Secondary Planetary Gear
22	EABH011022	Primary Bracket
23	EABH011023	Primary Planetary Gear
24	EABH011024	Gearbox Gasket
25	EABH011025	Internal Gear Ring
26	EABH011026	Gearbox Housing
27	EABH011027	Motor Gear
28	EABH011028	Screw M2.5X6mm
29	EABH011029	Gearbox Cover
30	EABH011030	Motor
31	EABH011031	Ball Bearing
32	EABH011032	Pin
33	EABH011033	Screw ST3X6mm
34	EABH011034	PCB
35	EABH011035	Battery
36	EABH011036	Trigger Spring
37	EABH011037	Trigger
38	EABH011038	Light Guide Bar
39	EABH011039	Spring Plate
40	EABH011040	Switch Button
41	EABH011041	Screw ST3X16mm
42	EABH011042	Screw ST2.5X10mm
43	EABH011043	Nickel sheet
44	EABH011044	Sponge strip

