




Original User's Instructions

1600W 37cm Lawn Mower

SKU: 94135

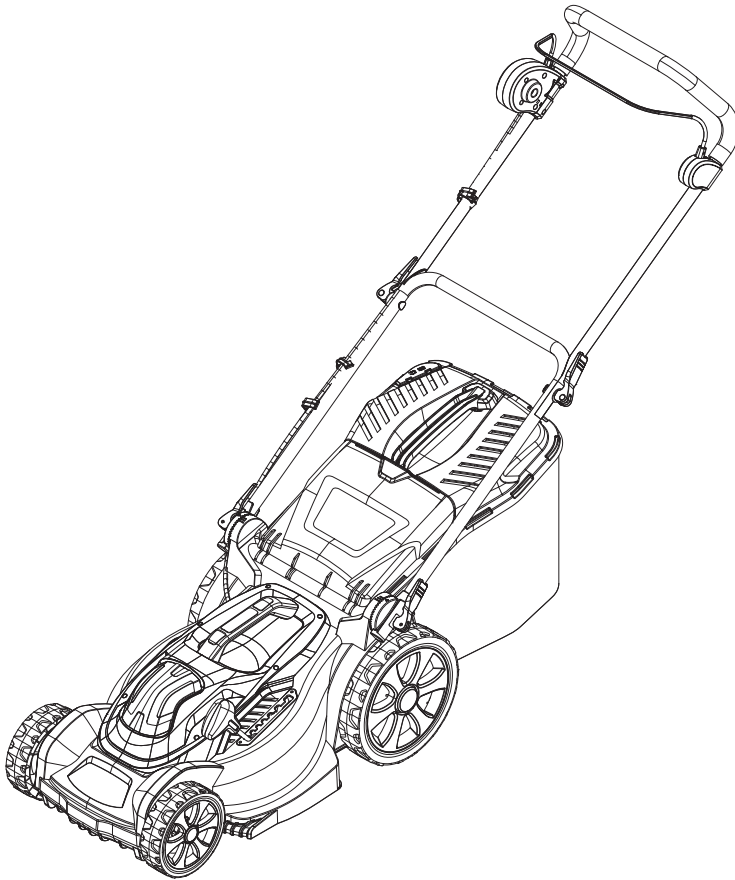


READ BEFORE USE

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


CONTENT

• WHAT'S IN THE BOX -----	3
• SPECIFICATIONS -----	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS -----	5
• IMPORTANT SAFETY WARNINGS -----	8
• PRODUCT DESCRIPTION AND IDENTIFICATIONS -----	13
• ASSEMBLY AND OPERATING INSTRUCTIONS -----	14
• CARE AND CLEANING -----	22
• TROUBLE SHOOTING -----	24
• DECLARATION OF CONFORMITY / PERFORMANCE -----	25
• ENVIRONMENTAL INFORMATION -----	26
• GUARANTEE -----	27
• CUSTOMER SUPPORT -----	27


WHAT'S IN THE BOX

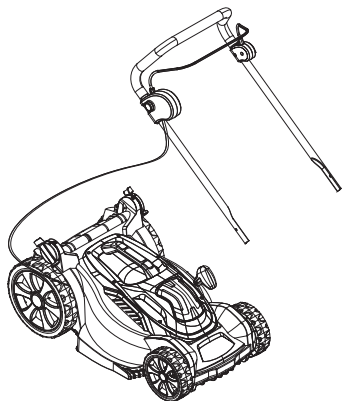

Lawn mower with upper handle

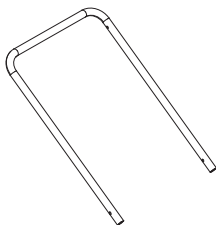


Lower handle

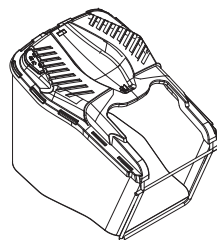

Grass collection bag



 
Grass collection bag handle

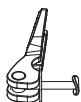

Lower handle quick locking lever x 2



 Locking cams x 2

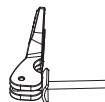

Upper handle quick locking lever (curved bolt head) x 2



Cable clip x 2

If you do not have all these items, please contact:

www.coreservice.co.uk

Hotline: +44 01904 947568

Email support@coreservice.co.uk

SPECIFICATION

Technical Data	
Model	SLM37_ZC
Input voltage rating	230-240V~,50Hz
No-load cutting speed	3500/min
Cutting width	37cm
Cutting height	25-75mm, 7 positions
Capacity of grass bag	40L
Net weight approx.	12.3kg
Measured sound pressure level(L_{pA})	85dB(A), K=3dB(A)
Measured sound power level(L_{wA})	95dB(A)
Guaranteed sound power level	96dB(A)
Vibrations	1.32m/s ² K=1.5m/s ²
Cable	H05VV-F, 2x1.0mm ² , 10m, BS plug

The sound values have been determined according to noise test code given in EN 60335-2-77, using the basic standards EN ISO 11201 and EN ISO 3744.

The sound intensity level for the operator may exceed 80 dB(A) and ear protection measures are necessary.

The declared vibration value has been measured in accordance with a standard test method (according to EN 60335-2-77) and may be used for comparing one product with another. The declared vibration value may also be used in a preliminary assessment of exposure.



WARNING! Depending on the actual use of the product the vibration values can differ from the declared total! Adopt proper measures to protect yourself against vibration exposures! Take the whole work process including times the product is running under no load or switched off into consideration!

Proper measures include among others regular maintenance and care of the product and cutting attachments, keeping hands warm, periodical breaks and proper planning of work.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



This instruction manual accompanies this lawnmower. It contains important information concerning assembly, start-up and handling. Before using the lawnmower, read the instruction manual carefully. This particularly applies to the safety notes. Failure to heed this instruction manual may result in severe injury or damage to the lawnmower. The instruction manual is based on the standards and rules in force in the European Union. Store the instruction manual for future use. If you pass the lawnmower on to third parties, please be absolutely sure to include this instruction manual.

You can request an electronic version of these instructions from our customer service centre.

Explanation of symbols

The following symbols and signal words are used in this instruction manual, on the lawnmower or on the packaging.



Read the user manual before operating the machine.



Warning! Danger!



Wear correct Personal Protective Equipment (PPE) when operating this machine such as eye protection, ear protection and respiratory equipment where necessary.



IMPORTANT! Wear gloves to protect your hands.



Wear safety boots to protect your feet.



Guaranteed sound power level value in 96dB.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was carried out.



UK Conformity Assessed



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



Do not expose the product to rain or wet conditions.



Double insulation.



Objects thrown out by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children should be kept away from the area where the product is being operated.



Beware of sharp blades. Blades continue to rotate after the motor is switched off. Remove the plug from the mains before performing any maintenance or if the cord is damaged.



The cutting device will continue to rotate after the product is switched off. Wait until all components have completely stopped before performing any work on the product.

 
STOP



Switch the lawnmower off and disconnect it from the power supply before assembling, cleaning, making adjustments, performing maintenance, storing or transporting the machine.



Keep supply flexible cord away from cutting device.

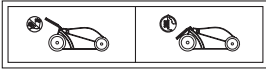

Always make sure the rear flap is closed in position when working the mower.



WARNING!

This appliance should be connected to your mains supply using an RCD (Residual Current Device). The operating current of this device must be less than 30mA. Contact an electrician if you are unsure on how to proceed.

For safety reasons, this lawnmower is not to be used by children, young people under the age of 16 or any other people who are not acquainted with these operating instructions.

IMPORTANT SAFETY WARNINGS

Proper use

1. Operate the product only in daylight or in good artificial light.
2. Avoid operating the product in wet grass.
3. Always be sure of your footing on slopes.
4. Walk, never run.
5. Do not use this appliance in wet conditions.
6. Mow across the face of slopes, never up and down.
7. Exercise extreme caution when changing direction on slopes.
8. Do not mow excessively steep slopes.
9. Use extreme caution when reversing or pulling the product towards you.
10. Stop the blades if the product has to be tilted for transportation, when crossing surfaces other than grass and when transporting the product to and from the area to be mowed.
11. Switch on the motor carefully according to the instructions and with your feet well away from the blades.
12. Do not tilt the product when switching on the motor except if the product has to be tilted for starting. In this case do not tilt it more than absolutely necessary and lift only the part which is furthest away from the operator.
13. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
14. Do not transport the product while the mains power is connected.
15. Stop the product and remove the plug from the socket. Make sure that all moving parts have come to a complete stop:
 - Whenever you leave the product unattended.
 - Before clearing blockages or unclogging the chute.

- Before checking, cleaning or working on the product.
- After striking a foreign object. Inspect the product for damages and replace or repair any damaged parts before restarting the product.

16.If the product starts to vibrate abnormally:

- Inspect for damage.
- Replace or repair any damaged parts.
- Check and tighten any loose parts.

Safety notes



WARNING!

DO NOT TOUCH ROTATING BLADES.

- This machine can cause serious injury. Read the instruction manual carefully for the correct handling, preparation, maintenance, starting and stopping of the appliance. Be familiar with the controls and the proper use of the appliance.
Read and understand the operator's manual and observe the warnings and instruction labels affixed to the appliance.
- Never allow children or people unfamiliar with these instructions to use the appliance. Never operate this appliance when tired or under the influence of alcohol, medication or drugs.
- Use appropriate tools. This product is intended for private use only, not for any commercial applications. It may not be used for any purposes other than those described in this manual.

Work Area Safety

- Keep work areas clean. Cluttered areas can cause accidents.
- Keep all bystanders, children and pets at least 5 metres away.
The operator or user is responsible for any accidents or hazards occurring to other people or their property.

Personal Safety

- Wear the correct personal protective equipment (PPE). Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes or gloves used for appropriate conditions will reduce the risk of personal injury.
- Dress appropriately. Do not wear loose clothing or jewellery, as these can be caught in moving parts. Preferably wear nonslip footwear when working outdoors. Long hair should be tied back out of the way.
- Stay alert and use caution and common sense when operating the lawnmower. A moment of lapsed concentration while operating the lawnmower may result in serious personal injury.
- This appliance can be used by persons aged 18 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the machine.
- Read the instructions carefully. Be familiar with the controls and the correct use of the product.
- Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.
- Never operate the product while children, other people or pets are nearby.

- Keep in mind that the operator or user is responsible for any accidents or hazards occurring to other people or their property.

Operational Safety

- Be certain that all parts of the machine are fully tightened before operating the machine. Check periodically for tightness during use to avoid serious injury.
- While operating the product always wear substantial footwear and long trousers. Do not operate the product when barefoot or wearing open sandals. Avoid wearing clothing that is loose fitting or that has hanging cords or ties.
- Thoroughly inspect the area where the product is to be used and remove all objects which could be thrown by the product.
- Before use, always visually inspect to see that the blade, blade bolt and the blade assembly are not worn or damaged.
- Replace worn or damaged components in sets to preserve balance. Replace damaged or unreadable labels.
- Before use, check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the mains power immediately. **DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE MAINS POWER.**
- Do not use the product if the cord is damaged or worn. If the cord requires replacement this should only be carried out by the service agent or a similarly qualified person.
- Keep all nuts, bolts and screws tight to be sure the product is in a safe working condition.
- Check the grass collector frequently for wear or deterioration.
- Be careful during the adjustment of the product to prevent entrapment of the fingers between moving blades and fixed parts of the product.

- When servicing the blades be aware that, even though the power source is switched off, the blades can still move.
- Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.

Checking the lawnmower and product contents




WARNING! **RISK OF DAMAGE!**

If you are not cautious when opening the packaging with a sharp knife or other pointed objects, you may easily damage the lawnmower. Therefore, be very careful when opening.

1. Take the lawnmower out of the packaging and check whether the appliance or the individual parts show any signs of damage. If any parts are missing or damaged, do not use the lawnmower. Contact the manufacturer at the service address specified on the warranty card.
2. Check to make sure that the delivery is complete (see WHAT'S IN THE BOX).

PRODUCT DESCRIPTION AND IDENTIFICATIONS

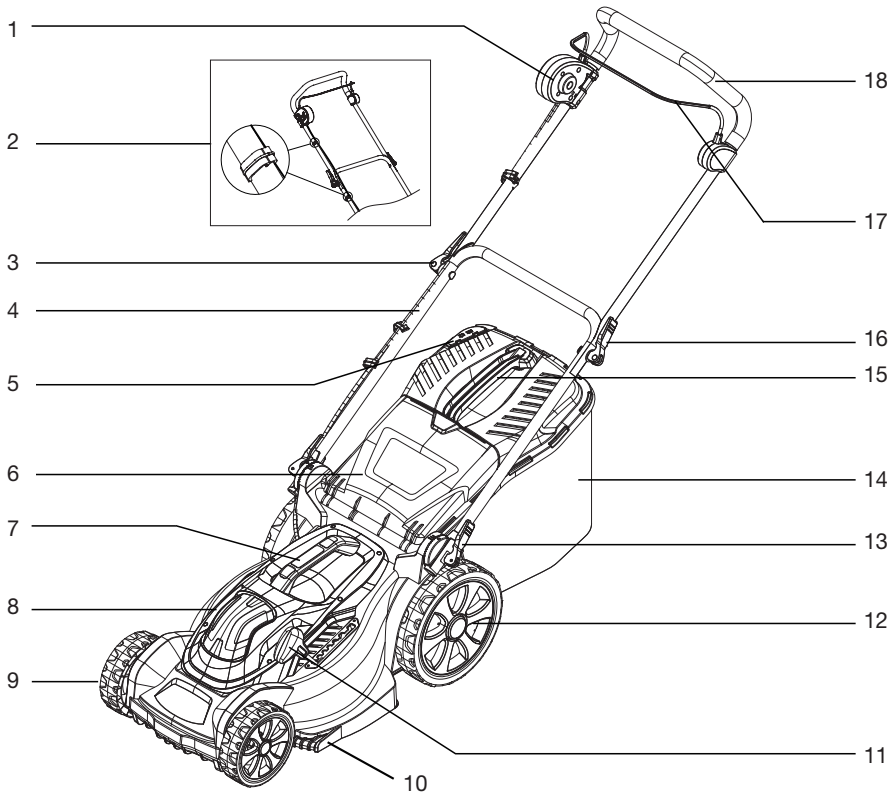

- | | |
|--------------------------------------|---|
| 1. Switch box with on/off button | 10. Grass edging combs |
| 2. Cable clip x 2 | 11. Cutting height adjustment lever |
| 3. Upper handle quick release handle | 12. Rear wheel |
| 4. Lower handle | 13. Lower handle quick release lever |
| 5. Grass full indicator | 14. Grass collection bag |
| 6. Safety flap | 15. Carry handle for grass collection bag |
| 7. Carry handle | 16. Upper handle quick release lever |
| 8. Decorating cover | 17. Switch lever |
| 9. Front wheel | 18. Top handle |

Not all the accessories illustrated or described are included in standard delivery.

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: To reduce the risk of injury, user must read instruction manual.

Intended Use


This product is intended for domestic lawn mowing.



WARNING: Ensure that the lawnmower is disconnected from the power source before starting the assembly procedure.

Attach the lower handle

Attach the two locking cams to the lower handle.

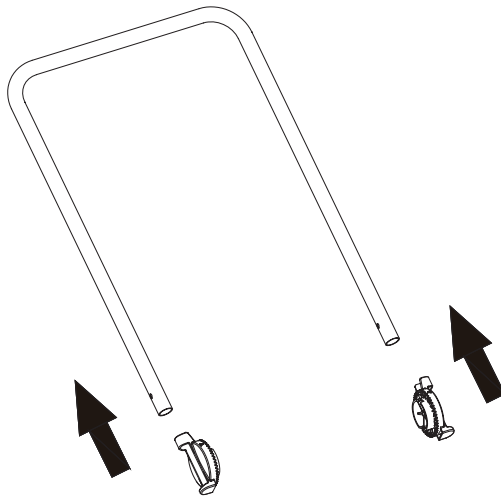

Attach the lower handle to the lawn mower

Mounting the bottom part of the handle on the lawn mower


Slide the pull relief onto the bottom part of the handle.

Slide the connecting pieces onto the bottom part of the handle. The locking washers of the connecting pieces must point inwards.

Place the bottom part of the handle on the handle mount. Check whether the serrations of the locking washer engage correctly in the handle mount. The holes of the handle mount, the connecting pieces and the bottom part of the handle must point towards each other.

Twist the quick-release levers all the way into the handle mount. Do not use excessive force; it is sufficient to twist in the quick-release lever until you feel a resistance.

Flick the quick-release lever. If it is too tight, turn the quick-release lever one turn backwards.

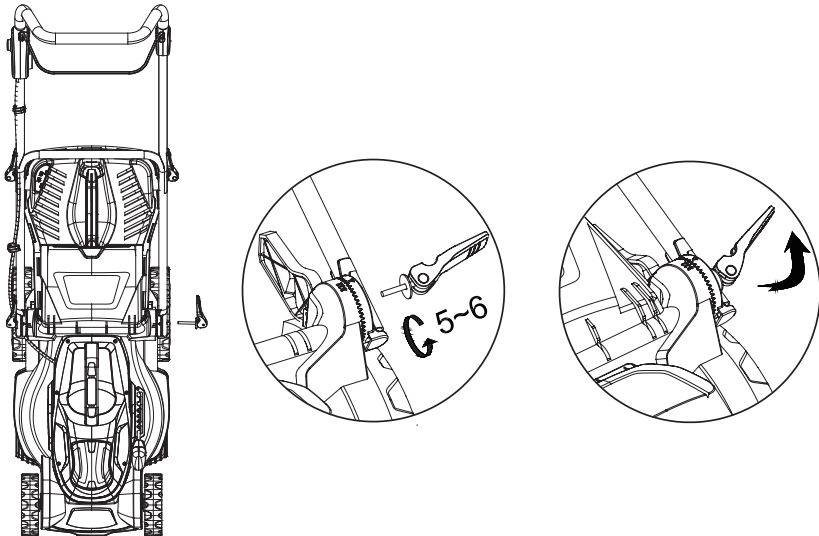


Attach the top handle to the lawn mower

Loosen the upper handle quick release lever (curved bolt head)(16) separately with locking lever, gasket and bolt.


Attach the upper handle onto the lower handle from outside of the lower handle and align the holes in order with locking lever, washer, upper handle, power cord protection sheath(3) and lower handle (4) with on the upper handle and lower handle.

Assemble them with the upper handle quick release levers(16). (Refer to figure below)

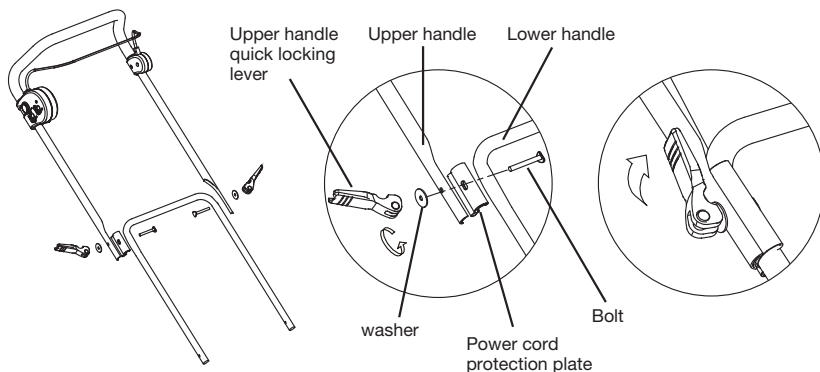


Fitting the cable clip

Ensure that the cable clips(2) supplied are used to fix the cable to the lower handle and upper handle.

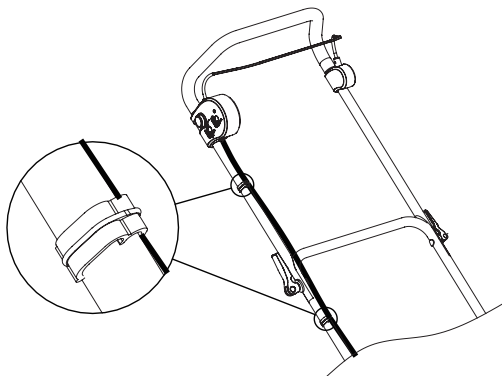


Assemble the grass collection bag handle.

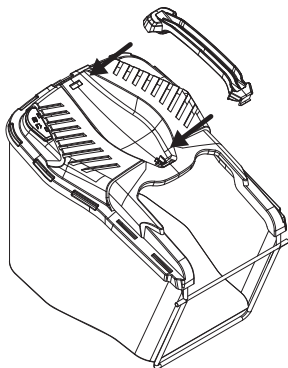


Attach the grass bag

Attach the grass collection bag to the frame by fixing the plastic hooks onto the side.

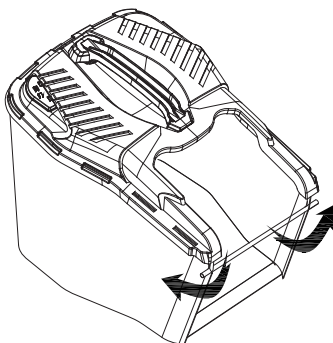

Lift the safety flap with one hand and hook in the grass collection bag. Release the safety flap to secure the grass collection bag in position.

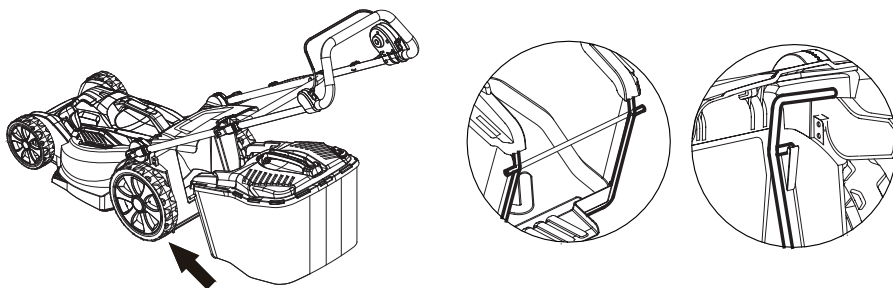

Connecting to the power supply



WARNING! For your safety, the extension cord must be suitable for outdoor use with sockets that are protective against splashing water!


Extension cords that are safe to use are:

- if rubber insulated, ordinary tough rubber sheathed flexible cord (code designation 60245 IEC53);
- if polyvinyl chloride insulated, ordinary polyvinyl chloride sheathed flexible cord (code designation 60227 IEC 53).

Ensure the extension cord is of the proper size and type for your product($\geq 1.5\text{mm}^2$)!

Always use a residual current supply (RCD) protected supply!

1. Connect the plug to the main socket.

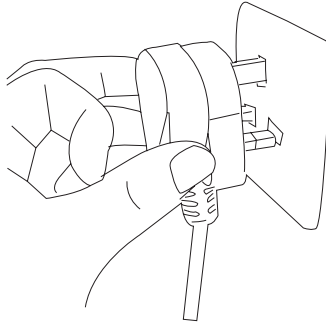


Setting the cutting height

Release switch lever and wait until the motor stops before adjusting cutting height. The blades continue to rotate after the machine is switched off, a rotating blade can cause injury.


Grip the cutting height adjustment lever and pull it outwards, then move it up or down a notch to increase or decrease the cutting height.

Locate the adjustment lever inwards to the notch again, until it engages in the desired level.

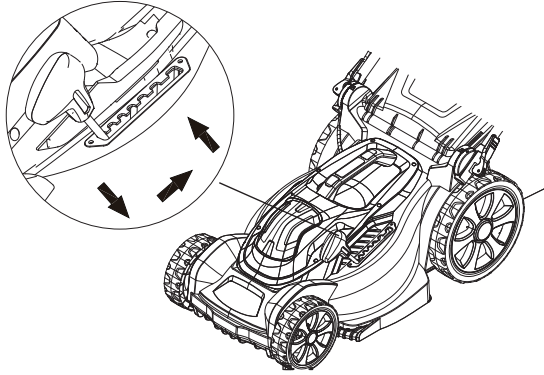

WARNING: Never operate the adjusting lever roughly.

Switching on and off

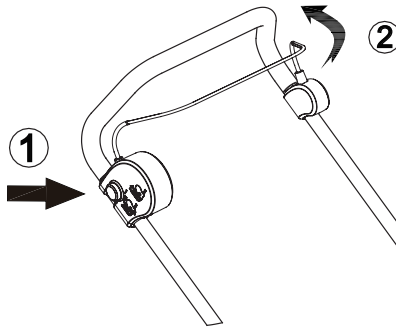

Switch on:

1. Press and hold the safety button on the side of the switch box with one hand.
2. Pull the switch lever towards the handle and hold it with the other hand.
3. Release the safety button.

Switch off:

Release the switch lever.

Operating the lawn mower**Operation on a slope:**


Slopes increase the risk of slip-and-fall accidents, which can result in severe injury. Always be sure of your footing on slopes. Operation on slopes requires extra caution. If you feel uneasy on a slope, do not mow it.

Do:

- Mow across the face of slopes, never mow up and down.
Exercise extreme caution when changing direction on slopes.
- Watch for holes, ruts, rocks, hidden objects or bumps which could cause you to slip or trip. Tall grass can hide obstacles.

Do not:

- Do not mow near drop-offs, ditches or embankments, you could lose your footing or balance.
- For safety reasons, do not use the mower on gradients exceeding 15°.
- Do not mow on wet grass. Unstable footing could cause you to slip.

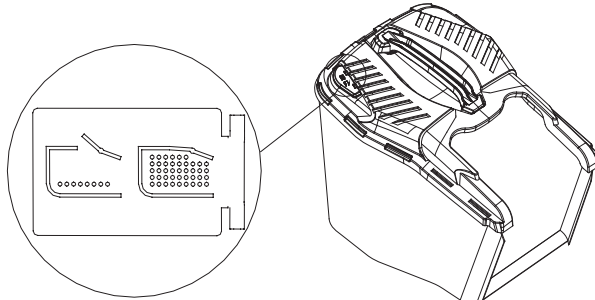Function of full indicator

If the grass collection bag is empty or it is not filled with grass, the grass full indicator will be open.
If the grass collection bag is filled with grass, the grass full indicator will be closed.

Emptying the grass bag

As soon as the grass collection bag indicator closes whilst mowing, the grass bag is full and requires emptying.

NOTE:

To remove the grass bag, use one hand to lift up the safety flap and the other to hold on to the carry handle of the grass bag. The safety flap automatically falls down after removing the grass collection bag and closes off the rear chute opening. Empty the grass collection bag then refit to the mower.

NOTE: If any grass residue is caught in the discharge chute, clean it using a brush. Do not remove grass debris in the mower casing or on the blade by hand or with your feet. Instead, use suitable tools, such as a brush or broom. To ensure that the cut grass can be collected into the grass bag, the discharge opening and inside the mower casing must be cleared of any blockages.

CARE AND CLEANING

Maintenance and Storage

Cleaning

Cleaning the product


- Use a soft brush to remove accumulated dust and debris. Wear safety glasses to protect your eyes whilst cleaning.
- Wipe down the product enclosure with a slightly damp cloth.
Do not spray the unit with water. Water may destroy the switch unit and the electric motor.

Maintenance

NOTE: Always wear gardening gloves when handling or working near sharp blades.

1. Keep all nuts, bolts and screws tight to ensure that the machine is in a safe working condition.
2. Check the grass collection bag frequently for wear or deterioration.
3. Examine the machine and replace worn or damaged parts for safety.

Removing/installing the blade

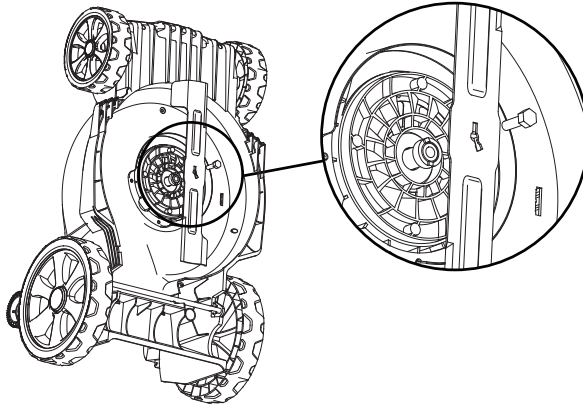

1. Use the correct size wrench to uninstall the blade bolt nut.
2. Wearing safety gloves, hold the blade still and turn the wrench anti-clockwise to remove the bolt.
3. Fit the replacement blade correctly with the markings facing up and align the pegs, refit the bolt and retighten securely to torque 20N.m.




WARNING: Replace or re-sharpen the mowing blade at the end of the mowing season. Always have the mowing blade re-sharpened or replaced by a recommended service centre. Unbalanced blades will cause the lawn mower to vibrate violently, which can increase the risk of accidents occurring.

Storage and transport

Storage

After cleaning the unit thoroughly, store the lawn mower in a dry room and allow the motor to cool down.

To reduce storage space, the lawn mower can be folded.

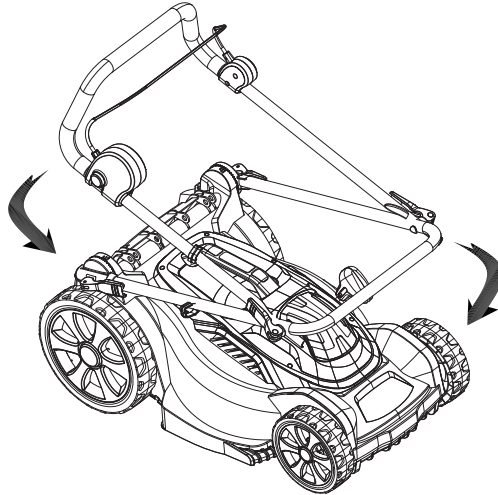

1. Loosen the handle quick release levers on the handles.
2. Fold the handles.
3. Stand up the mower and store.

Transport

Use the original packaging to ship whenever possible.

TROUBLE SHOOTING

Use this section to help you to try and solve any problems you may have:

Fault	Possible cause	Solution
Mower fails to start	High grass, rear of mower housing and blade are dragging in heavy grass, or cutting height too low.	Raise the cutting height
	The mower housing is clogged	Clean housing so blade can move freely
Mower stops working/ loses power	Cutting height is incorrect	Adjust cutting height
	Cutting blade is worn or damaged	Replace with new blade from dealer service centre
Grass collection bag is not filled sufficiently	Cutting height is too low	Adjust and increase cutting height
	The lawn/grass is wet	Allow lawn to dry
	Underside of mower deck is clogged	Clean underside of mower deck
	Cutting blade is worn or damaged	Replace by contacting customer service centre
Mower vibrating at higher speed	Cutting blade is unbalanced	Balance blade by grinding each cutting edge until equal
	Blade is loose/ incorrectly fitted	Tighten blade bolt
Mower cuts unevenly	The blade is damaged	Sharpen blade or replace
	Blade is assembled incorrectly	Re-assemble blade correctly

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: 94135 (SLM37_ZC)

Product description: Hawksmoor 1600W 37cm Lawn Mower

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonization legislation:

Supply of Machinery (Safety) Regulations 2008
Electromagnetic Compatibility Regulations 2016
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
Electrical Equipment (Safety) Regulations 2016
Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001
Measured Sound Power Level: 95 dB(A)
Guaranteed Sound Power Level: 96 dB(A)

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared:

BS EN 55014-1; BS EN 55014-2; BS EN 60335-1; BS EN 60335-2-77; BS EN 61000-3-2;
BS EN 61000-3-3; BS EN 60335-2-29; BS EN 62233

4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

GUARANTEE

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation - replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 2 years from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

www.coreservice.co.uk

Call us +44 01904 947568

Email: support@coreservice.co.uk

Made in China