



User Manual

Spend a little Live a lot

WITH
**QUICK
START
GUIDE**



2.2 KW HIGH PRESSURE WASHER



Original instructions

**Product
Info**

www.aldi.co.uk

360°

QR codes take you where you want to go quickly and easily

Whether you require **product information, spare parts or accessories**, details on **warranties or aftersales services**, or if you want to watch a **product demonstration video**, our QR codes will take you there in no time at all.

What is a QR code?

A QR code (QR = Quick Response) is a type of matrix that can be read with a smartphone camera and that contains a link to a website or contact details, for example.

Advantage: You do not need to manually enter a website address or contact details.

This is how it works

To scan the QR code, all you need is a smartphone with QR code reader software and an internet connection.* This type of software can be downloaded for free from your app store.

Try it out now

Just scan the QR code with your smartphone and find out more about the Aldi product you have purchased.*

Your Aldi Service Portal

All details mentioned above can also be found in the Aldi Service Portal at www.aldi.co.uk.




* Depending on your tariff plan you may be charged for the connection.


Contents

Overview	4
Use	5
Product contents/device parts	6
General information	7
Reading and storing the user manual.....	7
Explanation of symbols.....	7
Safety	9
Proper use.....	9
Safety notes	9
Residual risks	12
First use	14
Checking the 2.2 kW high pressure washer and product contents.....	14
Assembling the 2.2 kW high pressure washer	14
Operation	16
Starting and stopping	17
Instructions for operation	18
Using the adjustable spray lance	19
Using the turbo lance	20
Using the rotating brush.....	20
Automatic supply of cleaners.....	21
Cleaning and maintenance	22
Cleaning	22
Maintenance	23
Storage and transport	23
Storage of accessories.....	24
Storage of the 2.2 kW high pressure washer.....	24
Transport	25
Troubleshooting	25
Technical data	27
Declaration of conformity	28
Spare part list	29
Disposal	29
Disposing of the packaging.....	29
Disposing of the 2.2 kW high pressure washer	29
Warranty card	31
Warranty conditions	32


A

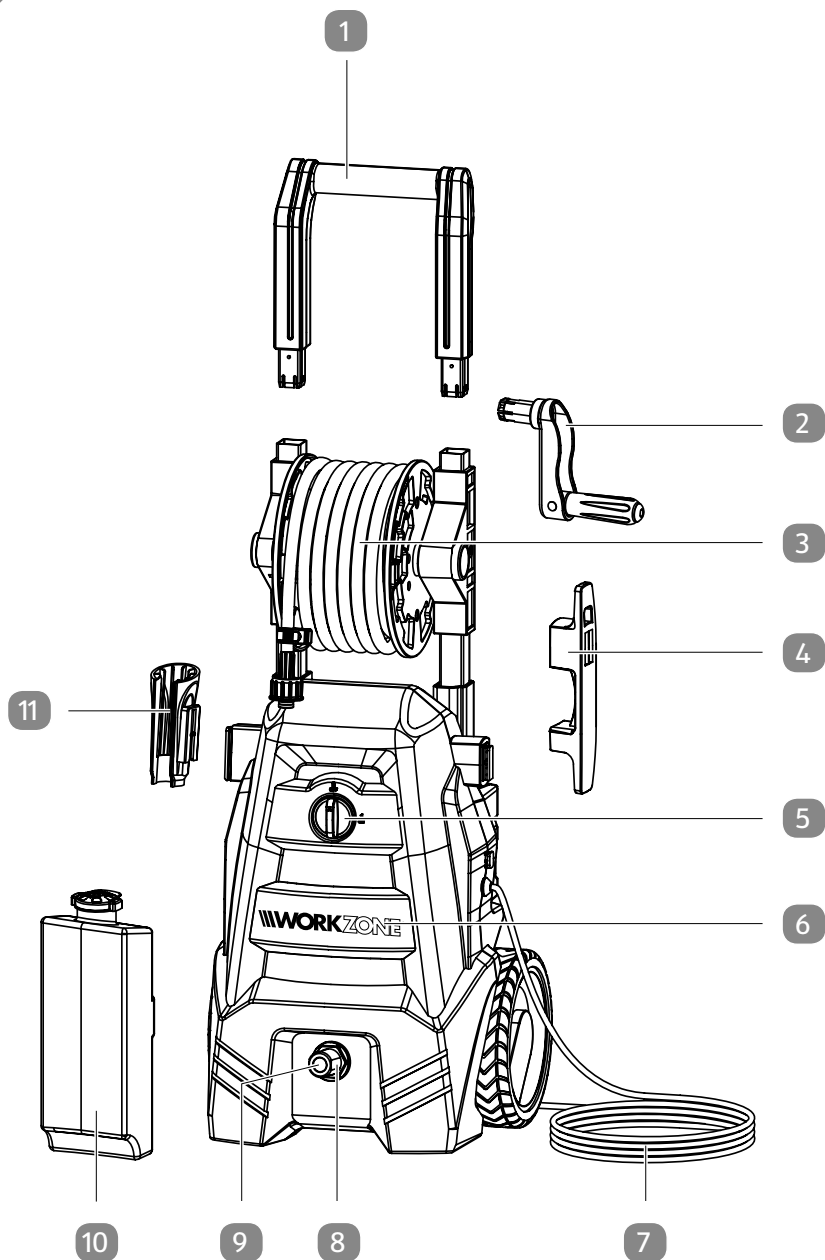


B

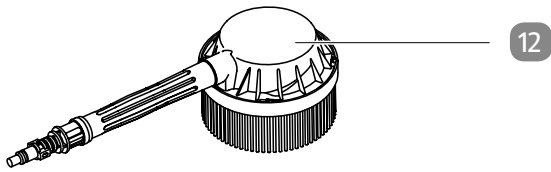


12

 

13

 

14

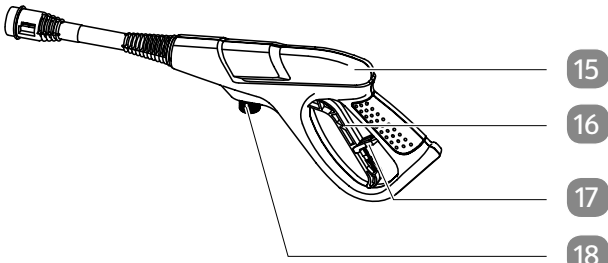

15


16

17


18



19

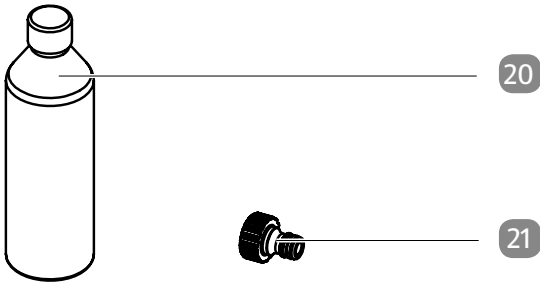

20

 

21



22

Product contents/device parts

- 1 Handle
- 2 Hand crank
- 3 High pressure hose (with hose clamp)
- 4 Cord holder
- 5 ON/OFF switch
- 6 2.2 kW high pressure washer
- 7 Mains cord
- 8 Threaded socket
- 9 Protective cap
- 10 Cleaner container
- 11 Holder for the spray gun
- 12 Rotating brush (low pressure accessory)
- 13 Turbo lance
- 14 Adjustable spray lance (used with the high pressure nozzle)
- 15 Spray gun
- 16 Trigger
- 17 Safety lock
- 18 Protective cap
- 19 Cross-slotted screws, 2×
- 20 Cleaning solution
- 21 Water inlet adapter (with dirt filter)
- 22 Nozzle pin
- 23 Nozzle head, can be pulled out and rotated

General information

Reading and storing the user manual



This user manual accompanies this 2.2 kW high pressure washer. It contains important information on start-up and handling.

Before using the 2.2 kW high pressure washer, read the user manual carefully. This particularly applies for the safety notes. Failure to heed this user manual may result in severe injury or damage to the 2.2 kW high pressure washer.

The user manual is based on the standards and rules in force in the European Union. When abroad, you must also observe country-specific guidelines and laws.

Keep the user manual for future use. If you pass the 2.2 kW high pressure washer on to third parties, please be absolutely sure to include this user manual.

You can also request the user manual in PDF format from customer service.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the 2.2 kW high pressure washer or on the packaging.

 **WARNING!**

This signal symbol/word designates a hazard with moderate degree of risk which may lead to death or severe injury if not avoided.

 **CAUTION!**

This signal symbol/word designates a hazard with low risk that, if not avoided, may result in minor or moderate injury.

NOTICE!

This signal word warns against potential damages to property.



This symbol provides you with useful supplementary information on assembly or operation.



Declaration of conformity (see chapter “Declaration of conformity”): Products marked with this symbol meet all applicable Community regulations for the European Economic Area.



Immediately disconnect the mains plug from the power supply if the cord is damaged, twisted or knotted, if it has been severed or if the 2.2 kW high pressure washer is left unsupervised – even for a short period of time.



Never point the high pressure jet directly at persons, animals, the 2.2 kW high pressure washer or the electrical components.



The 2.2 kW high pressure washer must not be connected directly to the drinking water network. If necessary, please only use it with a water backflow preventer or a supply hose set approved in accordance with IEC 61770.



Only turn the crank for the hose reel clockwise to wind up the high pressure hose. Winding it in the opposite direction may damage the hose and the 2.2 kW high pressure washer.



Guaranteed sound power level in accordance with the directive 2000/14/EC.



Dual insulation, device of protection class II.



WARNING: Read the user manual before using the device.

Safety

Proper use

The 2.2 kW high pressure washer is only designed for cleaning the walls of buildings, façades, patios, walkways, garden tools, machines, vehicles, tools etc. with a high pressure nozzle. It is only intended for private use and is not suitable for commercial use.

Only use the 2.2 kW high pressure washer as described in this user manual. Any other use is deemed improper and may result in damage to property or even personal injury. The 2.2 kW high pressure washer is not a children's toy.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety notes

WARNING!

Risk of electric shock!

Faulty electrical installation or excessive mains voltage may result in an electric shock.

- Only connect the 2.2 kW high pressure washer if the mains voltage of the socket corresponds to the nameplate specification.
- An experienced electrician must connect the device to the mains and the connection must meet the requirements of IEC 60364-1.
- It is recommended that the power supply for this 2.2 kW high pressure washer is supplied either via a fault-current circuit breaker that interrupts the power supply as soon as the leakage current to the earth exceeds 30 mA for 30 ms or that it is equipped with an earth tester.
- Only connect the 2.2 kW high pressure washer to an easily accessible socket so that you can quickly disconnect the 2.2 kW high pressure washer from the mains in the event of a fault.
- Do not operate the 2.2 kW high pressure washer if it is visibly damaged or if the mains cord or mains plug is defective.

- If the mains cord of the 2.2 kW high pressure washer is damaged, the manufacturer, its customer service team or a person with similar qualifications must replace it to avoid risks.
- Do not open the housing; instead, have a qualified professional perform the repairs. Contact the after sales support line for this. Liability and warranty claims are waived in the event of repairs performed by the user, improper connection of the device or incorrect operation.
- Only parts that comply with the original device data may be used for repairs. Electrical and mechanical parts, which are essential for providing protection against sources of danger, are located in this 2.2 kW high pressure washer.
- The 2.2 kW high pressure washer must not be operated with an external timer or separate telecontrol system.
- Do not immerse the 2.2 kW high pressure washer or the mains cord or mains plug in water or other liquids.
- Never touch the mains plug with damp hands.
- Never pull the mains plug out of the socket by the mains cord; instead, always do so by taking hold of the mains plug.
- Pull the mains plug out of the socket if you would like to attach or remove accessory parts, before cleaning and maintenance and if you leave the 2.2 kW high pressure washer unattended – even for a short period of time.
- Never use the mains cord as a carrying handle.
- Keep the 2.2 kW high pressure washer, mains plug and mains cord away from open flames and hot surfaces.
- Lay the mains cord so that it does not pose a tripping hazard.
- Do not kink the mains cord and do not lay it over sharp edges.
- Never reach to retrieve an electrical device if it has fallen in water. In such a case, immediately disconnect the mains plug.
- Make sure that children do not insert any objects in the 2.2 kW high pressure washer.

- Always turn the 2.2 kW high pressure washer off and pull the mains plug out of the socket in the event of a fault.

⚠ WARNING!

Danger for children and persons with impaired physical, sensory or mental capacities (e.g. partially disabled persons, older persons with reduced physical and mental capacities) or lack of experience and knowledge (e.g. older children).

- This 2.2 kW high pressure washer may be used by persons with impaired physical, sensory or mental capacities or those lacking experience and knowledge if they are supervised or have been instructed in how to safely use the 2.2 kW high pressure washer and have understood the risks associated with operating it.
- The 2.2 kW high pressure washer must not be used by children. Supervise children to make sure that they do not play with the 2.2 kW high pressure washer.
- Do not leave the 2.2 kW high pressure washer unattended while in operation.
- Do not let anyone use the 2.2 kW high pressure washer, who is not familiar with the user manual.
- Do not allow children to play with the packaging wrapper. Children may get caught in it when playing and suffocate.

⚠ WARNING!**Risk of electric shock!**

Unsuitable extension cords may be dangerous and could result in an electric shock.

- If an extension cord is used, the plug and coupling must be water-tight and must not be in water. Plugs and couplings must bear the IP44 label. It is recommended that you use a cord reel that keeps the socket at least 60 mm above the ground.

⚠ WARNING!**Risk of injury!**

The high pressure jet could be dangerous if used improperly. The high pressure jet must not be pointed at persons, animals, active electrical equipment or the 2.2 kW high pressure washer itself.

- Do not use the 2.2 kW high pressure washer within range of other persons unless they are wearing protective clothing.
- Do not point the 2.2 kW high pressure washer at yourself or others to clean clothing or footwear.
- Before first start-up, familiarise yourself with the control elements and safety functions of the 2.2 kW high pressure washer and spray gun.
- When operating the 2.2 kW high pressure washer, wear suitable personal protective equipment (PPE) such as safety footwear, safety gloves, protective helmets with visor, ear protection etc.
- Do not spray any flammable liquids and do not use the 2.2 kW high pressure washer in explosive environments as there is a risk of explosion!
- Water that has flowed through the backflow preventer is considered unfit for drinking.

Residual risks**⚠ WARNING!****Risk of injury!**

Even if you use this 2.2 kW high pressure washer in compliance with applicable regulations, there are always residual risks. The following risks associated with the construction and design of this 2.2 kW high pressure washer may occur:

- Injury to health attributed to hand and arm vibrations if the 2.2 kW pressure washer is used over a prolonged period of time or if it is not guided and maintained properly.

- Eye injury from the high pressure jet or flying parts or particles of dirt. They can inflict severe eye injury if proper eye protection is not worn.
- Injury to the skin due to accidental contact with the high pressure jet or projectile parts and dirt particles if you do not wear suitable protective equipment, clothing and firm footwear.
- Injury to hearing due to noise exposure. Working without ear protection for prolonged periods may damage your hearing.

NOTICE!

Risk of damage!

Improper handling of the 2.2 kW high pressure washer may result in damage to the 2.2 kW high pressure washer.

- Do not use the 2.2 kW high pressure washer if a connection line or important parts of the 2.2 kW high pressure washer are damaged, e.g. safety equipment, high pressure hoses, spray gun.
- High pressure hoses, fittings and couplings are important for device safety. Only use high pressure hoses, fittings and couplings recommended by the manufacturer.
- Only use original spare parts from the manufacturer or approved by the manufacturer to guarantee the safety of the device.
- This 2.2 kW high pressure washer was developed to use the cleaners delivered or recommended by the manufacturer. Using other cleaners or chemicals can affect the safety of the 2.2 kW high pressure washer.

First use

Checking the 2.2 kW high pressure washer and product contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointy objects, you may quickly damage the 2.2 kW high pressure washer.

– Be very careful when opening.

1. Take the 2.2 kW high pressure washer **6** out of the packaging.
2. Check to make sure that the delivery is complete (see **fig. A and B**).
3. Check whether the 2.2 kW high pressure washer or the individual parts exhibit damage. If this is the case, do not use the 2.2 kW high pressure washer. Contact the manufacturer at the service address specified on the warranty card.

⚠ CAUTION!

Risk of injury

The 2.2 kW high pressure washer could be inadvertently activated and cause injury.

– Disconnect the 2.2 kW high pressure washer from the power supply before you continue.

Assembling the 2.2 kW high pressure washer

⚠ CAUTION!

Health hazard

The 2.2 kW high pressure washer must not be directly connected to the drinking water network because the return flow of water poses a risk to drinking water.

- In this case, use a water backflow preventer or a supply hose set approved in accordance with IEC 61770.

The following work steps are required to prepare the device for operation:

1. Fit the handle **1** on the 2.2 kW high pressure washer **6**. Secure it with the 2 enclosed cross-slotted screws **19** (see **fig. 1**).

Figure 1


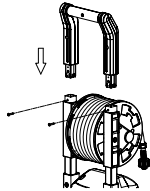


Figure 2

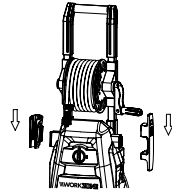

2. Attach the holder for the spray gun **11** and the cord holder **4** to the receptacles on the 2.2 kW high pressure washer up to the stop point (see **fig. 2**).
3. Remove the protective cap **18** from the threaded socket of the spray gun **15** and screw the high pressure hose **3** tightly onto the spray gun (see **fig. 3**).

Figure 3


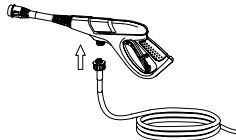


Figure 4

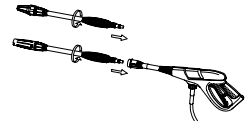

4. Fit the turbo lance **13** or the adjustable spray lance **14** in the connection for the spray gun and turn the spray lance clockwise by 90° to lock it in this position (see **fig. 4**).
5. Remove the protective cap **9** from the threaded socket **8** of the 2.2 kW pressure washer and screw the water inlet adapter **21** onto the threaded socket until hand tight (see **fig. 5**).

Figure 5


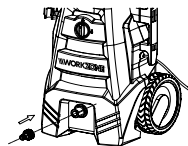


Figure 6

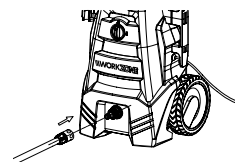

6. Connect the supply hose with a quick-lock coupling (not included in the product contents) with the water inlet adapter on the 2.2 kW high pressure washer (see **fig. 6**).

7. Connect the supply hose with the water supply and open the feed valve (see **fig. 7**). The water temperature may amount to no more than 40 °C.
8. Make sure that the ON/OFF switch **5** of the 2.2 kW high pressure washer is switched off (OFF position) (see **fig. 8**).

Figure 7


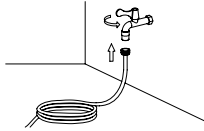


Figure 8

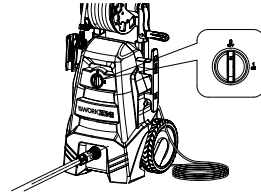

9. Insert the mains plug in a properly installed socket with earthing contact and alternating voltage in accordance with the nameplate of the 2.2 kW high pressure washer.

Operation

NOTICE!

Risk of damage!

Improper handling of the 2.2 kW high pressure washer may result in damage.

- Familiarise yourself with all control elements before start-up of the 2.2 kW high pressure washer. Before each use, make sure that the 2.2 kW high pressure washer is functional.
- Wear suitable clothing as well as ear and eye protection when working with the 2.2 kW high pressure washer.
- Check the 2.2 kW high pressure washer and accessories for visible damages.
- Check that all parts of the 2.2 kW high pressure washer are securely mounted.
- Check whether the water connection and high pressure lines are tight.

Starting and stopping

NOTICE!

Risk of damage!

Using the 2.2 kW high pressure washer without water could result in damage.

- Never operate the 2.2 kW high pressure washer without water as dry operation could damage the pump. Use a water filter if the supplied water is contaminated.

Starting

1. Open the valve for the water inlet (see **fig. 7**, page 16).
2. Unlock the yellow safety lock **17** of the spray gun **15** by pushing it down until it locks into place.
3. Depress the trigger **16** until a steady flow of water is dispensed (see **fig. 9**). Then let go of the trigger.
4. Set the ON/OFF switch **5** to ON to switch the 2.2 kW high pressure washer **6** on (see **fig. 10**).

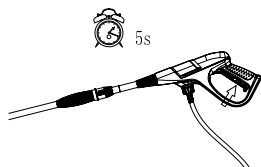


Figure 9

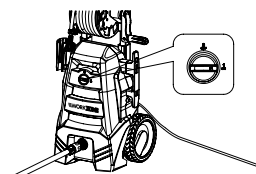


Figure 10

5. Depress the trigger again to start cleaning.

Stopping

1. Release the trigger **16**.
2. Set the ON/OFF switch **5** to OFF to switch the 2.2 kW high pressure washer **6** off (see **fig. 8**, page 16).
3. Close the valve for the water inlet.
4. Briefly push the trigger until the pressure in the 2.2 kW high pressure washer has been released.
5. Lock the trigger by folding the yellow safety lock **17** up until it locks into place. This prevents unwanted reactivation.

Instructions for operation

Working with the 2.2 kW high pressure washer

- The high pressure jet must not be pointed at organisms (persons, animals), live equipment or the 2.2 kW high pressure washer itself.
- Always wear personal protective equipment such as safety shoes, protective gloves, protective goggles, ear protection etc. when working with the 2.2 kW high pressure washer.
- Place the 2.2 kW high pressure washer on a stable, level surface. Only operate it in an upright position and never in a horizontal position.
- Make sure that there are no persons or animals in your work area.
- Before you begin any kind of cleaning, check the work area for objects that could pose a risk. Remove all objects that you could stumble over from the work area, e.g. toys or garden furniture. Make sure that all doors and windows are firmly closed.
- Always ensure that you have a stable stance, especially considering the possibility of kickback when you depress the trigger of the spray gun.
- Always switch the 2.2 kW high pressure washer off and depressurise the system before fitting or removing accessory parts, cleaning or maintaining the 2.2 kW high pressure washer and if you leave it unattended, even for a short period of time.
- After switching the 2.2 kW high pressure washer off, always engage the yellow safety lock for the trigger to prevent accidental triggering of the high pressure jet.
- The high pressure jet could damage surfaces. Maintain adequate distance to painted or other sensitive surfaces and if necessary, test it on an inconspicuous area.
- Be particularly careful when cleaning tyres. Car tyres and tyre valves could be damaged or pop if handled improperly. Discolouration of the tyres indicates the first signs of damage. Damaged vehicle tyres and tyre valves pose a risk to life. Keep the high pressure jet at a distance of at least 30 cm!
- Cleaning car motors and other objects contaminated by oil and lubricants is only permissible on areas where the waste water is diverted by an oil separator.
- Do not spray down any objects that contain substances that are hazardous to health (e.g. asbestos).
- Keep the high pressure jet away from the mains cord and the high pressure hose and make sure that they are not run over, crushed or otherwise exposed to stress.
- Only operate the 2.2 kW high pressure washer in well ventilated areas and do not cover it to prevent overheating.

- Before you start work, also observe the quiet hours in your community for working with machines that produce noise.

Working with the high pressure jet

- Hold the spray gun and the lance tightly with both hands.
- Be prepared for a kickback when you switch on the spray gun.
- Release the safety lock and depress the trigger on the spray gun.
- The high pressure pump starts to run as soon as you switch the spray gun on.
- The high pressure pump stops as soon as you release the trigger of the spray gun.

Using the adjustable spray lance

⚠ CAUTION!

Risk of injury!

The high pressure jet is very hard and can inflict injury.

- Start by working at a substantial distance and reduce it as needed.

The adjustable spray lance **14** is the universal tool for high pressure work. It enables you to use 2 types of water jet.

Pushing the nozzle head **23** lengthwise regulates the jet pressure:

- Pull the nozzle head forward to reduce the pressure (low pressure) and push the nozzle head back to increase the pressure (high pressure) (see **fig. 11**).


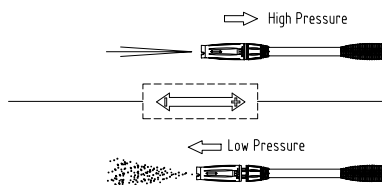


Figure 11

Turning the nozzle head by 180° changes from the dot jet to the flat jet:

- Turn the nozzle head counterclockwise to set a dot jet. The further you turn the nozzle head clockwise the wider the flat jet will become (see **fig. 12**).

Figure 12

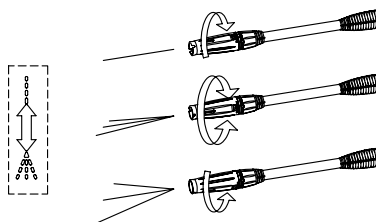

The dot jet is particularly suitable for cleaning very dirty, confined areas; the flat jet is ideal for cleaning surfaces.

Using the turbo lance

NOTICE!

Risk of damage!

When using the turbo lance, there is a very high risk of damaging sensitive surfaces.

- Be carefully, start working at an increased distance and reduce it if necessary.

The turbo lance produces a rotating high pressure jet that can also get rid of stubborn dirt.

1. Stop the 2.2 kW high pressure washer **6** and switch the ON/OFF switch **5** to OFF.
2. Briefly depress the trigger **16** for the spray gun **15** to release system pressure.
3. Instead of the spray lance **14** insert the turbo lance **13** (see **fig. 4**, page 15).

Using the rotating brush

The rotating brush is a tool for delicately cleaning surfaces. In the process, the high pressure jet is used to operate the brush; the water only strikes the surface to be cleaned at low pressure.

The moving brush achieves the cleaning effect and the removed dirt is washed away with the water.

1. Stop the 2.2 kW high pressure washer **6** and switch the ON/OFF switch **5** to OFF.
2. Briefly depress the trigger **16** for the spray gun **15** to release system pressure.
3. Instead of the spray lance **14** or turbo lance **13**, insert the rotating brush **12** (see **fig. 13**).

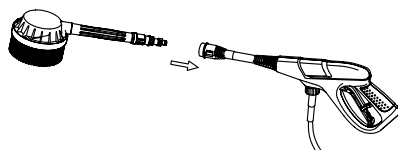


Figure 13

Automatic supply of cleaners

NOTICE!

Risk of damage!

Using other cleaning solutions or chemicals can affect the safety of the 2.2 kW high pressure washer.

- Only use cleaners supplied or recommended by the manufacturer.
- In the event of direct contact with your skin or mucous membranes and the cleaner, rinse the affected area with plenty of clean water and consult a physician if necessary.

This 2.2 kW high pressure washer is equipped with a device for the automatic supply of cleaners for the water jet. Follow the steps below to use the function:

1. Prepare the cleaner by thinning the cleaning solution **20** 1 part to 10.
Please note that the cleaner container has a capacity of approx. 1 l.
2. Lock the trigger **16** for the spray gun **15** by flipping the yellow safety lock **17** up until it locks in place (see **fig. 14**).

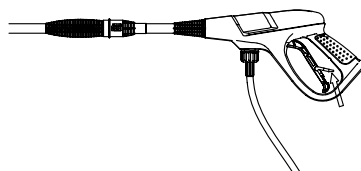


Figure 14

3. Take the cap off of the cleaner container **10** on the back of the 2.2 kW high pressure washer **6** and pull the hose out (see **fig. 15**).

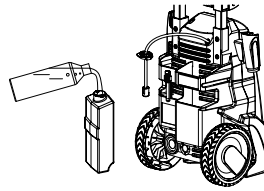


Figure 15

4. Take the cleaner container out of the holder and, if necessary, fill it with diluted cleaning solution **20**.
5. Put the cleaner container back in the holder, put the hose back in and screw the cap back on.
6. Mount the adjustable spray lance **14** on the spray gun **15**.
7. Set the nozzle head **23** to the position for low pressure by pulling it out and forward (see **fig. 11**, page 20).
8. Release the safety lock and depress the trigger of the spray gun to begin work.

Cleaning and maintenance

⚠ WARNING!

Risk of electric shock!

Performing cleaning and maintenance while the 2.2 kW high pressure washer is connected may result in an electrical shock.

- Each time before cleaning or maintenance, switch the 2.2 kW high pressure washer off and pull the mains plug out of the socket.
- Do not clean the 2.2 kW high pressure washer with a high pressure jet!

Cleaning

Clean the 2.2 kW high pressure washer **6** by wiping the 2.2 kW high pressure washer and the accessories with a damp cloth.

Dirt filter

The 2.2 kW high pressure washer is equipped with a dirt filter to protect the pump. If the dirt filter is not kept clean, the flow of water to the 2.2 kW high pressure washer will be restricted and the pump could be damaged.

Check the filter after each use and clean it if necessary. To do so, proceed as follows:

1. Screw the water inlet adapter **21** off and take the dirt filter (arrow) out (see **fig. 16**).

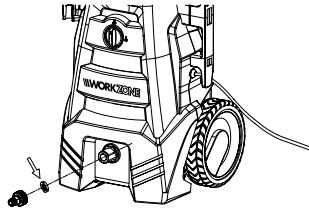


Figure 16

2. Rinse the dirt filter out until it is free of dirt and deposits.
3. Put the dirt filter and the water inlet adapter back in place.

High pressure nozzle

- Clean the high pressure nozzle using the enclosed nozzle pin **22** (see **fig. 17**).

 


Figure 17

Maintenance

The pump of the 2.2 kW high pressure washer itself requires no maintenance. No additional care is necessary.

Storage and transport

NOTICE!

Risk of damage!

There is always some leftover water that remains in the 2.2 kW high pressure washer and the pump that could result in damage.

- Do not store the 2.2 kW high pressure washer at temperatures under the freezing point as this may result in frost damage.
- If you take the 2.2 kW high pressure washer out of commission for a prolonged period of time, empty the cleaner container and let the water drain out of the hoses.

- Store the 2.2 kW high pressure washer upright in a dry, frost-free, well ventilated location that is protected against being accessed by children.

Storage of accessories

- Store the spray lance **14** and the rotating brush **12** in the accessory compartment next to the cleaner container **10** on the back of the 2.2 kW pressure washer **6**.
- Store the spray gun **15** in the holder for the spray gun **11** by locking it in place with the handle up.


Storage of the 2.2 kW high pressure washer

NOTICE!

Risk due to improper operation!


Winding it in the opposite direction may damage the high pressure hose and the 2.2 kW high pressure washer.

- Only turn the hand crank **2** of the hose reel clockwise to wind up the high pressure hose.
 1. To store the 2.2 kW high pressure washer **6**, screw the high pressure hose **3** off of the threaded socket for the spray gun **15** and wind the high pressure hose onto the hose reel.
 2. Secure the end of the hose with the hose clamp as shown in the figure.

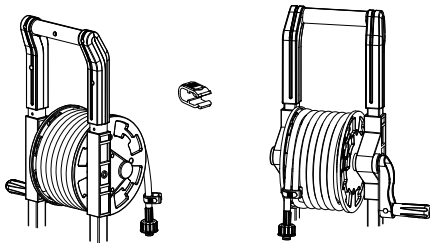

3. Wind the mains cord **7** around the cord holder **4**.

4. Secure the end of the cord with the cord clamp as shown in the figure.

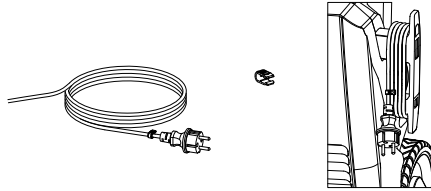

Transport

- If possible, use the original packaging for transport.

Troubleshooting

⚠ WARNING!

Risk of injury!

Tampering with the 2.2 kW high pressure washer could pose a risk to life due to an electric shock, damage to the 2.2 kW high pressure washer and void warranty claims:


- Do not tamper with the 2.2 kW high pressure washer on your own authority.

The following table provides assistance in the event of malfunctions. If the information provided here is not of success, contact our customer service team or an authorised service centre.

Fault	Cause	Solution
Device doesn't work	Power supply interrupted	– Check the power connection, mains cord and fuse; have repairs performed by an electrician if necessary
	2.2 kW high pressure washer switched off	– Switch the ON/OFF switch on
	Components defective e.g. switch, motor	– Consult the customer service team

Fault	Cause	Solution
2.2 kW high pressure washer is working, but keeps cutting out	Mains cord damaged Internal electrical connection separated ON/OFF switch defective	<ul style="list-style-type: none"> - Consult the customer service team
No pressure or only slight pressure is built up	Air in the system The air must be bled from the device	<ul style="list-style-type: none"> - Operate the 2.2 kW high pressure washer without the high pressure hose connected until the water is dispensed without bubbles. Then put the high pressure hose back on.
	No supply of water or insufficient supply of water	<ul style="list-style-type: none"> - Check/open the feed valve - Check the supply hose for leaks or blockage
	Dirt filter plugged	<ul style="list-style-type: none"> - Check and clean the filter
	Spray lance set to low pressure	<ul style="list-style-type: none"> - Check the setting of the spray lance
	2.2 kW high pressure washer draws in air	<ul style="list-style-type: none"> - Check the supply hose for leaks
Large fluctuations in pressure	High-pressure nozzle plugged	<ul style="list-style-type: none"> - Clean the high-pressure nozzle
	Insufficient water pressure	<ul style="list-style-type: none"> - Check the water pressure
	Supply hose is kinked	<ul style="list-style-type: none"> - Check the supply hose
2.2 kW high pressure washer has a leak	Hose connections loose	<ul style="list-style-type: none"> - Turn the water inlet adapter and screw connection of the high-pressure hose hand-tight
	Leak in the pump or internal connections	<ul style="list-style-type: none"> - Consult the customer service team

Technical data

Model:	Q1W-SP20-1900A
Article number:	93107
Power consumption:	2200 W
Appliance class:	II 
Operating pressure:	max. pressure: 15 MPa (150 bar)
Nominal pressure:	11 MPa (110 bar)
Input pressure/temperature max.:	1.0 MPa (10 bar)/40 °C
Power consumption:	9 A
Sound power level:	L_{WA} 98 dB (uncertainty K_{WA} : 4 dB)
Sound pressure level:	L_{WA} 81 dB (uncertainty K_{WA} : 4 dB)
Vibration emission value:	1.1 a_h m/s ² (uncertainty K: 1.5 m/s ²)
Operating flow:	450 l/h
Impact force of the water jet:	13 N
Length of power cord:	5 m
Cord specification:	H05VV-F 2×1.0
Hand spray gun with high pressure hose:	10 m
Integrated container for cleaner:	1 l
Degree of protection:	IPX5
Weight:	10.7 kg (without accessories). 12.6 kg net (including accessories)/14.0 kg gross.
Motor specification:	Single-phase alternating current motor, 230 V/50 Hz
Pump specification:	Aluminium with safety valve. 3-piston pump; piston made of hardened stainless steel. Wobbling disc made of metal.

The values for noise and vibration emissions were determined in accordance with EN 60335-2-79:2012.

Declaration of conformity

EU Declaration of Conformity

We,

MEROTEC GmbH
D-47877 Willich, Hanns-Martin-Schleyer Str. 18a, Germany

herewith declare that our product

High Pressure Water Cleaner
Model no. Q1W-SP20-1900 und Q1W-SP20-1900A

complies with the following directives:


Machinery Directive 2006/42/EC
EMC Directive 2004/108/EC
Noise Directive 2000/14/EC
RoHS 2011/65/EC

Applied harmonized standards:

EN 60335-1:2012
EN 60335-2-79:2012
EN 55014-1:2006 + A1:2009 + A2:2011
EN 55014-2:1997+A1:2001+A2:2008
EN 61000-3-2: 2006 + A1:2009 + A2:2009
EN 61000-3-3:2013
EN 62233:2008

Document representative:
Dirk Wohrab
MEROTEC GmbH

Datum: 10.12.2015
Authorised Signature:


Ronald Menken
General Manager
MEROTEC GmbH



Spare part list

No.	Part no.	Name
1.	1151C01	Water inlet adapter
2.	1119005	Holder for the spray gun
3.	1129010	Cord holder
4.	1130013	Cleaner container
5.	1142005	Nozzle pin
6.	B620008	Assembly consisting of self-tapping screw and washer ST3.5X9.5
7.	1151C11	Handle
8.	1119202	Hose line
9.	1132802	Rotating brush
10.	1106B21	Turbo lance
11.	1106B20	Adjustable spray lance
12.	1106B12	Spray gun

Disposal

Disposing of the packaging



Dispose of the packaging separated into single type materials. Dispose of cardboard and carton as waste paper and foils via the recyclable material collection service.

Disposing of the 2.2 kW high pressure washer

(Applicable in the European Union and other European states with systems for the separate collection of waste materials)



Old devices must not be disposed of with household waste!

If the 2.2 kW high pressure washer can no longer be used, every user is required by law **to dispose of old devices separately from their household waste**, e.g. at a collection point in his community/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical devices are marked with the above symbol.

WORKZONE® WARRANTY CARD**2.2 KW HIGH PRESSURE WASHER**

Your details:

Name _____

Address _____


☎ _____ E-mail _____

Date of purchase* _____

* We recommend you keep the receipt with this warranty card.

Location of purchase _____

Description of malfunction:

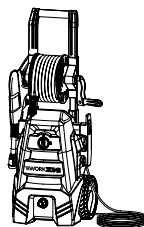

If after contacting the manufacturer you are requested to return the faulty product please return the completed warranty card together with it.

Unit A&B
Escrick Business Park
Escrick
York
YO19 6FD
UNITED KINGDOM
support@coreservice.co.uk

AFTER SALES SUPPORT

☎ GB 01904727501
IRE 019022605

🌐 www.coreservice.co.uk

MODEL: Q1W-SP20-1900A

PRODUCT CODE: 93107

03/2016

Call charges from your regular landline operator.

Operating hours:
08:00 am to 06:00 pm

3

YEARS
WARRANTY



Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits:

Warranty period: **3 years** from date of purchase.

Costs: Free repair/exchange.
No transport costs.

ADVICE:	Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.
----------------	--

In order to make a claim under the warranty, please send us:

- the faulty item together with the original purchase receipt and the completed warranty card.
- the product with all components included in the packaging.

The warranty does not cover damage caused by:

- **Accident** or **unanticipated events** (e.g. lightning, water, fire).
- **Improper use** or **transport**.
- **Disregard of the safety** and **maintenance instructions**.
- Other **improper treatment** or **modification**.

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.



Spend a little Live a lot

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
Visit us at www.aldi.com

AFTER SALES SUPPORT



GB 01904727501
IRE 019022605



www.coreservice.co.uk

MODEL: Q1W-SP20-1900A

PRODUCT CODE: 93107

03 / 2016

3
YEARS
WARRANTY