



User Manual



CORDLESS GARDEN SAW GDGS12G



Original instructions



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:
ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
Visit us at www.aldi.com

AFTER SALES SUPPORT 97419

GB 01904727501 IE 019022605

support@coreservice.co.uk

 
MODEL: GDGS12G 04/2019

3
YEAR
WARRANTY


Contents

- Overview3
- Use.....4
- Package contents/device parts.....6
- General information.....7
 - Reading and storing the user manual7
 - Explanation of symbols7
- Safety9
 - Proper use.....9
 - Residual risks.....9
 - General safety notes for power tools.....10
 - Safety instructions for the saw14
 - Safety notes for rechargeable batteries and chargers15
- First use.....17
 - Checking the saw and package contents.....17
 - Charging the battery.....17
 - Checking the battery charge level.....18
- Operation.....18
 - Inserting and removing the retaining claw19
 - Inserting the saw blade.....19
- Operation.....19
 - Switching the saw on20
 - Working with the saw20
 - Switching the saw off21
- Cleaning and maintenance.....21
 - Cleaning the saw22
 - Maintaining the saw22
- Repairs22
- Storage23
- Transport23
- Troubleshooting.....24
- Technical data25
- Noise/vibration information26
- Disposal.....28
 - Disposing of the packaging28
 - Disposing of the saw28
- Declaration of conformity.....29


Dok./Rev.-Nr. 196740_20190104

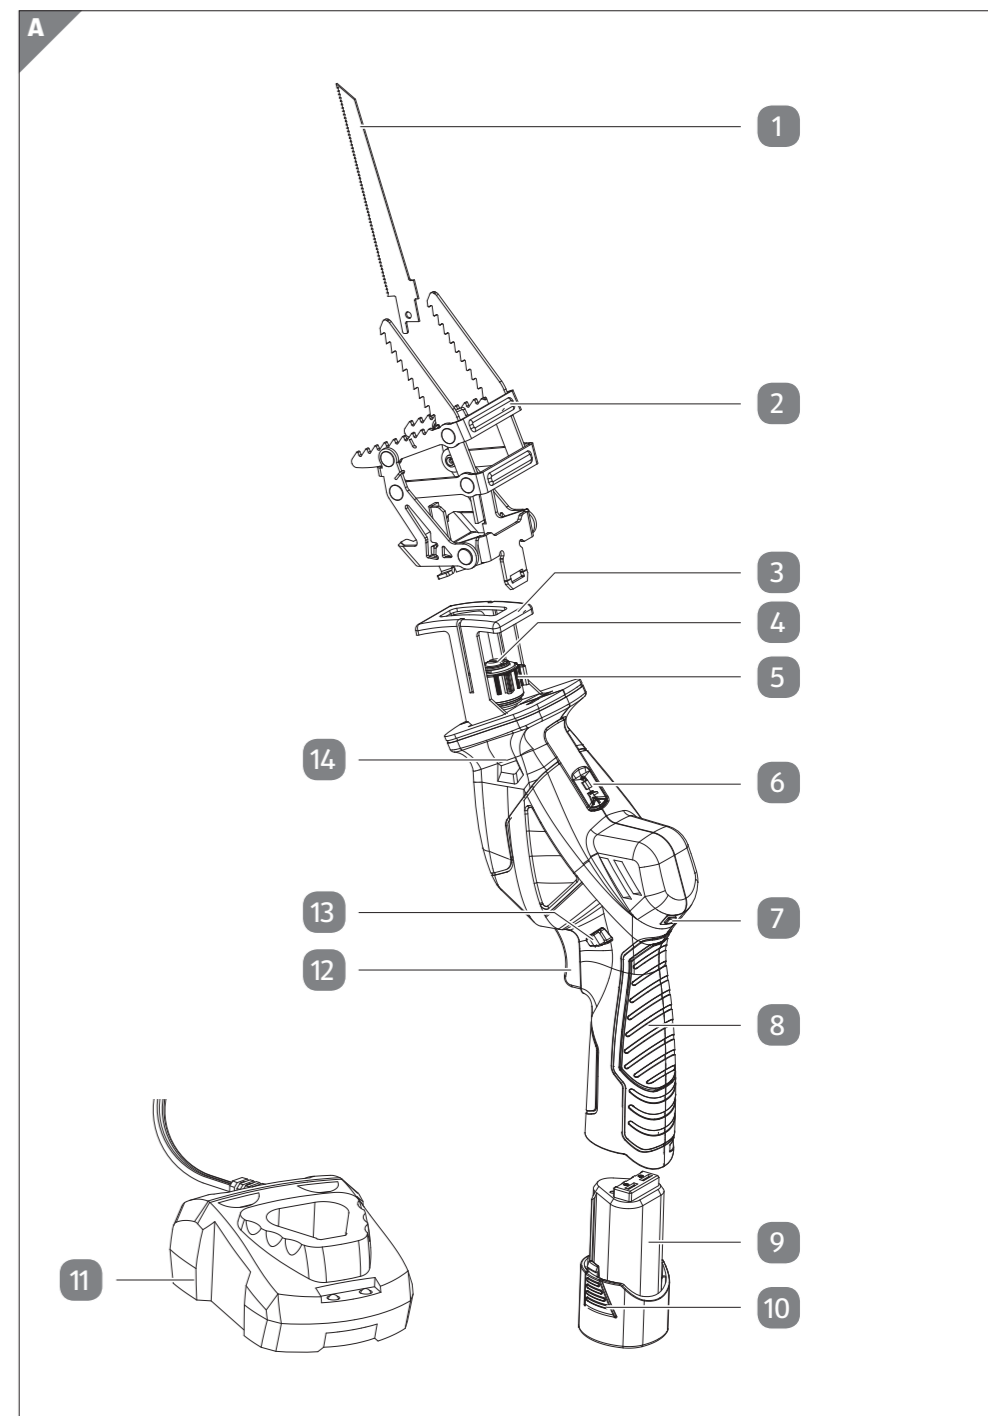

4

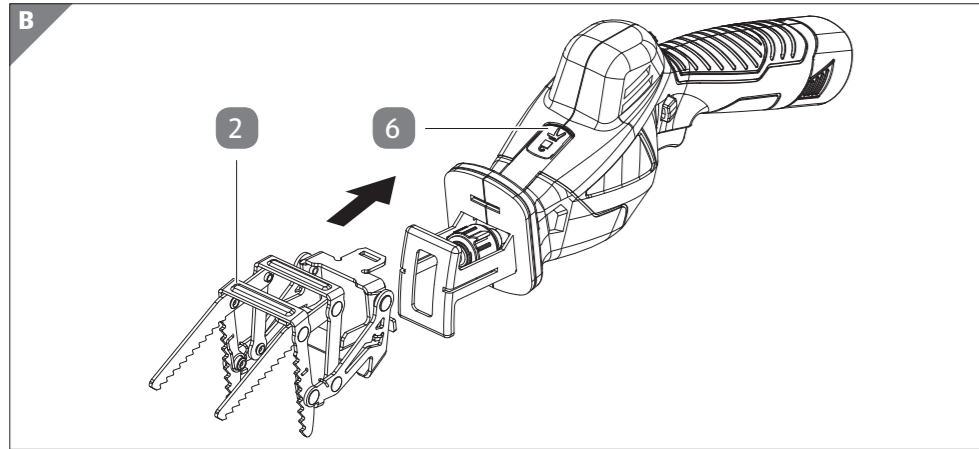 

5

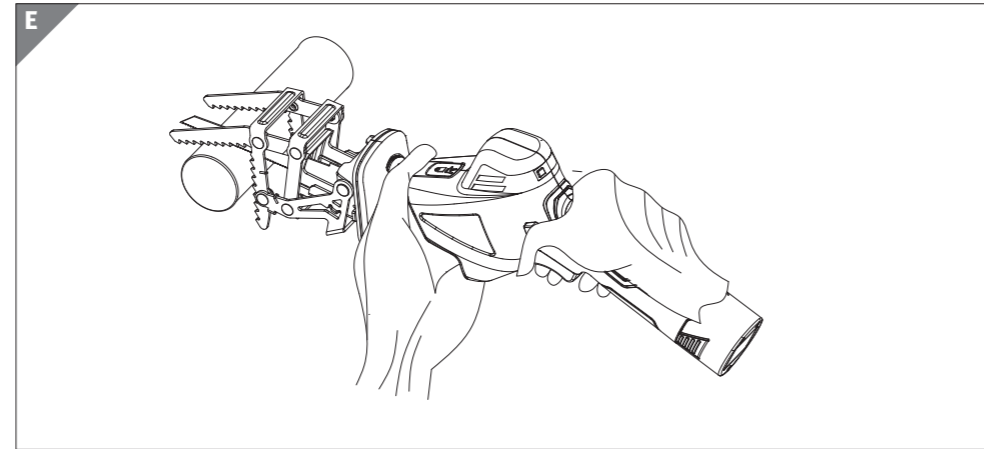 

6

Package contents/device parts

- 1 Saw blade
- 2 Retaining claw
- 3 Saw shoe
- 4 Saw blade holder
- 5 Locking mechanism for the saw blade holder
- 6 Lock button for retaining claw
- 7 Battery status button (with LED indicator)
- 8 Handle
- 9 Rechargeable battery
- 10 Rechargeable battery unlocking button
- 11 Charger
- 12 Power switch
- 13 Unlocking button
- 14 Handle surface
- 15 Transportation case (not shown)

