



# User Manual

Spend a little Live a lot



ORIGINAL INSTRUCTIONS

## 1200W Lawnmower


GLM32F



# Contents

<b>Product images and parts list .....</b>	<b>3</b>
<b>General information.....</b>	<b>7</b>
Reading and storing the instruction manual.....	7
Explanation of symbols.....	7
<b>Safety .....</b>	<b>11</b>
Proper use.....	11
Safety notes .....	12
<b>Checking the lawnmower and product contents .....</b>	<b>16</b>
<b>Assembly .....</b>	<b>17</b>
Mounting the lower handle.....	17
Mounting the upper handle .....	17
Mounting the grass collector .....	17
Connecting to the power supply.....	18
<b>Operation .....</b>	<b>19</b>
Cutting height adjustment .....	19
Grass collector.....	19
Switching on/off .....	20
Mowing .....	21
<b>Maintenance .....</b>	<b>23</b>
<b>Cleaning .....</b>	<b>28</b>
<b>Troubleshooting.....</b>	<b>29</b>
<b>Storage .....</b>	<b>31</b>
<b>Disposal.....</b>	<b>32</b>
<b>Technical data.....</b>	<b>33</b>
<b>EC Declaration of Conformity.....</b>	<b>35</b>
<b>Warranty</b>	
Warranty Card	
Warranty Conditions	

 A

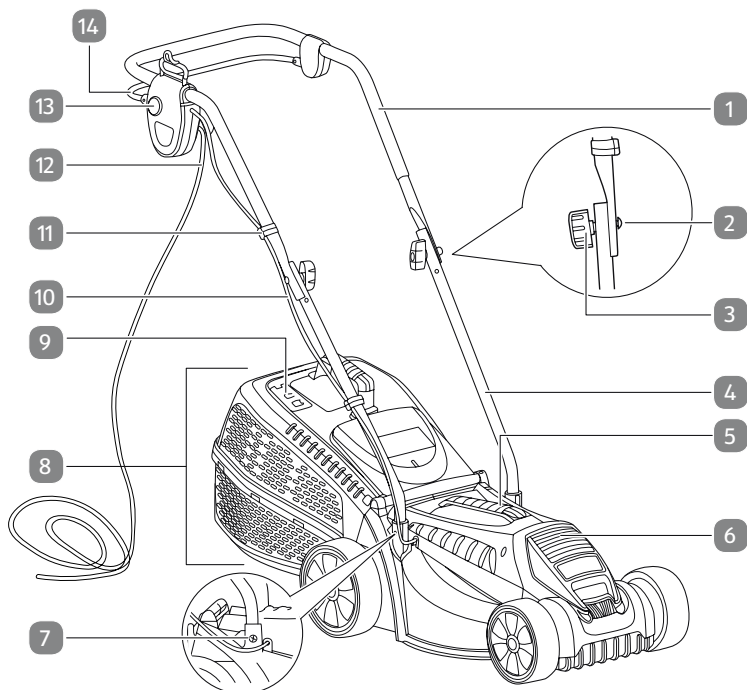

1 Upper handle

2 Knob with bolt x 2

3 Wing nut x 2

4 Lower handle x 2

5 Transportation handle

6 Motor housing

7 Screw x 2

8 Grass box

9 Grass full indicator

 
 
 
 
 
 
10 Cord

11 Cord clip x 2



12 10m cable

13 Lock-off button


14 Switch bar

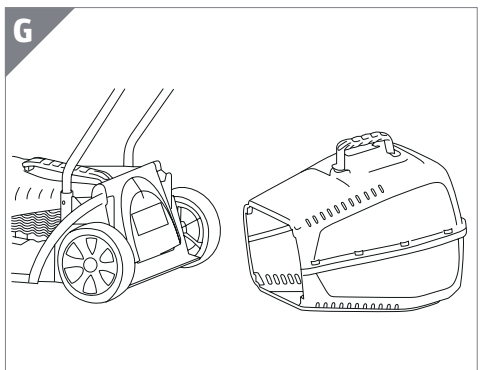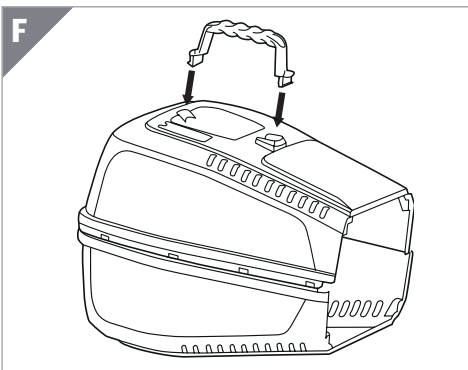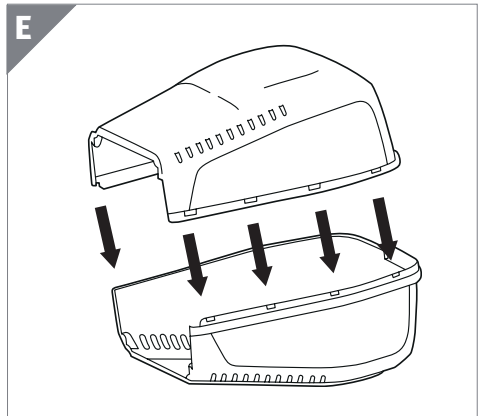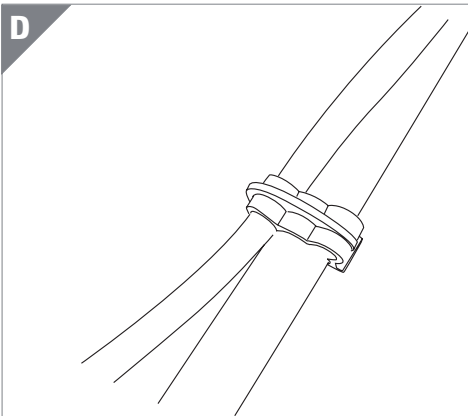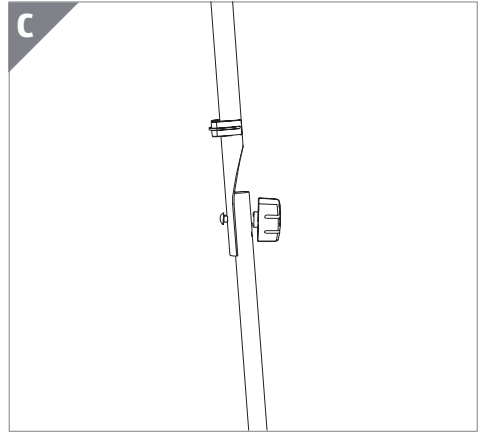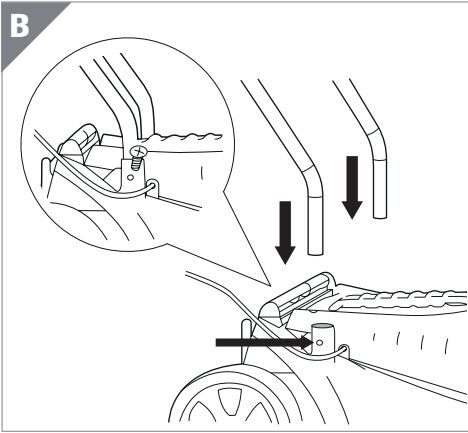


H

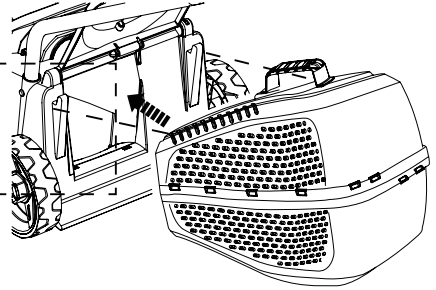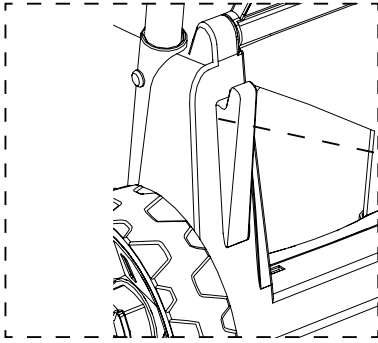  


I

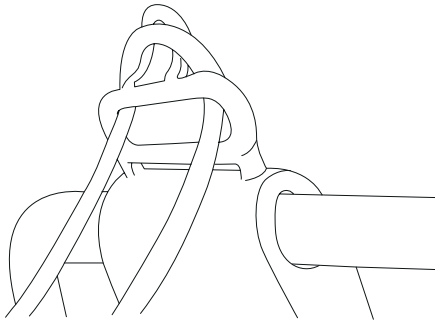 


J






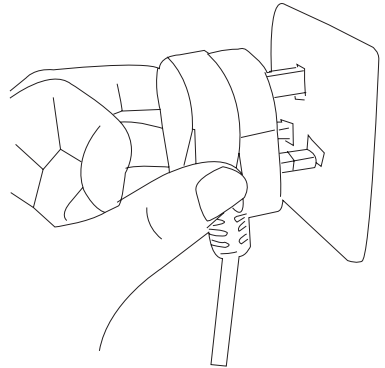 


K

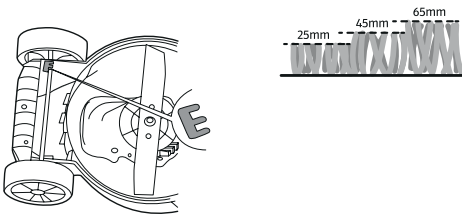 

L

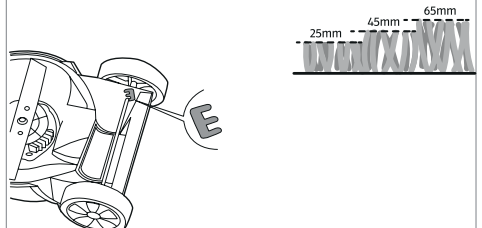 

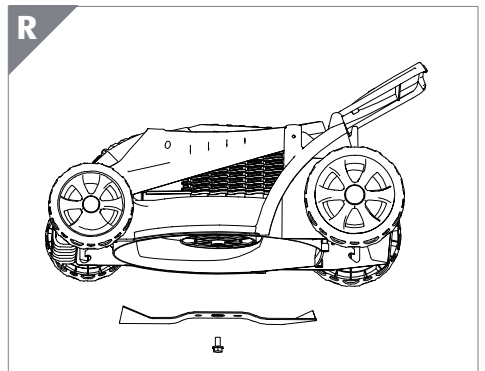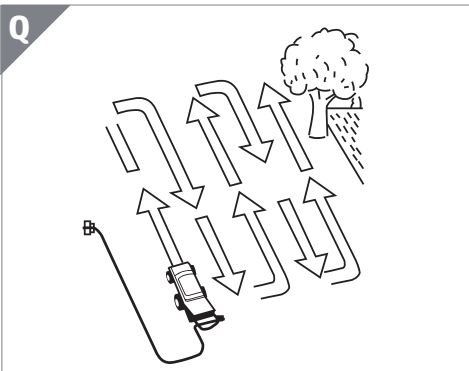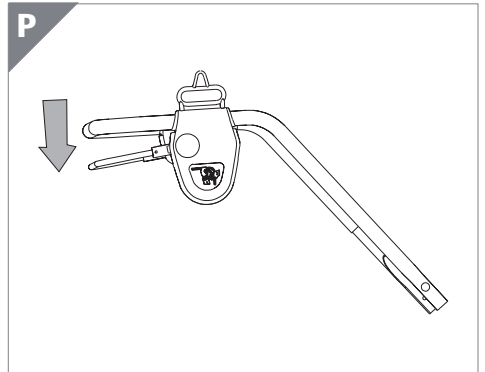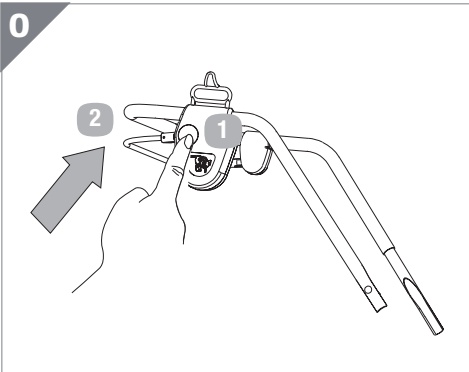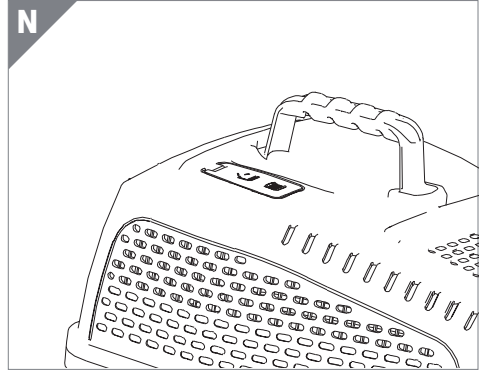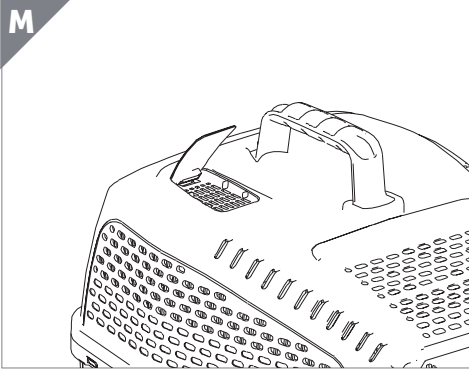      

## Reading and storing the instruction manual



This instruction manual accompanies this lawnmower. It contains important information concerning assembly, start-up and handling. Before using the lawnmower, read the instruction manual carefully. This particularly applies to the safety notes. Failure to heed this instruction manual may result in severe injury or damage to the lawnmower. The instruction manual is based on the standards and rules in force in the European Union. Store the instruction manual for future use. If you pass the lawnmower on to third parties, please be absolutely sure to include this instruction manual.

You can request an electronic version of these instructions from our customer service centre.

## Explanation of symbols

The following symbols and signal words are used in this instruction manual, on the lawnmower or on the packaging.



Read the user manual before operating the machine.



Warning! Danger!





Wear correct Personal Protective Equipment (PPE) when operating this machine such as eye protection, ear protection and respiratory equipment where necessary.



**IMPORTANT!** Wear gloves to protect your hands.



Wear safety boots to protect your feet.



Guaranteed sound power level value in 96dB.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was carried out.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



Do not expose the product to rain or wet conditions.

## AFTER SALES SUPPORT

8



IRE 0124 751 50  
GB 01904 727506



[www.coreservice.co.uk](http://www.coreservice.co.uk)





## Double insulation



Objects thrown by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children should be kept away from the area where the product is being operated.



Beware of sharp blades. Blades continue to rotate after the motor is switched off.  
Remove the plug from the mains before maintenance or if the cord is damaged.



**STOP**

Cutting device continues to rotate after the product is switched off. Wait until all components have completely stopped before working on the product.



Switch the product off and disconnect it from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.



**WARNING!**

This appliance should be connected to your mains supply using an RCD (Residual Current Device). The operating current of this device must be less than 30mA. Contact an electrician if you are unsure of how to proceed.

For safety reasons, this lawnmower is not to be used by children, young people under the age of 16 or any other people who are not acquainted with these operating instructions.

**AFTER SALES SUPPORT**

10



IRE 0124 751 50  
GB 01904 727506



[www.coreservice.co.uk](http://www.coreservice.co.uk)

## Safety

### Proper use

1. Operate the product only in daylight or in good artificial light.
2. Avoid operating the product in wet grass.
3. Always be sure of your footing on slopes.
4. Walk, never run.
5. Do not use this appliance in wet conditions.
6. Mow across the face of slopes, never up and down.
7. Exercise extreme caution when changing direction on slopes.
8. Do not mow excessively steep slopes.
9. Use extreme caution when reversing or pulling the product towards you.
10. Stop the blades if the product has to be tilted for transportation, when crossing surfaces other than grass and when transporting the product to and from the area to be mowed.
11. Switch on the motor carefully according to the instructions and with your feet well away from the blades.
12. Do not tilt the product when switching on the motor except if the product has to be tilted for starting. In this case do not tilt it more than absolutely necessary and lift only the part which is furthest away from the operator.
13. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
14. Do not transport the product while the mains power is connected.



15. Stop the product and remove the plug from the socket. Make sure that all moving parts have come to a complete stop:
  - Whenever you leave the product unattended.
  - Before clearing blockages or unclogging the chute.
  - Before checking, cleaning or working on the product.
  - After striking a foreign object. Inspect the product for damages and replace or repair any damaged parts before restarting the product.
16. If the product starts to vibrate abnormally:
  - Inspect for damage.
  - Replace or repair any damaged parts.
  - Check and tighten any loose parts.

## Safety notes



### **WARNING!**

### **DO NOT TOUCH ROTATING BLADES.**

- This machine can cause serious injury. Read the instruction manual carefully for the correct handling, preparation, maintenance, starting and stopping of the appliance. Be familiar with the controls and the proper use of the appliance. Read and understand the operator's manual and observe the warnings and instruction labels affixed to the appliance.
- Never allow children or people unfamiliar with these instructions use the appliance. Never operate this appliance

---

## AFTER SALES SUPPORT



when tired or under the influence of alcohol, medication or drugs.

- Use appropriate tools. This product is intended for private use only, not for any commercial applications. It may not be used for any purposes other than those described in this manual.

## Work Area Safety

- Keep work areas clean. Cluttered areas can cause accidents.
- Keep all bystanders, children and pets at least 5 metres away. The operator or user is responsible for any accidents or hazards occurring to other people or their property.

## Personal Safety

- Wear the correct personal protective equipment (PPE). Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes or gloves used for appropriate conditions will reduce the risk of personal injury.
- Dress appropriately. Do not wear loose clothing or jewellery, as these can be caught in moving parts. Preferably wear nonslip footwear when working outdoors. Long hair should be tied back out of the way.
- Stay alert and use caution and common sense when operating the tool. A moment of lapsed concentration while operating the tool may result in serious personal injury.



- This appliance can be used by persons aged 16 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the machine.
- Read the instructions carefully. Be familiar with the controls and the correct use of the product.
- Never allow children or people unfamiliar with these instructions use the product. Local regulations can restrict the age of the operator.
- Never operate the product while children, other people or pets are nearby.
- Keep in mind that the operator or user is responsible for any accidents or hazards occurring to other people or their property.

## Operational Safety

- Be certain that all parts of the machine are fully tightened before operating the machine. Check periodically for tightness during use to avoid serious injury.
- While operating the product always wear substantial footwear and long trousers. Do not operate the product when barefoot or wearing open sandals. Avoid wearing clothing that is loose fitting or that has hanging cords or ties.

---

## AFTER SALES SUPPORT



- Thoroughly inspect the area where the product is to be used and remove all objects which could be thrown by the product.
- Before use, always visually inspect to see that the blade, blade bolt and the blade assembly are not worn or damaged.
- Replace worn or damaged components in sets to preserve balance. Replace damaged or unreadable labels.
- Before use, check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the mains power immediately. **DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE MAINS POWER.**
- Do not use the product if the cord is damaged or worn. If the cord requires replacement this should only be carried out by the service agent or a similarly qualified person.
- Keep all nuts, bolts and screws tight to be sure the product is in a safe working condition.
- Check the grass collector frequently for wear or deterioration.
- Be careful during adjustment of the product to prevent entrapment of the fingers between moving blades and fixed parts of the product.
- When servicing the blades be aware that, even though the power source is switched off, the blades can still move.
- Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.



## Checking the lawnmower and product contents



### **WARNING!** **RISK OF DAMAGE!**

If you are not cautious when opening the packaging with a sharp knife or other pointed objects, you may easily damage the lawnmower. Therefore, be very careful when opening.

1. Take the lawnmower out of the packaging and check whether the appliance or the individual parts show any signs of damage. If any parts are missing or damaged, do not use the lawnmower. Contact the manufacturer at the service address specified on the warranty card.
2. Check to make sure that the delivery is complete **(see Fig A)**.

## AFTER SALES SUPPORT





## Assembly

### Mounting the lower handle

1. Insert the lower handle into the supports. Ensure the mounting holes in the lower handle are aligned with the ones in the supports **(See Fig B)**.
2. Secure the lower handle with the screws and tighten them with a suitable crosshead screwdriver.

### Mounting the upper handle bar

1. Remove the bolts from the knobs and keep them handy.
2. Attach the upper handle to the lower handle and align the holes in the upper handle with the ones in the lower handle **(See Fig C)**.
3. Secure the upper handle with the knobs and bolts to the lower handle and tighten the knobs clockwise.
4. Fix the power cord using the cord clips to the handle **(See Fig D)**.

### Mounting the grass collector

1. Fit the upper part of the grass collector onto the lower part by fixing all the outer clips correctly **(See Fig E)**.



2. Fit the handle onto the top of the grass collector, where there is the grass full indicator, so that it clicks into place **(See Fig F)**.
3. Hang the grass collector on to the hooks on the back of the machine **(See Fig G&H)**.

## Connecting to the power supply



**WARNING!** For your safety, the extension cord must be suitable for outdoor use with sockets protected against water splashing!

Only use an extension cord not lighter than:

- if rubber insulated, ordinary tough rubber sheathed flexible cord (code designation 60227 IEC 530);
- if polyvinyl chloride insulated, ordinary polyvinyl chloride sheathed flexible cord (code designation 60227 IEC 53).

Ensure the extension cord is of the proper size and type for your product( $\geq 1.5\text{mm}^2$ )!

Always use a residual current supply(RCD) protected supply!

1. Double the extension cord, about a foot from the end. Hook the loop over the cord strain. **(See Fig I)**
2. Connect the plug to the main socket. **(See Fig J)**

---

## AFTER SALES SUPPORT



## Operation

### Cutting height adjustment

Adjust the cutting height according to the needs of your lawn. The cutting height depends on the kind of lawn and its actual height. When mowing high grass, start with the maximum cutting height and make a second cut with a lower cutting height.

1. Release the start lever and disconnect the product from the power supply.
2. Pull the rear and front shaft out and place them into the correct slot for the desired cutting height. **(See Fig K&L)**
3. Make sure that rear and front shaft are at the same level. **(See Fig K&L)**

**NOTE!** Always ensure the lever clicks back into the slot.

### Grass collector

Always attach the grass collector when using the product for grass collection. Always carry the grass collector by its handle. Empty the grass collector frequently during use. Do not wait until it is completely full. We recommend emptying it when it is half full.

If the collection box is empty or not filled with grass, the grass full



indicator will be open. **(See Fig M)**

If the collection box is full of grass the grass full indicator will close. **(See Fig N)**

**NOTE!** A full grass collector will reduce the performance of this product.

1. Lift the deflector guard and lift the grass collector off the hooks.
2. Remove the grass clippings from the discharge chute into the grass collector. Use a proper tool such as a brush.
3. Remove the grass collector.
4. Empty the grass clippings onto a compost heap.
5. Re-fit the grass collector on to the hooks.

## Switching on/off

1. Ensure the start lever is released.
2. Press the lock-off button(1). **(See Fig O)**
3. Pull the switch bar (2) towards the handle and hold in position. **(See Fig O)**
4. Release the lock-off button once the product is running.
5. Release the switch bar to switch the product off. **(See Fig P)**

**NOTE!** The product can only be started by pressing the lock-off button first, followed by squeezing the start lever . Reverse operation will not start the product.

**NOTE!** The cutting device will continue to rotate for a short period after the product has been switched off.

## Mowing

1. Never cut off more than one-third of the total length of the grass for a healthy lawn. In the autumn, lawns should only be cut as long as there is growth.
2. Slowly push the product forward.
3. Mow in slightly overlapping rows. The most effective pattern for mowing lawns is straight lines along one of the sides. This will keep the rows even and ensures that all the lawn is cut without missing any spots. **(SEE FIG Q)**
4. Circle around flower beds. When reaching a flower bed in the middle of the lawn, cut a width or two around the circumference of the bed.
5. Pay special attention when changing direction.



### WARNING!

If the product strikes a foreign object, stop the motor immediately. Switch the product off, disconnect it from the power supply and let it cool down. Inspect the



product thoroughly for damage. Have any damage repaired by a suitably qualified person before restarting.



Excessive vibration of the product during operation is an indication of damage. Stop the motor, unplug and check for damage.

---

## AFTER SALES SUPPORT

22



 0124 751 50  
 01904 727506



[www.coreservice.co.uk](http://www.coreservice.co.uk)

## Maintenance

1. Always switch the product off, disconnect it from the power supply and let the product cool down before performing any inspection, maintenance or cleaning work!
2. Keep the product clean. Remove debris from it after each use and before storage.
3. Regular and thorough cleaning will help ensure safe use and prolong the life of the product.
4. Inspect the product before each use for worn or damaged parts. Do not operate if you find broken or worn parts.



### **WARNING!**

Only perform repairs and maintenance work according to these instructions. All further works must be performed by a qualified specialist.

## Maintenance after each use

1. Clean the product with a dry cloth. Use a brush for areas that are hard to reach.
2. Clean the air vents after every use with a cloth and brush.
3. Remove stubborn dust with high pressure air (max. 3 bar).
4. Check for any damage or wear. Repair damage in accordance



with this instruction manual or take the lawnmower to an authorised service centre before the next use.

**NOTE!** Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they may cause damage to the cosmetic surfaces.

### Spare parts/Replacement parts

The following parts of this product may be replaced by the consumer. Spare parts are available at an authorised dealer or through our customer service centre.

Description Model no. or Specification

Wing nuts knobs LM1232-19

Grass collector LM1232-13

Cutting device (blade) LM1232-5

### Underbody and cutting device

1. Keep the underbody and cutting device clean and free of debris.
2. Check all nuts and bolts periodically to ensure they are tight. After prolonged use, especially in sandy soil conditions, the cutting device will become worn and lose some of its original shape. The cutting efficiency will be reduced and the cutting

## AFTER SALES SUPPORT





device should be replaced.

3. Keep the cutting device sharp to ensure the best cutting performance. Replace a worn or damaged cutting device with a new one of the same type.

## Replacing the blades

Always unplug the lawnmower before removing or refitting the blades.

1. Loosen the bolt, turning it anticlockwise using a suitable wrench and remove it together with the cutting device (**See Fig R**).
2. Replace the cutting device with a new one of the same type.
3. Reattach the cutting device onto the spindle, pay attention to correct alignment. Tighten the bolt clockwise with 16 Nm min -- 20 Nm max. to ensure the safe operation of your product.
4. Replace the cutting device after 50 hours mowing or 2 years whichever comes first, regardless of condition. If the cutting device is cracked or damaged, immediately replace it with a new one.
5. Lubricate the cutting device after each use to prolong the lifespan of the cutting device and product. Apply light machine oil along the edge of the cutting device.



## Repair

This product does not contain any parts that can be repaired by the consumer other than those covered in the Maintenance section. Contact an authorised service centre or a similarly qualified person to have it checked and repaired.

## Power cord

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



## Transportation

1. Switch the product off and disconnect from the power supply before transporting.
2. Adjust the cutting height to the highest position as described above.
3. Attach transportation guards, if applicable.
4. Always transport the product by its handle. When lifting the product use the transportation handle as an aid.
5. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
6. Secure the product to prevent it from slipping or falling over.



## Cleaning

Before cleaning, inspecting or repairing your unit, make sure that the motor has stopped and has had time to cool. Disconnect the plug to prevent accidental starting.

**Note!** To ensure the best performance of your lawnmower, it is important to keep it clean. Always clean your lawnmower immediately after use.

Do not allow grass cuttings and other debris to become dry and hard on any of the mower surfaces. This will directly affect the cutting performance. Make sure that the underside of the lawnmower deck is clean and clear. Never clean the lawnmower with a water jet or high pressure cleaner. The motor must remain dry. Do not use aggressive cleaning agents including petroleum.

The lawnmower should be thoroughly cleaned after each use, especially the underside. To do so, tip the lawnmower onto its left side. Dirt and grass is easiest to remove immediately after you have finished mowing the grass.



## Troubleshooting

Suspected malfunctions are often due to causes that the user can fix themselves.

Therefore check the product using this section. In most cases the problem can be solved quickly.



### **WARNING!**

Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!



Fault	Possible cause	Troubleshooting
Product does not start	Not connected to power supply	Connect to power supply
	Power cord or plug is defective	Contact customer service centre.
	Other electrical defect	Contact customer service centre.
	Lock-off button not pressed	Press the lock-off button first, then the start lever
	Blown fuse	Replace with 13 AMP fuse approved to BS1362 .
Product does not reach full power	Extension cord not suitable for operation with this product	Use a suitable extension cord
	Power source (e.g. generator) has too low a voltage	Connect to another power source
	Air vents are blocked	Clean the air vents
Unsatisfactory result	Cutting device is worn	Replace with a new one
	Cutting material exceeds capacity	Only cut materials according to the capacity of the product
	Cutting height is incorrect	Adjust the cutting height

## AFTER SALES SUPPORT

## Storage

1. Clean the product as described above.
2. Store the product and its accessories in a dry, frost-free place.
3. Store the product in a place that is inaccessible to children.  
The ideal storage temperature is between 10°C and 30°C.
4. We recommend using the original packaging for storage or covering the product with a suitable cloth or enclosure to protect it against dust.
5. Fold the upper handle and fix it in position as described above.



# Disposal

## Disposing of the packaging



Recycle packaging in line with local recycling schemes.

## Disposing of old devices



**Old devices must not be disposed of with household waste!**

— If the lawnmower can no longer be used, every user is required by law to dispose of old devices separately from their household waste, e.g. at a collection point in the community/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment.



## Technical Data

Model	GLM32F
Input voltage rating	230-240V~, 50Hz
Input power	1200 W
No load speed	3500/min
Max. cutting length	320mm
Cutting height	25/45/65mm, 3 adjustments
Grass catcher volume	30L
Safety class	Class II
Weight	10kg
Protection degree	IPX4

### Sound values

Sound pressure level  $L_{pA}$ : 81.2dB(A) K=3 dB(A)

Sound power level  $L_{WA}$ : 94.3dB(A) K=0.52 dB(A)

Guaranteed sound power level  $L_{WA}$ : 96dB(A)

### Vibration values

Hand arm vibration ah: 2.33 m/s<sup>2</sup>

Uncertainty K: 1.5m/s<sup>2</sup>



The sound values have been determined according to noise test code given in EN 60335-2-77, using the basic standards EN ISO 11094 and EN ISO 3744.

The sound intensity level for the operator may exceed 80 dB(A) and ear protection measures are necessary.

The declared vibration value has been measured in accordance with a standard test method (according to EN 60335-2-77) and may be used for comparing one product with another. The declared vibration value may also be used in a preliminary assessment of exposure.

**WARNING!** Depending on the actual use of the product the vibration values can differ from the declared total! Adopt proper measures to protect yourself against vibration exposures. Take the whole work process including times the product is running under no load or switched off into consideration.

Proper measures include among others regular maintenance and care of the product and application tools, keeping hands warm, periodical breaks and proper planning of work processes.

---

## AFTER SALES SUPPORT

34



IRE 0124 751 50  
GB 01904 727506



[www.coreservice.co.uk](http://www.coreservice.co.uk)

# SUMEC

## Declaration of CE Conformity

We  
 SUMEC Hardware & Tools Co., Ltd.  
 1 Xinghuo RD., Nanjing, China  
 And our branch office  
 SUMEC UK Co., Ltd.  
 Unit A&B, Escrick Business Park  
 Escrick, York YO 19 6FD

Declare that the product  
 Electric Lawnmower  
 Model No: GLM32F  
 Manufacture Model No.: GLM32F  
 Function: Cutting grass  
 Serial number: 00001---20000

Fulfils all the relevant provisions of the following EU Directives and standards:

EMC Directive: 2014/30/EU  
 Machinery Directive: 2006/42/EC  
 Noise Directive: 2000/14/EC amended by 2005/88/EC  
 RoHS Directive: 2011/65/EU  
 WEEE Directive: 2012/19/EU

Standards conform to:  
 EN 55014-1:2006+A1:2009+A2:2011 EN 55014-2:2015  
 EN 61000-3-2:2014 EN 61000-3-3:2013  
 EN 60335-2-77:2010 EN 60335-1:2012+A11:2014 EN 62233:2008

We additionally confirm the following in accordance with the 2000/14/EC  
 emissions guideline:

Conformity Assessment Procedure as Per Annex VI,  
 Measured sound pressure level  $L_{pA}$ : 81.2dB (A),  $k=3$  dB (A)  
 Measured sound power level  $L_{wA}$ : 94.3 dB (A)  
 Guaranteed sound power level  $L_{wA}$ : 96 dB (A)

Authorized Signatory

Date: 10-1-2018 \_\_\_\_\_

Signature: 

Name: Liu Kai

General Manager

SUMEC Hardware & Tools Co., Ltd.





# WARRANTY CARD

GB IRE

## 1200W Lawnmower GLM32F

Your details:

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

 
 \_\_\_\_\_ E-Mail \_\_\_\_\_

Date of purchase \* \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card.

Location of purchase \_\_\_\_\_

Description of malfunction :

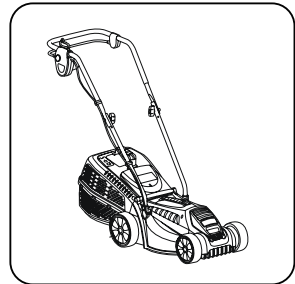




Return your completed warranty card together with the faulty product to:

Unit A&B  
Escrick Business Park  
Escrick  
York  
YO19 6FD

Email: [support@coreservice.co.uk](mailto:support@coreservice.co.uk)  
Tel: 01904 727506

### AFTER SALES SUPPORT-7 DAYS A WEEK

  0124 751 50  
  01904 727506

 [www.coreservice.co.uk](http://www.coreservice.co.uk)

MODEL: GLM32F PRODUCT CODE: 82914 06/2018

Phone lines available  
Mon - Fri : 9am - 5pm  
Sat - Sun: 11am - 4pm.  
Calls are charged at local rate,  
mobiles may vary

**3**  
YEARS WARRANTY

---

## Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits compared to the statutory obligation arising from a warranty:

**Warranty period: 3 years** from date of purchase

**Costs:** Free repair/exchange or refund.  
No transport costs.

**Customer Service Line:** Support line charged at local rate

<b>ADVICE:</b>	Please contact our service centre by phone or email before sending in the device. This allows us to provide support in the event of possible operator errors.
----------------	---

**In order to make a claim under the warranty, please send us:**

- Together with the faulty item the original receipt and the warranty card properly completed.
- The faulty product with all components included in the packaging.

---

**The warranty does not cover** damage cause by:

- **Accident or unanticipated events.** (e.g. lightning, water, fire)
- **Improper use** or **Transport.**
- **Disregard of the safety** and **maintenance instructions.**
- Other **improper treatment** or **modification.**
- Parts like blades that are subject to wear and tear.

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.



**Spend a little Live a lot**

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support service, details of which are to be found both in this manual and on the product itself.



**Importer:**

SUMEC UK

UNIT A&B ESCRICK BUSINESS PARK

ESCRICK, YORK, YO19 6FD, UK

Email: [support@coreservice.co.uk](mailto:support@coreservice.co.uk)

**AFTER SALES SUPPORT-7 DAYS A WEEK**



GB 01904 727506

IRE 0124 751 150



[www.coreservice.co.uk](http://www.coreservice.co.uk)

MODEL: GLM32F PRODUCT CODE: 82914 06/2018

**3**

YEARS WARRANTY