2000W Steam Wallpaper Stripper PG2000SWS



Sumec Europe GmbH Hanns-Martin-Schleyer-Str.18a 47877 Willich, Germany Helpline: 0844 856 0793

EowerG*

2000W Steam Wallpaper Stripper PG2000SWS



Manufacturer: SUMEC Hardware & Tools Co., Ltd 198 Changjiang Road, Nanjing, Jiangsu, P. R. China





TECHNICAL DATA

Steam Wallpaper Stripper	PG2000SWS
Rated voltage/ Frequency	230-240V~50Hz
Rated power	2000W
Volume of container	4.5L
Continuous usage time	80min
Protecting class	II / 🗖

DESCRIPTION OF SYMBOLS

Please read all of the safety and operating instructions carefully before using this tool. Please pay particular attention to all sections of this User Guide that carry warning symbols and notices.

	Read instruction manual!
\triangle	Observe caution and safety notes!
V	Voltage
W	Watts (Effective power)
A	Caution – electric shock! Danger to life!
4	Check that the device, mains lead and plug are in good condition!

₹	WARNING! Danger of Scalding. WARNING! Do not open the cap when the water is boiling. Water tank under pressure. Always allow the water tank to cool down completely before removing the safety cap.
	WARNING! Beware of dripping water when using the wallpaper stripper overhead.
AND	WARNING! Beware of steam escaping from the sides of the wallpaper stripper.
	WARNING! Do not lay the wallpaper stripper down or leave unattended in the presence of children or pets.
	Double insulation
<u>R</u> 0	Dispose packaging and appliance in an environmentally -friendly way!

ELECTRICAL SAFETY

1. SAVE THESE INSTRUCTIONS

WARNING! Read all instructions. Failure to follow all instructions listed below may result in serious injury. This product should never be left unattended when connected to the mains supply.

Power source

Your wallpaper stripper requires a 230-240V AC 50Hz supply. Do not use any other supply.

Using the wallpaper stripper

- This product is designed for household use involving steam cleaning tasks and wallpaper stripping in and around the home.
 Industrial or commercial use will invalidate the warranty.
- **b)** Keep children and visitors away from the wallpaper stripper. Do not let children use the wallpaper stripper.
- **C)** Never handle the mains plug or water tank with wet hands.
- **d)** Do not leave the water tank unattended when heating up, during use or when cooling down.
- e) Use only the manufacturer's tools and accessories.
- f) Do not use the wallpaper stripper if it has been dropped, damaged, left outdoors or immersed in water.
- g) Do not carry or pull the water tank by the power cable.
- h) Do not put any objects in openings in the accessories.
- i) When not in use, store in a cool dry area indoors. Do not store near heat sources as this may damage the casing.
- j) Use in a well lit area.
- k) Never turn the tank over or on its side during use.
- Never direct steam towards people, pets, plants, and equipment with electrical components such as the interior of ovens.
- m) Do not immerse the water tank in water or any other liquid. Do not remove the safety cap during use. Always allow the water tank to cool down before attempting removal of the safety cap.
- Never put descaling, aromatic, alcoholic or detergent products into the water tank, as this can damage it or make it unsafe for use.
- o) The Steam plates and hose will get hot during use. Allow the tools to cool down before changing them while the water tank is being used.
- p) Beware of dripping water when used overhead.
- q) Do not lay the steam plate and steam nozzle down or leave unattended while steam is being generated, especially when

- children and pets are present.
- r) Do not use steam on cold glass as the glass may be damaged.
- s) Do not use outside in adverse weather conditions or allow the water tank to be exposed to rain or moisture. The use of a 30mA high sensitivity residual circuit breaker (RCD) is recommended for outdoor use or around the home.
- t) If the water tank is used with an extension lead, make sure that the lead is rated for at least 10A and includes the provision of a protective earthing conductor.
 - Always take care when using extension leads to avoid creating a hazard.
- u) Do not use the wallpaper stripper if the mains lead or plug are damaged. Refer to qualified personnel.

Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

APPLICATION

Intended use

The steam wallpaper stripper is intended for removal of wallpaper at home. Any other use or modification to the device shall be considered as improper use and could give rise to considerable dangers. The manufacturer will not accept liability for loss or damage arising from improper use. The device is not intended for commercial use.

Check the delivery parts

Carefully remove the machine from its packaging and check as the following parts are complete:

Steam wallpaper stripper

2pcs Extension Tubes_

Ipc Connector

lpc Handle

Ipc Air Hose?

1pc Steam Plate

1pc Steam Nozzle

1pc Steam Brush_

1 pc Window Cleaner_

1 pc Vapour Hood

Operating instruction

Product Features

The numbering of the product features refers to the illustration of the machine on the graphics page (pic. A)

- 1. Steam valve
- 2. Air hose
- 3. Steam plate
- Container

Before Operation

The mains voltage at the mains socket must match that shown on the rating plate on the device.

To achieve fastest paper removal always gently score the areas to be stripped.

With heavily embossed, vinyl coated or painted papers this is essential. Either use a proprietory perforator tool or alternatively score the paper with the edge of a wall scraper in a criss-cross pattern with 150mm(6 inch)

spacing.

As with all decorating work be sure to protect carpets and furniture with covers.

Filling the container(Pic.B)

The container has a capacity of 4.5 litres. Fill the tank as follows:

- a) Check that the mains supply is disconnected.
- b) Unscrew the steam valve.
- c) Make sure that the container is on a stable flat surface.
- **d)** Pour water, preferably hot, into the container. Distilled water is not necessary.
- e) Fill the container to the MAX level for the longest steaming time. For a shorter steaming time use less water, but do not fill to less than the MIN level.

В

- f) Screw steam valve back onto the container and tighten by hand.
- g) Connect the hose to container by screwing the captive nut on the hose in a clockwise direction until it is tight.

Switching On and Off

Put the plug into the socket and the stripper starts working. To switch off, just pull the plug from the socket.


Fitting the steam plates(Pic. C) this should be done before switching On and Off

a) The steam plate is connected to the container via a flexible hose. Screw the captive nut, in a clockwise direction, onto the steam plate until it is tight.

WARNING! Do not leave unattended during the heating-up period. **WARNING!** The steam plates and hose get hot during use.

Allow the steam plates and hose to cool down before touching them.

b) Connect the other end of the steam hose to the container.

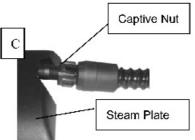

Removing the tools

First switch off the steamer and allow to cool

To disconnect the stem plate from the steam hose, unscrew the captive nut on the steam hose in an anticlockwise direction, until the tool is released.

Wallpaper stripping

To achieve the fastest paper removal:

- a) Gently score the areas to be stripped. (With heavily embossed, vinyl coated or painted paper this is essential).
- b) Either use a proprietary perforator tool or alternatively score the paper with the edge of a wallpaper scraper in a criss-cross pattern with a spacing of approximately 150mm (6").
- **c)** Hold the steam plate flat against the wall for approximately 10 seconds.
- d) Move the steam plate to the area immediately beside the one just steamed and use a wallpaper scraper to remove the paper from the steamed area.
- e) Operate until the water level reaches the MIN mark on the water tank, then unplug the water tank and allow it to cool for at least 5 minutes before removing the filler cap.

Refilling the container while wallpaper stripping

Should the need arise to refill the container with water while wallpaper stripping:

a) Unplug the power cable from the mains supply socket.

- **b)** Wait at least 5 minutes for the water tank to cool, then carefully start to unscrew the safety valve. If you hear steam escaping, stop and wait until the hissing sound stops.
- **c)** Carefully continue to unscrew the safety valve. If you hear steam escaping again, stop and wait for the hissing to stop.
- **d)** Continue in this manner until the safety cap can be removed. Take great care, as any residual water is very hot.
- e) Slowly fill the water tank with water using a funnel. See page 11.
- f) Screw the safety cap back onto the steamer and tighten by hand.
- g) Plug the 3-pin mains plug into the mains socket and switch on.
- h) Continue with the instructions for switching on .

Safety cut-out

A safety cut-out is fitted to prevent overheating of the element if the water boils low. If the container stops boiling, this can be the cause.

- a) Wait two minutes before removing the filler cap then refill with water.
- b) The cut-out will reset itself and steam will be produced within 15 minutes.

MAINTENANCE

Before each use:

Check that the safety valve in the filler cap moves freely when lightly pressed from the underside.

Cleaning

After each use:

- a) Empty any remaining water from the water tank.
- **b)** Wipe the body of the water tank with a soft, dry cloth. Do not use abrasive cleaners.
- c) Store the water tank and accessories in a dry, cool place.

SERVICE AND REPAIR

Should the wallpaper stripper require repair during the guarantee period, please return it to the place of purchase. You will need to provide proof of purchase to obtain a free of charge repair or replacement.

Do not dispose of electrical appliances with your domestic waste!



- The packaging comprises exclusively environmentally-friendly material. Dispose of it in your local recycling containers.
- 2) Take any battery to your nearest authorized service center or distributor that has been designated as a battery recycling location.

Guarantee and Service

This product is guaranteed for 1 year from the original date of purchase, the guarantee applies to material and production defects. This warranty is not valid without the original dated receipt of purchase.

If the product shows defect as a result of material and production defects during the period of guarantee, providing that the product has been used properly and for the purpose which it has been intended, then faulty products will either be replaced or refunded.

The guarantee does not cover accidental damage or misuse.

This product must be used in accordance with the instructions contained in this manual.

The guarantee will be rendered invalid if the product has been damaged by unauthorised repairs or resold.

Accessories are not covered by the guarantee.

If you have any problems or questions concerning the product, please contact our customer helpline on 0844 856 0793.

SUMEC

Declaration of Conformity We,

SUMEC Hardware & Tools Co.,LTD

1# Xinghuo Road, National level Nanjing High-Tech Zone, Nanjing 210061 P.R. China

> Declare that the product Steam Wallpaper Stripper Model No. PG2000SWS

Complies with the essential safety and health requirement of the following directives:

2004/108/EC

2006/95/EC

Standards and technical specification referred to:

EN55014-1:2000+A1+A2

EN55014-2:1997+A1

EN61000-3-2:2000+A2

EN61000-3-3:1995+A1+A2

EN60335-1:2002+A1+A11+A12+A2+A13

EN60335-2-54:2003+A1+A11

EN62233: 2008

Authorized Signatory

Date: 01.01.2010

Signature:


Cai Ji Bo

Name: Cai Jibo General Manager

SUMEC Hardware & Tools Co..LTD



10

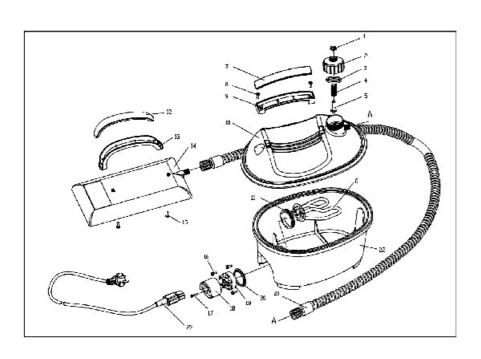

Ref.	Description	Ref.	Description
1	Rubber Wrap	13	Handle
2	Cover	14	Vapour hood
3	Seal ring	15	Screw
4	Spring	16	Screw
5	Pin	17	Screw
6	Heat pipe	18	Cover
7	Hand rubber	19	Power seat
8	Screw	20	Loop
9	Cover handle	21	Connect pipe
10	Cover	22	Container
11	Seal ring	23	Cable plug
12	Hand rubber	8	