

EN Original instructions **PL** Oryginalna instrukcja **ES** Instrucciones originales **PT** Instruções originais

Organik

SEPARATIONS



EN Product description PL Opis produktu
ES Descripción del producto PT Descrição do Produto

3



EN Preparation PL Przygotowanie
ES Preparación PT Preparação

EN 5
ES 57

PL 31
PT 83



EN Assembly PL Montaż
ES Montaje PT Montagem

EN 13
ES 65

PL 39
PT 91



+



EN Care & maintenance PL Pielęgnacja i konserwacja
ES Cuidados y Mantenimiento PT Cuidados e manutenção

EN 25
ES 77

PL 51
PT 103






EN These instructions are for your safety. Please read them thoroughly before use and retain for future reference.

PL Te instrukcje mają służyć Twojemu bezpieczeństwu. Należy je dokładnie przeczytać przed użyciem produktu i zachować na przyszłość.

ES Estas instrucciones son para su propia seguridad. Léalas atentamente antes de usar el producto y guárdelas para referencia futura.

PT Estas instruções são para sua segurança. Leia-as atentamente antes de utilizar e guarde-as para futura referência.

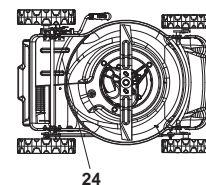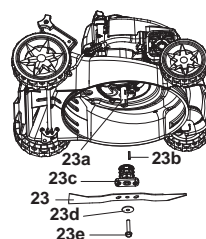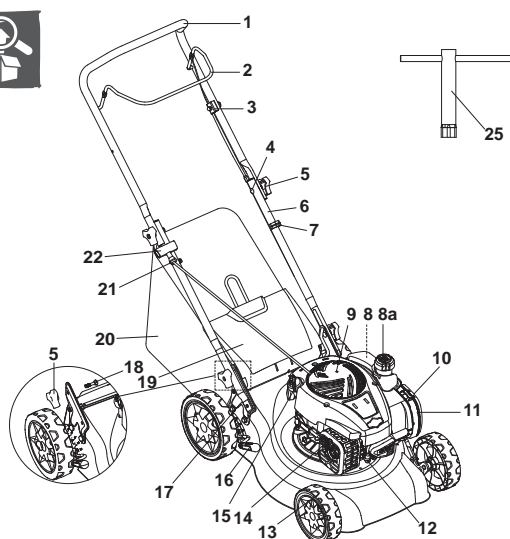

- EN** 1. Upper handle bar 2. Brake bar 3. Brake wire 4. Cup head square neck bolts M8X45(x 2) 5. Locking knob with M8 nut(x4) 6. Lower handle bar 7. Wire Clip 8. Fuel tank a. Cap 9. Air vents 10. Primer 11. Air filter case a. Filter* b. Cover* c. Fastener* 12. Spark plug connector 13. Wheel 14. Muffler 15. Oil tank cap 16. Lever for cutting height adjustment 17. Handle support 18. Arc-head bolt M8X35(x 2) 19. Rear deflector guard 20. Grass catcher a. Handle* 21. Rope guide 22. Recoil starter handle 23. Cutting device (blade) a. Spindle b. Pin c. Support d. Locking flange e. Hex bolt 24. Rear discharge chute 25. Spark plug wrench 26. Briggs & Stratton (B&S) operator's manual*

NOTE: Parts marked with * are not shown in this overview. Please refer to the respective section in the instruction manual

- PL** 1. Górny uchwyt 2. Dźwignia hamulcowy 3. Przewód hamulcowy 4. Śruby zamkowe z podsadzeniem kwadratowym M8X45 (x 2) 5. Pokrętło blokady z nakrętką M8 (x4) 6. Dolny uchwyt 7. Zacisk linki 8. Zbiornik paliwa a. Korek 9. Otwory wentylacyjne 10. Pompka zastrzykowa 11. Obudowa filtra powietrza a. Filtr* b. Osłona* c. Mocowanie* 12. Kapturek świecy zapłonowej 13. Koło 14. Tłumik 15. Korek zbiornika oleju 16. Dźwignia regulacji wysokości cięcia 17. Wspornik uchwytu 18. Śruby z łbem grzybkowym z podsadzeniem kwadratowym M8X35 (x 2) 19. Osłona tylnego deflektora 20. Pojemnik na trawę a. Uchwyt* 21. Prowadnica liny 22. Uchwyt rozrusznika linkowego 23. Zespół koszący (ostrze) a. Wrzeciono b. Trzpień c. Wspornik d. Kołnierzyk mocujący e. Śruba z łbem sześciokątnym 24. Tylny wylot 25. Klucz świecy zapłonowej 26. Instrukcja obsługi Briggs & Stratton (B&S)*

UWAGA: Elementy oznaczone symbolem * nie zostały przedstawione na rysunkach. Informacje na ich temat można znaleźć w odpowiedniej części instrukcji obsługi

- ES** 1. Barra del manillar superior 2. Barra de freno 3. Cable de freno 4. Pernos de cuello cuadrado con cabeza redonda M8X45 (2 unidades) 5. Ruedecilla de bloqueo con tuerca M8 (4 unidades) 6. Barra del manillar inferior 7. Sujetacables 8. Depósito de combustible a. Tapón del depósito de combustible 9. Rejillas de ventilación 10. Cebador 11. Carcasa del filtro de aire a. Filtro* b. Cubierta* c. Cierre* 12. Conector de la bujía 13. Rueda 14. Silenciador 15. Tapón del depósito de aceite 16. Palanca de ajuste de la altura de corte 17. Soporte del manillar 18. Perno de cabeza de redonda M8X35 (2 unidades) 19. Protector del deflector trasero 20. Recogedor de hierba a. Manillar 21. Guía de la cuerda 22. Tirador de arranque de retroceso 23. Dispositivo de corte (hoja) a. Eje b. Pasador c. Soporte d. Arandela de bloqueo e. Perno hexagonal 24. Canal de descarga trasero 25. Llave de bujía 26. Manual del operario de Briggs & Stratton (B&S)*

NOTA: Las piezas marcadas con * no se muestran en esta imagen. Consulte la sección correspondiente del manual de instrucciones.

- PT** 1. Guiador superior 2. Barra de travão 3. Fio do travão 4. Parafusos de pescoço quadrado e cabeça redonda M8X45 (x 2) 5. Botão de bloqueio com porca M8 (x 4) 6. Guiador inferior 7. Grampo de fio 8. Depósito de combustível a. Tampa 9. Respiradouros 10. Disparador 11. Caixa do filtro de ar a. Filtro* b. Cobertura* c. Fixador* 12. Conector da vela de ignição 13. Roda 14. Silenciador 15. Tampa do depósito de óleo 16. Alavanca para ajuste da altura de corte 17. Suporte do guiador 18. Parafusos de cabeça de arco M8X35 (x 2) 19. Proteção defletora traseira 20. Recipiente de recolha de relva a. Pega* 21. Guia da corda 22. Pega do arrancador de recuo 23. Dispositivo de corte (lâmina) a. Veio b. Pino c. Suporte d. Flange de bloqueio e. Parafuso sextavado 24. Conduta de descarga traseira 25. Chave para velas de ignição 26. Manual do operador da Briggs & Stratton (B&S)*

NOTA: As peças marcadas com * não são apresentadas nesta descrição geral. Consulte a respetiva secção no manual de instruções



en Preparation pl Przygotowanie
 es Preparación pt Preparação

Safety Instructions

01 Training

1. Read the instructions carefully. Be familiar with the controls and the proper use of the product.
2. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.
3. Never mow while people, especially children, or pets are nearby.
4. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
5. The operators must receive proper training in the use, adjustment and operation of the product, including prohibited operations.

02 Preparation

1. While mowing, always wear substantial footwear and long trousers. Do not operate the product when barefoot or wearing open sandals.
2. Thoroughly inspect the area where the product is to be used and remove all objects which can be thrown by the product.



WARNING! Petrol is highly flammable.

- Store fuel in containers specifically designed for this purpose.
 - Refuel outdoors only and do not smoke while refuelling.
 - Add fuel before starting the engine. Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot.
 - If petrol is spilled, do not attempt to start the engine but move the product away from the area of spillage and avoid creating any source of ignition until petrol vapours have dissipated.
 - Replace all fuel tank and container caps securely.
3. Replace faulty silencers.
 4. Before using, always visually inspect to see that the cutting devices, cutting device bolts and cutter assembly are not worn or damaged. Replace worn or damaged cutting devices and bolts in sets to preserve balance.



CAUTION! Do not touch rotating cutting device.

5. Engine brake (brake bar (2)): Use the brake bar (2) to stop the engine. When you release the bar the engine and the blade stop automatically in a few second. To mow, hold the bar in the working position. Before you start to mow check the brake bar (2) several times to be sure that it is working properly. Ensure that the brake wire (4) can be smoothly operated (i.e. is not catching or kinking in any way).

03 Operation

1. Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
2. Mow only in daylight or in good artificial light.
3. Do not operate the product while being tired, ill or under influence of alcohol or other drugs.
4. Avoid operating the product in wet grass, where feasible.
5. Always be sure of your footing on slopes.
6. Walk, never run.
7. Mow across the face of slopes, never up and down.
8. Exercise extreme caution when changing direction on slopes.
9. Do not mow excessively steep slopes near drop-offs, ditches or embankments.
10. Avoid using the product in bad weather conditions especially when there is a risk of lightning.
11. Use extreme caution when reversing or pulling the product towards you.
12. Stop the cutting device(s) if the product has to be tilted for transportation when crossing surfaces other than grass, and when transporting the product to and from the area to be mowed.
13. Never operate the product with defective guards, or without safety devices.
14. Do not change the engine governor settings or overspeed the engine.
15. Do not alter or tamper with any sealed adjustments for the engine speed control.
16. Do not tamper or disable any lawnmower safety systems or features.
17. Ensure and regularly check that all starting interlocks and operator presence controls are properly functioning.
18. Stop the product according to instructions in this manual before leaving the operators position and park it.
19. Disengage all cutting device and drive clutches before starting the engine.
20. Start the engine or switch on the engine carefully according to instructions and with feet well away from the cutting device(s).
21. Do not tilt the product when starting the engine or switching on the engine, except if the product has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part which is away from the operator.
22. Do not start the engine when standing in front of the discharge chute.
23. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
24. Never pick up or carry a product while the engine is running.
25. Stop the engine and disconnect the spark plug connector make sure that all moving parts have come to a complete to a complete stop and, where a key is fitted remove the key:
 - Before clearing blockages or unclogging chute
 - Before checking, cleaning or working on the product
 - After striking a foreign object. Inspect the product for damage and make repairs before restarting and operating the product
 - if the product starts to vibrate abnormally (check immediately)
26. Stop the engine and disconnect the spark plug connector make sure that all moving parts have come to a complete stop and, where a key is fitted remove the key:
 - whenever you leave the product
 - before refuelling
27. Reduce the throttle setting during engine shut down and, if the engine is provided with a shut-off valve, turn the fuel off after mowing.
28. Never touch the exhaust, exhaust guard or cooling fans when the engine is hot.
29. Never carelessly touch the product, you can burn yourself. While the product is in operation or shortly thereafter, its parts such as the exhaust pipe, engine, and other surfaces are extremely hot! Pay attention to the markings on the product.
30. Make sure that the air intake of the combustion engine is clear. Keep the air intake free of dust, dirt particles, gases and fumes. Keep hands and feet away from the cutting device at all times and especially when switching on the engine.

04 Maintenance and storage

1. Follow the maintenance and repair instructions for this product. Never carry out any modifications of the product. Never change the preset rotary speed or the engine and product settings. Information about maintenance and repair is provided in this user manual.
2. Keep all nuts, bolts and screws tight to be sure the product is in safe working condition.

3. Improper maintenance or using non genuine parts may lead to malfunction/failure of the product. Many accidents are caused by poorly maintained products.
4. Never store the product with petrol in the tank inside a building where fumes can
5. Allow the engine to cool before storing in any enclosure.
6. Keep the engine, silencer and petrol storage area free of grass, leaves, or excessive grease to reduce the fire hazard.
7. Check the grass catcher frequently for wear or deterioration.
8. Replace worn or damaged parts for safety.
9. If the fuel tank has to be drained, this should be done outdoors.
10. Wear strong work gloves when removing and re-assembling the cutting device.
11. Always replace worn or faulty parts with the genuine parts. Only use the recommended blades and spare parts by the manufacturer.

05 Fuel handling

1. Always switch the product off and let it cool down, before refuelling it. Petrol is highly flammable. Never smoke when you are refuelling the product. Do not refuel the product, if there is an open fire in the vicinity!
2. Always use suitable aids such as funnels and filler necks. Do not spill any fuel on the product or its exhaust system. There is a risk of ignition. However, if fuel should be spilled, then you must remove it carefully from all parts of the product. Any residue which may be present must be completely removed, before the product is operated!
3. Exhaust gases and fuel fumes are noxious. Fuel fumes can ignite. Never use the product in environments where there is a risk of explosion.
4. Never breathe in any fuel fumes, when you are refuelling the product. Never fill the tank in enclosed spaces, such as basements or sheds. There is a risk of poisoning and explosion!
5. Avoid skin contact with petrol.
6. Do not eat or drink, while you are refuelling the product. If you have swallowed petrol or oil, or if petrol or oil has got into your eyes, then seek medical advice immediately.
7. Close the tank lid immediately after filling the tank. Make sure that it is properly closed.
8. Never use the product without an air filter.

06 Vibration and noise reduction

To reduce the impact of noise and vibration emission, limit the time of operation, use low-vibration and low-noise operating modes as well as wear personal protective equipment.

Take the following points into account to minimize the vibration and noise exposure risks:

1. Only use the product as intended by its design and these instructions.
2. Ensure that the product is in good condition and well maintained.
3. Use correct attachments for the product and ensure they are in good condition.
4. Keep tight grip on the handles/gripping surface.
5. Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
6. Plan your work schedule to spread any high vibration tool use across a longer period of time.

07 Emergency

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

1. Always be alert when using this product, so that you can recognize and handle risks early. Fast intervention can prevent serious injury and damage to property.
2. Stop the engine and disconnect the spark plug connector if there are malfunctions. Have the product checked by qualified professional and repaired, if necessary, before you operate it again.
3. In case of fire disconnect the engine and disconnect the spark plug connector. Take fire extinguishing measures immediately if the product switch is no longer available.



WARNING! Never use water to extinguish a product on fire. Burning fuel must be extinguished with special extinguishing agents! We recommend that you keep a suitable fire extinguisher within reach of your work area!

08 Residual risks

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

1. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
2. Injuries and damage to property due to broken application tools or the sudden impact of hidden objects during use.
3. Danger of injury and property damage caused by flying objects.
4. Burns, if touching hot surfaces.
























WARNING! This product produces an electromagnetic field during operation! This may under some circumstances cause interference with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!














09 Symbols

On the product, the rating label and within these instructions you will find others among the following symbols and abbreviations. Familiarise yourself with them to reduce hazards like personal injuries and damage to property.

kW	Kilowatt	kg	Kilogram
cm³	Cubic centimetre	dB(A)	Decibel (A-rated)
/min or min⁻¹	Per minute	l	Litre
mm	Millimetre	m/s²	Metres per second squared

	Lock / to tighten or secure.
	Unlock / to loosen.
mm.yyyy	mm.yyyy Manufacturing date code, year of manufacturing (yyyy) and month of manufacturing (mm)
	Note / Remark.
	Caution / Warning.

	Read the instruction manual
	Wear hearing protection.
	Wear eye protection.
	Wear respiratory protection.
	Wear protective gloves.
	Wear protective, slip-resistant footwear.
	Wear tight-fitted protective clothes.
	Do not expose the product to rain or wet conditions.
	Open flames in the work area, around the product and in the vicinity of flammable materials are prohibited!
	Do not smoke in the work area, around the product and in the vicinity of flammable materials!
	Risk of fire / flammable materials
	Hot surface, do not touch! High temperatures on the product's surfaces and structural parts that could cause burns, if they are touched. The product can also stay hot for a longer period of time after operation!
	This product produces noxious exhaust fumes. If the product is used improperly, these fumes can lead to poisoning, a loss of consciousness or death!
	Noxious exhaust fumes; do not operate or start the product in indoor rooms!
	Only refuel unleaded petrol!
	Add engine oil
	Check and refill oil.

	<p>Switch the engine off while you are refilling the tanks!</p> <p>Fuel is flammable, keep fire away. Do not add fuel with running engine.</p>
	Switch the product off and disconnect the spark plug connector before assembly, cleaning, adjustments, maintenance, storage and transportation.
	Mow across the face of slopes, never up and down.
	<p>Inspect the area where the product is to be used and remove all objects which can be thrown by the product.</p> <p>If objects are hidden while operating stop the engine and remove the object.</p>
	<p>Keep hands and feet away from sharp rotating parts – danger of injury!</p> <p>When cleaning, repairing, or inspecting, make certain the cutting device and all mowing parts have stopped. Disconnect the spark plug cap, and keep the cap away from the plug to prevent accidental starting.</p>
	Keep hands and feet away.
	Cutting device continues to rotate after the product is switched off. Wait until all machine components have completely stopped before touching the product.
	Pay special attention when working on the cutting device!
	Objects thrown by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is.
	Release the brake bar to stop the engine and blade.
	Engine manual start; recoil starter
	Guaranteed sound power level in 96dB
FPLMP450BS-HP-2	Designation of the tool (FP_Brand Name; LM_Lawn mower; P_Petrol Power)
	The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.

Technical Specifications

General:	
Dimensions:	Approx. 1290 x 495 x 990mm
Machine mass with empty tanks and in normal operating configuration:	Approx. 20kg
Fuel tank capacity:	800ml (cm ³)
Petrol type:	#93, unleaded
Engine oil capacity:	470ml (cm ³)
Engine oil type:	4-stroke engine oil (e.g. SAE 10W – 30)
Specific oil consumption at max. engine power:	397 g/kWh
Fuel consumption at max. engine power:	1.15 L/h
Cutting width:	400mm
Cutting height:	25-75mm
Grass catcher volume:	45l
Engine:	
Engine model:	B&S450E, 08P5
Engine type:	Air cooled 4 stroke engine
Engine displacement:	125cm ³
Maximum operating engine speed (rotational frequency):	3000min ⁻¹
Nominal power:	1.8kW
Spark plug type:	QC12YC
Spark plug gap:	0.457–0.61mm
Sound Level:	
Sound pressure level at operator's position L _{pA} :	85.1 dB(A)
Uncertainty K:	3 dB(A)
Sound power level L _{WA} :	91.6 dB(A)
Uncertainty K:	0.85 dB(A)
Guaranteed sound power level L (acc. to 2000/14/EC amended by 2005/88/EC):	96 dB(A)
Vibration Level:	
Hand arm vibration ahw:	6.5 m/s ²
Uncertainty K:	1.5 m/s ²

The sound values have been determined according to noise test code given in EN ISO 5395-2, using the basic standards ISO 3744 and ISO 11094.

Wear hearing protection, especially when sound pressure is over 80 dB(A).

The declared vibration value has been measured in accordance with a standard test method (according to EN ISO 5395-1 and EN ISO 5395-2) and may be used for comparing one product with another. The declared vibration value may also be used to evaluate the exposure for the user caused by vibration in advance.



WARNING! Depending on the actual use of the product the vibration values can differ from the declared total! Adopt proper measures to protect yourself against vibration exposures. Take the whole work process including times the product is running under no load or switched off into consideration.

Proper measures include among others regular maintenance and care of the product and application tools, keeping hands warm, periodical breaks and proper planning of work processes.

Unpacking



NOTE: The product is heavy, ask another person for assistance if required.

1. Unpack all parts and lay them on a flat stable surface.
2. Remove all packing materials and shipping devices, if applicable.
3. Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
4. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING! The product and the packaging are not children's toys! Children must not play with plastic bags, sheets and small parts! There is a danger of choking and suffocation! The product and the packaging are not children's toys! Children must not play with plastic bags, sheets and small parts! There is a danger of choking and suffocation!



EN Assembly
ES Montaje

PL Montaż
PT Montagem

13



WARNING! The product must be fully assembled before operation! Do not use a product that is only partly assembled or assembled with damaged parts!

Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!

Disconnect the spark plug connector (12) from the spark plug! Reconnect it after assembly.

Before you start

Handle Bars

1. Remove the Arc-head bolt M8X35 (18) from the handle supports (17) and keep them handy (Fig. 1)

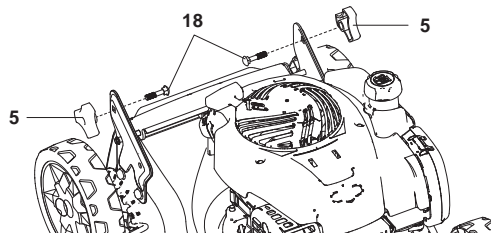


Fig. 1

2. Make sure the holes in the lower handle bar are aligned with those in the supports (Fig. 2) Ensure handle bar with starter coil loop fitted on right hand side when standing behind mower.

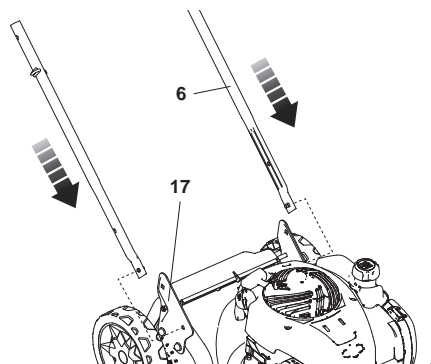


Fig. 2

3. Fix the lower handle bar (6) with the Arc-head blot M8X35 (18) to the handle supports (17) Fig. 3.

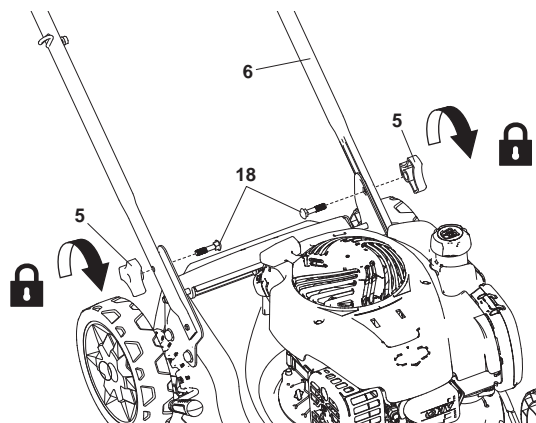


Fig. 3

4. Align the mounting holes of the upper handle bar (1) with the ones on the lower handle bar (6). Ensure the rope guide (21) is properly aligned. Secure the connection with the knobs (5) and bolts (4) (Fig.4).

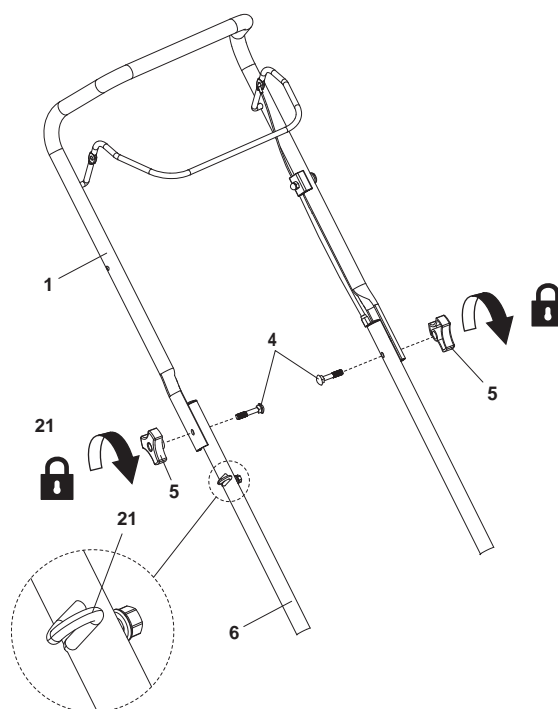


Fig. 4

5. Fix the wires (4) with the clip wire (7) to the lower handle bar (6) Fig.5.

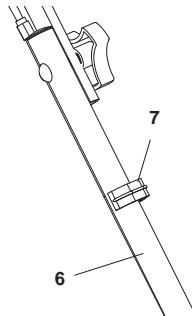


Fig. 5

01 Grass Catcher

1. Attach the grass bag to the frame by fixing all plastic hooks. (Fig. 6)
2. Open the deflector guard (19) and hold it in the open position. Hang the grass catcher on the rod. (Fig.7)

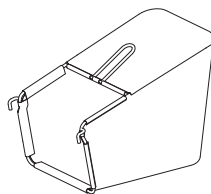


Fig. 6

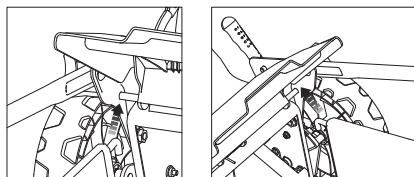


Fig. 7

Fuel and Engine Oil

This product is equipped with a 4-stroke engine. Before operation it is necessary to add proper fuel and engine oil separately.



WARNING! This product contains an instruction manual of the engine. Service the engine with proper petrol and engine oil as instructed in the separate engine handbook (26). It is important to read and understand these instructions about the engine and the equipment.

SAVE THESE DOCUMENTS FOR FUTURE REFERENCE.

1. Place the product on a stable, level service. We recommend laying a non-flammable sheet under the product.
2. Use proper funnels. Avoid spilling and over filling the tanks.



WARNING! Fuel and oil are highly flammable! Fumes will explode if lit. Ensure there are no naked flames around the product! Do not smoke while filling fuel and oil.

3. Always dispose of fuel and oil and objects contaminated with them in accordance with local regulations.

Fuel



NOTE: This product is not supplied with fuel! Before operating this product, it is essential to fill it with fuel! Fill fuel and engine oil separately. Never mix oil with petrol.

1. Always use clean, fresh unleaded petrol. Purchase fuel that can be used within 30 days.
2. Avoid getting dirt, dust or water in the fuel tank.
3. Unscrew and remove the fuel tank cap (8a) Fig.8.
4. Add correct fuel into the tank. Leave a minimum 5mm of space between the top of the fuel tank and inside the edge of the tank to allow for expansion (Fig.9).

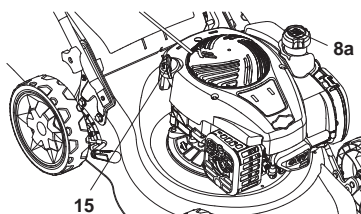


Fig. 8

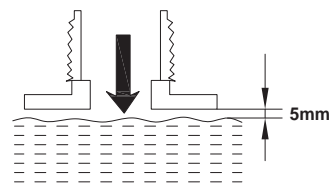


Fig. 9



NOTE: Petrol deteriorates over time. It may be difficult to start the engine if you use petrol which has been kept for more than 30 days.

Towards the end of the season, it is advisable to put only as much fuel in the tank as you need for each use, since it should be completely used up before storing the product.

Always empty the fuel tank when storing the product for over 30 days.

5. Wipe any spilled fuel with a soft cloth and reattach the fuel tank cap (8a).

Engine oil



WARNING! This product is not supplied with oil. However, for manufacturing reasons it is possible that a small quantity may be in the engine! Before operating this product it is essential to fill it with proper oil (see the separate engine handbook (26))!

1. Unscrew and remove the oil tank cap (15).
2. Gradually add good-quality engine oil. Allow the oil to settle.
3. Check the oil level frequently while filling. Wipe the oil dipstick clean: refit and tighten the filler cap and then remove it again. The oil level must be between the 'min' and 'max' marking, indicated by the two arrows. Add more oil if necessary. Do not overfill (fig. 10).


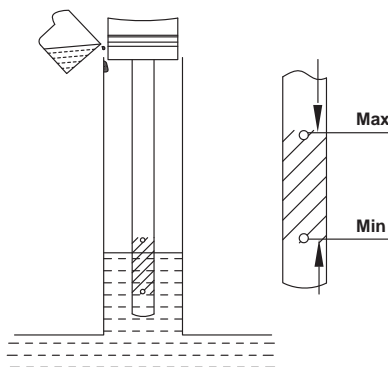


Fig. 10

4. Wipe spilled oil with a soft cloth and reattach the oil tank cap (15).

Operating Controls

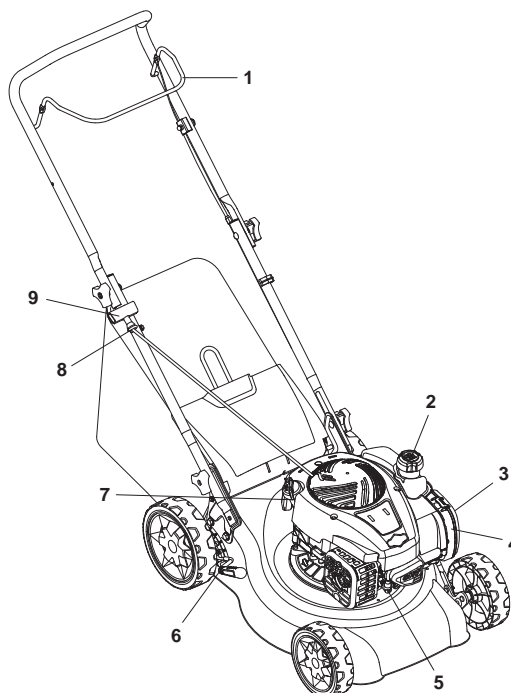

1	Brake bar	6	Lever for cutting height adjustment
2	Fuel tank	7	Oil tank
3	Primer	8	Rope guide
4	Air filter case	9	Recoil starter handle
5	Spark plug connector		

Product Functions

01 Intended use

This petrol lawnmower FPLMP450BS-HP-2 is designated with a power output of 1.8kW.

1. The product is intended for mowing grass in domestic gardens only. It must not be used to mow unusually high, dry or wet grass, e.g. pasture grass; for shredding leaves or mulching.
2. For safety reasons it is essential to read the entire instruction manual before first operation and to observe all the instructions therein.
3. This product is intended for private domestic use not only for any commercial trade use. It must not be used for any purposes other than those described.

02 Brake bar

1. Pull the brake bar (2) towards the Upper handle bar (1) and hold it in position when starting the engine. Keep it squeezed during operation (Fig. 11).
2. Release the brake bar (2) to stop the engine.

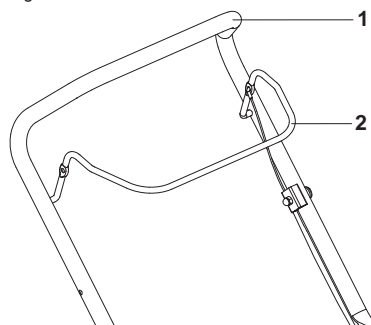


Fig. 11

03 Recoil Starter

The recoil starter handle (22) is positioned at the rear of the engine.

1. Pull the brake bar (2) towards the Upper handle bar (1).
2. Slowly pull on the recoil starter handle (22) (Fig. 12) and fit it into the rope guide (21) on the right hand side of the lower handle (6) during operation (Fig. 13). Do not remove the rope from the rope guide when starting the engine.

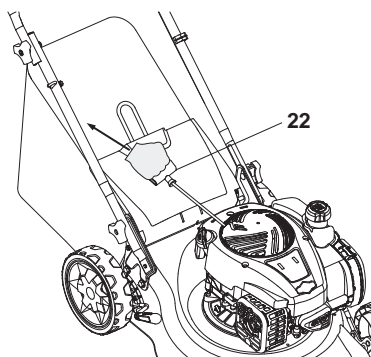


Fig. 12

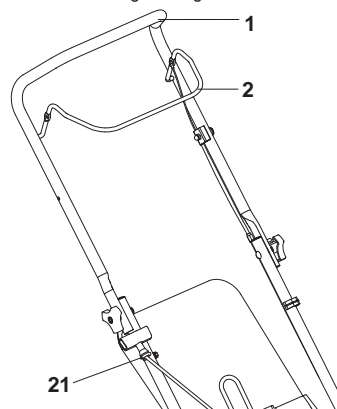


Fig. 13



WARNING! Never twist the starter cord around your hand!
Only pull on the handle!

WARNING! Do not suddenly release the recoil started handle!
Allow the rope to return slowly and in a controlled manner
each time it is pulled!

04 Grass catcher

Emptying

Empty the grass catcher (20) frequently during use. Do not wait until it is completely full.



NOTE: A full grass catcher will reduce the performance of this product.

1. Lift the rear deflector guard (19) and pull the grass catcher (20) off the rod.
2. Remove the grass clippings from the rear discharge chute (24) into the grass catcher (20). Use the proper tool such as a brush.



WARNING! Never use your hands or feet to remove grass clippings from the discharge chute!

3. Remove the grass catcher (20).
4. Empty the grass clippings onto a compost heap.
5. Re-fit the grass catcher (20) to the product.



WARNING! Do not attempt to use the product without the grass catcher attached when collecting grass – danger of flying objects!

Switch the engine off and wait until the blade has come to a complete stop before removing the grass catcher!

05 Cutting height adjustment

Adjust the cutting height according to the needs of your lawn. The cutting height depends on the kind of lawn and its actual height. When mowing high grass, start with the maximum cutting height and make a second cut with lower cutting height.

1. Pull the lever (16) towards the wheel (13), then move it forward or backward to adjust the cutting height (Fig.14).

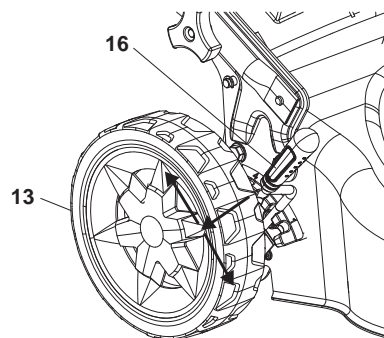


Fig. 14



WARNING! Ensure that the lever engages between two of the prongs!

Switch the engine off and wait that the blade had come to a complete stop before adjusting the cutting height!

06 Primer

The primer (10) is positioned in the air filter case (11). Use the primer (10) when starting the product with cold engine (Fig. 15).

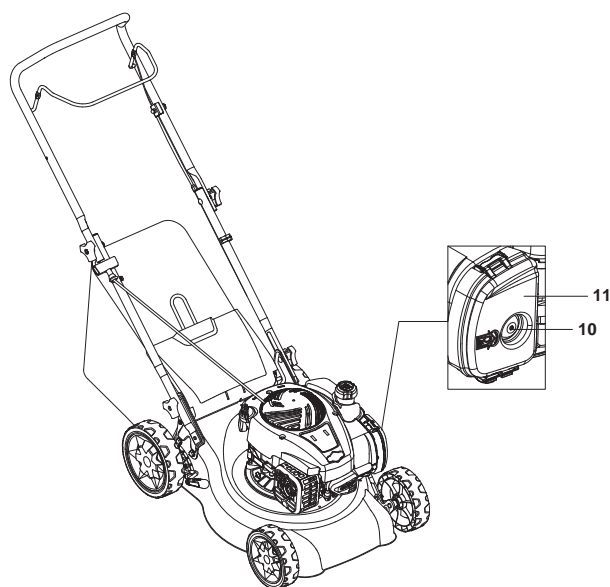


Fig. 15

Operation

01 General Operation

1. Check the product as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
2. Double check that the accessories and attachments are properly fixed.
3. Check the fuel and oil level, refill if necessary.
4. Always push the product on its handle. Use the self-propelling function if required. Keep the handle dry and free from lubricant to ensure safe support.
5. Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
6. Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before averting.
7. Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.

02 Set Up

This product is equipped with a 4-stroke engine. Before operation it is necessary to add proper fuel and engine oil separately.



Assemble



Adjust



Add fuel



Add oil

03 Starting/Stopping



WARNING! Before starting, put on a flat surface free of high grass! Clean the underside of the deck!

Keep yourself ready! Start the engine carefully according to instructions. Keep your feet well away from the blade!

Do not tilt the product when starting the engine.

Start



Press primer 3 to 5 times for cold first starting only



Pull and hold brake bar



Pull recoil starter sharply, repeat until engine starts



Operate

1. Press the primer (10) three to five times (Fig. 16, step 1) when engine is cold. Once engine has been run and is hot there is no need to push primer.
2. Stand behind the handle (1).
3. Pull the brake bar (2) against the handle (1) and hold it in position with one hand (Fig. 17, step 2).
4. Pull the recoil starter handle (22) lightly until you feel resistance then pull it rapidly. Do it again until the engine starts (Fig.17, step 3).
5. When you are ready to mow hold the brake bar (2) with both hands with the handle (1). Pushing the mower forward and the mower begins mowing.

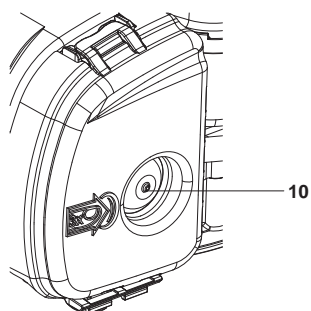


Fig. 16

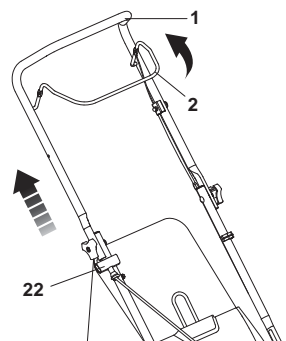


Fig. 17



WARNING! The starting position should be as described in the instruction handbook. (Fig. A) is the defined starting position. User should start the engine behind the lever. DO NOT start the engine standing beside the deck as (Fig. B).



Fig. A



Fig. B

Stopping



Release brake bar



Empty fuel tank



Clean and maintain



Store

Release the brake bar (2) to stop the engine and blade (Fig. 18).

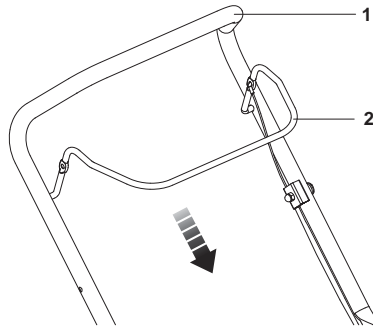


Fig. 18

04 Mowing

1. Make sure that the lawn is clear of stones, sticks, wire or other objects that could damage the product or its engine.
2. Do not cut wet grass because it tends to stick to the underbody of the product, preventing the proper discharge of grass clippings, and it could also cause you to slip and fall.
3. Never cut off more than one-third of the total length of the grass for a healthy lawn. In the autumn, lawns should only be cut as long as there is growth.
4. Mow in slight overlapping rows. The most effective pattern for mowing lawns is straight lines along one of the sides. This will keep the rows even and ensures that all the lawn is cut without missing any spots (Fig. 19).

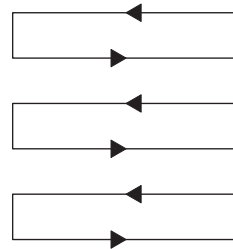


Fig. 19

5. Circle around flower beds. When reaching a flower bed in the middle of the lawn cut around or two around the circumference of the bed.
6. Pay special attention when changing direction.
7. Empty the grass catcher regularly.



WARNING! Extensive vibration of the product during operation is an indication of damage! Switch the engine off. The product should be promptly inspected and repaired!

After use

1. Switch the product off, disconnect the spark plug connector and let it cool down.
2. Check, clean and store the product as described below.



Care & maintenance
 Cuidados y Mantenimiento

Pielęgnacja i konserwacja
 Cuidados e manutenção

Care



WARNING! Always switch the product off, disconnect the spark plug connector and let the product cool down before performing inspection, maintenance and cleaning work!
DO NOT touch a rotating blade.

1. Keep the product clean. Remove debris from it after each use and before storage.
2. Regular and proper cleaning will help ensure safe use and prolong the life of the product.
3. Inspect the product before each use for worn and damaged parts. Do not operate if you find broken and worn parts.



WARNING! Only perform repairs and maintenance work according to these instructions! All further works must be performed by a qualified specialist.

Product maintenance

Before and after each use, check the product and accessories (such as application tools) for wear and damage. If required, exchange them for new ones as described in this instruction manual. Observe the technical requirements.

Underbody and cutting device



WARNING! Wear protective gloves when working on the cutting device and close to it! Use proper tools to remove debris, e.g. a wooden stick! Never use your bare hands!

Always use original spare parts for replacement. The cutting device must be replaced by an identification no ref. SMV 1816211. Do not attach any other type of cutting device!

The replacement of the cutting device should be done by an experienced user! Rework or sharpening blades is not recommended unless it is done by a repair service or similarly qualified specialist!



NOTE: We strongly recommend jacking the product up when performing inspection and work on the cutting device. Avoid tilting the product in order to prevent fuel and oil leakages.

1. Keep the underbody and cutting device (23) clean and free of debris. Remove clippings from the discharge chute (24).
2. Check all nuts and bolts periodically for tightness before operation. After prolonged use, especially in sandy soil conditions, the cutting device will become worn and lose device should be replaced.
3. Keep the cutting device (23) sharp to ensure a good cutting performance. Replace a worn or damaged cutting device with a new one of the same type or have it sharpened.
4. Loosen the hex bolt (23e) anti-clockwise using a suitable wrench and remove it together with the locking flange (23d), cutting device (23), support (23c), and pin (23b) (Fig. 20).

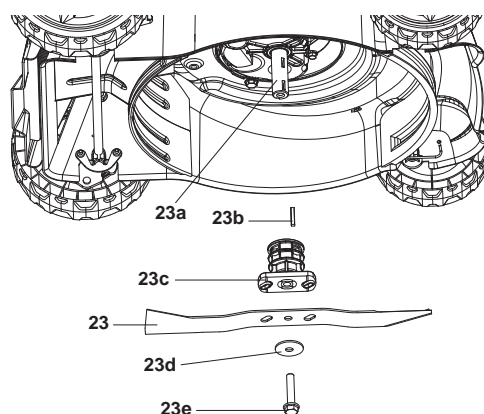


Fig. 20

5. Replace the cutting device with a new one of the same type. Slide the pin (23b) into the slot on the spindle (23a) (23c), support (23d), locking flange (23e) and hex bolt (23f). Tighten the hex bolt clockwise with 40 N m min, 50 N m max. to ensure safe operation of your product.



NOTE: Replace this cutting device after 50 hours mowing or 2 years whichever is sooner regardless of condition. If the cutting device is cracked or damaged, you must immediately replace it with a new one.

6. Lubricate the cutting device (23) after each use to prolong the life span of cutting device and product. Apply light machine oil along the edge of the cutting device.

Grass catcher

1. Inspect the grass catcher (20) before each use. Do not use it if you find any damage.
2. Clean the grass catcher (20) after operation using water and mild soap.
3. Let the grass catcher dry thoroughly before storing to avoid mildew.

Wires

Check the performance of the wires (4) before each use. Ask a qualified specialist to adjust it if necessary.



WARNING! Do not use the product with defective or loose wires!

Engine



NOTE: An instruction manual of the engine is provided with your product. Follow the engine handbook for maintenance and care for of engine.

Refer to the B&S operator's manual for maintaining below parts:

Air filter
Spark plug
Fuel
Engine oil
Carburettor
Muffler
Valve play

Spare parts / Replacement parts

The following parts of this product may be replaced by the consumer. Spare parts are available at an authorised dealer or through our customer service.

Description	Model no. or Specification
Blade	SMV 1816211

Repair

This product does not contain any parts that can be repaired by the consumer. Contact an authorised service centre or similarly qualified person to have it checked and repaired.

Storage

1. Switch the product off and disconnect the spark plug connector.
2. Clean the product as described above.
3. Store the product and its accessories in a dry, frost-free place.
4. Always store the product in a place that is inaccessible to children. The ideal storage temperature is between 10 °C and 30 °C.
5. We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.
6. Empty the tank if you are not going to use the product for an extended period of time (more than 30 days) and before storing it for the winter.

Transportation

1. Switch the product off and disconnect the spark plug connector.
2. Adjust the height to the highest position as described above.
3. Attach transportation guards, if applicable.
4. Always transport the product by its handle (1).
5. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
6. Secure the product to prevent it from slipping or falling over, loss of fuel, damage and injury.

Troubleshooting

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore check the product using this section. In most cases the problem can be solved quickly.



WARNING! Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an the problem yourself.

Problem	Possible cause	Solution
1. Engine does not start	1.1 Not enough fuel in fuel tank 1.2 Spark plug is wet 1.3 Spark plug is damaged 1.4 Spark plug connector lose 1.5 Throttle lever not in the correct position for the prevailing conditions 1.6 Air filter is dirty 1.7 Spark plug loose 1.8 Spark plug gap is incorrect 1.9 Carburettor is flooded with fuel 1.10 Faulty ignition module	1.4 Attach properly 1.5 Move throttle lever to correct position 1.6 Clean air filter 1.7 Tighten spark plug 20 N m 1.8 Set gap between electrodes at 0.457~0.61mm 1.9 Remove air filter and pull recoil starter handle continuously until carburettor clears itself and install air filter 1.10 Contact the service agent
2. Engine stops	2.1 Not enough fuel in fuel tank 2.2 Cutting device is blocked	2.1 Add fuel 2.2 Remove blockage
3. Engine difficult to start or loses power	3.1 Dirt, water or stale fuel in the tank 3.2 Vent hole in fuel tank cap is clogged 3.3 Air filter is dirty	3.1 Drain fuel and clean tank. Fill tank with clean, fresh fuel 3.2 Clean or replace fuel tank cap 3.3 Clean air filter
4. Engine operates erratically	4.1 Spark plug is defective 4.2 Spark plug gap is incorrect 4.3 Air filter is dirty	4.1 Install new, correctly gapped plug 4.2 Set gap between electrodes at 0.457~0.61mm 4.3 Clean air filter
5. Engine idles poorly	5.1 Air filter is dirty 5.2 Air vents are clogged 5.3 Cylinder fins are blocked	5.1 Clean air filter 5.2 Remove debris from vents 5.3 Remove debris from cylinder
6. Engine skips at high speed	6.1 Gap between electrodes of spark plug is too close	6.1 Set gap between electrodes at 0.457~0.61mm

Problem	Possible cause	Solution
7. Engine overheats	7.1 Air vents are clogged 7.2 Incorrect spark plug	7.1 Remove debris from vents 7.2 Install correct spark plug and cylinder fins on engine
8. Unsatisfactory results	8.1 Cutting device dull 8.2 Cutting material exceeds capacity 8.3 Cutting height is incorrect	8.1 Replace with a new one 8.2 Only cut materials acc. to the capacity of the product. 8.3 Adjust cutting height
9. Excessive vibration/noise or exhaust	9.1 Cutting device is dull/damaged 9.2 Bolts/nuts are loosen 9.3 Petrol/oil is incorrect	9.1 Replace with a new one 9.2 Tighten bolts/nuts 9.3 Empty out unused petrol/oil and refill with the correct petrol/oil

Recycling and disposal

1. Old products are potentially recyclable and do not, therefore, belong in your household rubbish. You are requested to assist us and our contribution to saving resources and protecting the environment by handing in this product at an equipped collection centre (if there is one available).
2. Petrol, oil, used oil, a mixture of oil and petrol and objects soiled with oil e.g. cleaning cloths do not belong in the household rubbish. Dispose of oil-contaminated items in accordance with the local guidelines and hand them in at recycling centres.
3. The product comes in a package that protects it against damage during shipping. Keep the package until you are sure that all parts have been delivered and the product is function properly. Recycle the package afterwards.

After Sale Service Please Call



Hotline : 01904 727514
Email: diy@coreservice.co.uk

Mon-Fri
9am-5pm
Sat-Sun
11am-4pm

SAN: 0381801816ZC

EC declaration of conformity

We

Kingfisher International Products Limited

3 Sheldon Square

London W2 6PX

United Kingdom

Declare that the product

Petrol Lawnmower FPLMP450BS-HP-2 Serial number: from 000001 to 999999

Complies with the essential health and safety requirements of the following directives:

The Machinery Directive 2006/42/EC

- EN ISO 5395-1:2013+A1:2018
- EN ISO 5395-2:2013+A1:2016+A2:2017

The EMC Directive 2014/30/EU

EN ISO 14982:2009

The Outdoor Noise Directive 2000/14/EC & 2005/88/EC

- Measured Sound Power Level: 91.6 dB(A)
- Guaranteed Sound Power Level: 96 dB(A)
- EN ISO 3744:1995; ISO 11094:1991
- Certified registration number: GB/1067/6452/18 Issue 1
- Test report No: SHES180700812361
- Conformity assessment procedures: Annex VI of the directive
- Notified body: 1067, AV Technology Ltd

Unit 2 Easter Court Europa Boulevard Warrington, Cheshire, WA5 7ZB, United Kingdom

- The Regulation of Non-Road Mobile Machinery Emissions (EU) 2016/1628, and its supplemented regulations
- Engine model: 08P5 (_BSXS.1251VC)

Authorized Signatory and technical file holder:

Kingfisher International Products Limited

3 Sheldon Square

London W2 6PX

United Kingdom

Lisa Davis/Group Quality Director

Date: 30.09.2018

