



# YARD FORCE®

LAWN & GARDEN EQUIPMENT


LH A20BN

N0E-10ET-10.8

GB

## CORDLESS 4 IN 1 TOOL

Original Instructions

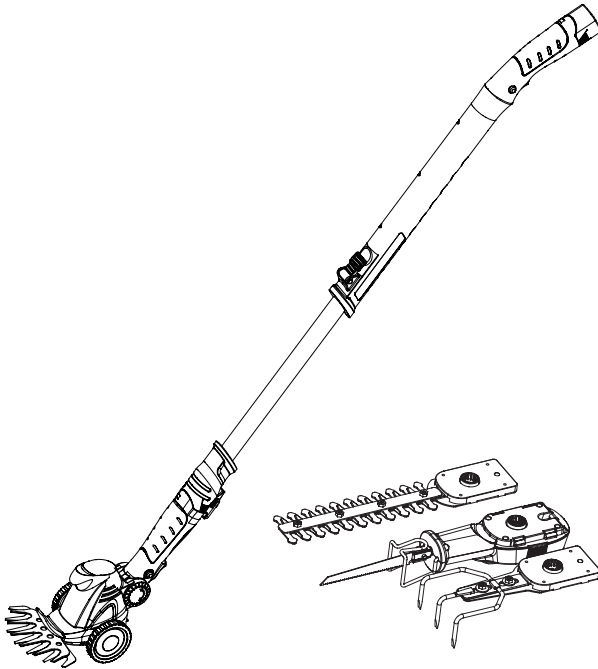

Watching Video?



**READ & UNDERSTAND  
INSTRUCTION MANUAL**



**Save all warnings and instructions  
for future reference.**

# YARD FORCE

## LH A20BN Original Instruction

### CONTENT

Intended use	04
General safety warnings	04
Product safety warnings	09
Symbols	15
Technical data	19
Description of product	21
Operation	22
Maintenance and storage	25
Troubleshooting	26
CE declaration	27



## INTENDED USE

This multi-tool is designed for the cutting and trimming of hedges, bushes and ornamental shrubs in the domestic environment.

For safety reasons it is essential to read this entire instruction manual before initial operation and to observe all the instructions inside.

This product is intended for private domestic use only, not for commercial trade use. It must not be used for any purposes other than those described.

## GENERAL SAFETY WARNINGS



**WARNING:** Read all safety directions and instructions.

Omissions in the compliance with safety directions and instructions can cause electrical shock, fire and/or severe injuries.

Retain all safety directions and instructions for future use.

The term “Power Tools” used in the safety instructions refers to mains-operated power tools (with power cord) and to battery operated power tools (without power cord).

### Work area safety

- a). **Keep work area clean and well lit.** Cluttered or dark areas increase the chances of accidents.
- b). **Do not operate power tools in explosive atmospheres, in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c). **Keep children and bystanders away while operating a power tool.** Distractions can cause momentary loss of control.

## GENERAL SAFETY WARNINGS

### Electrical safety

- a). **Power tool plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b). **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c). **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d). **Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e). **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f). **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

### Personal safety

- a). **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do

## GENERAL SAFETY WARNINGS

not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

- b). Use personal protective equipment.** Always wear eye protection. Protective equipment such as dust masks, nonskid safety shoes, hard hats, and hearing protection can all reduce personal injury.
- c). Prevent unintentional starting.** Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- d). Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e). Do not overreach.** Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f). Dress properly. Do not wear loose clothing or jewellery.** Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g). If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** The use of dust collection can reduce dust-related hazards.

## GENERAL SAFETY WARNINGS

### Power tool use and care

- a). Do not use excessive force while using the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and more safely at the rate for which it was designed.
- b). Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c). Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d). Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate.** Power tools are dangerous in the hands of untrained users.
- e). Maintain power tools.** Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect its operation. If damaged, have the power tool repaired before use. Many accidents are caused due to poor maintenance.
- f). Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g). Use the power tool, accessories and tool bits etc.** in accordance with these instructions, taking into account the working conditions and the work to

## GENERAL SAFETY WARNINGS

be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

### Battery tool use and care

- a). **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b). **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c). **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d). **Under intensive use, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water.** If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

### Service

- a). **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

## GENERAL SAFETY WARNINGS

### Hedge trimmer safety warnings:

- a). **Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving.** Make sure the switch is off when clearing jammed debris and material. A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- b). **Carry the hedge trimmer by the handle with the cutter blade stopped.** When transporting or storing the hedge trimmer always fit the cutting device cover. Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.
- c). **Keep cable away from cutting area.** During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.

## PRODUCT SAFETY WARNINGS

### Special Safety Directions for cordless multi-tools

- a). **Keep all body parts away from the blade. Do not attempt to remove clippings while the blade is operating or to hold on to material which is to be cut.** Only remove trapped clippings when the tool is switched off. One moment of carelessness when using the hedge trimmer can lead to severe injury.
- b). **Carry the multi-tool at the handle with an idle blade.** Always pull on the protective cover during transport and storage of the hedge trimmer. Careful handling of the tool reduces the risk of injury from the blade.
- c). **Hold the power tool only on the insulated handle surfaces, as the cutting blade may come into contact with concealed power cables.** Contact between the cutting blade and a live cable may render metallic components live and result in an electric shock.
- d). **Before the work, search the hedge for concealed objects, e.g. cable etc.** To avoid damaging the equipment.
- e). **Hold the hedge trimmer correctly, e.g. with both hands on the handles, if there are two handles.** Loss of control of the equipment may result in injuries.
- f). **Wear suitable clothing and work clothes when working with the equipment.** Do not hold the equipment by the cutting blade or lift it on the cutting blade. Contact with the cutting blade can cause injuries.

### Further safety directions

## PRODUCT SAFETY WARNINGS

- a). **Only switch on the tool when hands, feet and all other body parts are at a secure distance to the tool.** Standing too close can increase risk of injury from cuts.
- b). **Take care not to injure your hands and feet with the cutting elements.**
- c). **Remove the power supply unit before working with the equipment.**
- d). **Do not use the hedge cutter in combination with the telescopic shaft.**
- e). **The tool is designed to shape hedges. Do not use the tool to cut branches, hard wood or other.** This helps to avoid damaging the equipment, and also reduce injury to yourself from debris.
- f). **Do not attempt to dislodge a blocked/trapped blade before switching the tool off.** Always make sure the tool is turned off, there is a high risk of injury when the tool is switched on.
- g). **Always switch off the tool and remove the battery (if applicable)**
  - If you leave the tool unsupervised
  - Before removing jams
  - Before control- maintenance- or cleaning tasks
  - If you have come into contact with a foreign object
  - Whenever the machine starts to vibrate uncontrollably.
- h). **Never allow children, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or people unfamiliar with these instructions to use the machine.** Local regulations may restrict the age of the operator.

## PRODUCT SAFETY WARNINGS

- i). Never operate the machine with defective guards or shields, or without safety devices, or if the cord is damaged or worn.
- j). Do not connect a damaged cord to the supply or touch a damaged cord before it is disconnected from the supply as damaged cords can lead to contact with live parts.

### Special safety directions for battery-operated tools

- a). **Do not expose the battery to strong sunlight or a hot environment over a long period of time.** Heat damages the battery and there is a risk of explosion.
- b). **Allow a hot battery to cool before charging.**
- c). **Do not open up the battery.** Risk of short circuiting, and fumes may be emitted that irritate the respiratory tract. In the case of inhaling, ensure you get fresh air quickly and seek medical assistance in the event of discomfort.

### Safety directions for the battery charger

- a). **The charger must only be connected to a mains socket via a residual-current circuit breaker (RCD) with a rated leakage current of not more than 30 mA.**
- b). **Children should not play with the appliance.**  
Cleaning and maintenance should not be carried out by children without adult supervision.
- c). **To charge the battery, use the charger supplied only.** Risk of fire and explosion. This ensures that the


## PRODUCT SAFETY WARNINGS

- safety of the device is maintained.
- d). **Before each use, check the charger, cable and plug and have them repaired by qualified professionals and only with original parts.** Do not use a defective charger and do not open it up yourself. This ensures that the safety of the device is maintained.
- e). **Ensure that the mains voltage matches the specifications on the charger rating plate.** Risk of electric shock.
- f). **Disconnect the charger from the mains before closing or opening connection to the battery / power tool / device.** This ensures that the battery and charger are not damaged.
- g). **Keep the charger clean and away from wet and rain. Do not use the charger outdoors.** Dirt and water increase the risk of electric shock.
- h). **Operate the charger only with the appropriate original batteries.** Charging other batteries may result in injuries and risk of fire.
- i). **Avoid mechanical damage to the charger.** This can result in internal short circuits.
- j). **Do not operate the charger on a combustible surface (e.g. paper, textiles).** Risk of fire due to heating during charging.
- k). **If the power cable for this equipment is damaged, it must be replaced by the manufacturer, a customer service agent of the same or a similarly qualified person in order to prevent hazards.**
- l). Do not use the charger to charge non-rechargeable batteries.

## SYMBOLS

### SAFETY SYMBOLS

The purpose of safety symbols is to alert your attention to possible dangers. The safety symbols and their explanation require your careful attention and full understanding. The symbol warnings do not, by themselves, eliminate any danger. The instructions and warnings they give are no substitutes for proper accident prevention measures.


 **WARNING:** Be sure to read and understand all safety instructions in this operator's manual, including all safety alert symbols such as "**DANGER**," "**WARNING**," and "**CAUTION**" before using this tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.


**SAFETY ALERT SYMBOL:** Indicates **DANGER**, **WARNING**, or **CAUTION**. May be used in conjunction with other symbols or pictographs.


### SYMBOL MEANING

This page explains the safety symbols that may appear on this product. Make sure you read, understand and follow all instructions on the machine before attempting to assemble and operate.

## SYMBOLS


 Read the user manual before using the machine.


 Warning! Danger!


 You must always wear safety goggles to guard your eyes from flying debris, ear plugs or similar ear defenders to protect your hearing and respiratory protection to protect breathing.


 Wear protective mask.


 IMPORTANT! Wear gloves to protect your hands.

 Wear safety boots to protect your feet.

 Guaranteed sound power level value in 87dB.

 WEEE symbol. Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

 Batteries contain Li-ion waste. Do not dispose of batteries as unsorted municipal waste with household waste. Check with your Local Authority or local store for recycling advice.

 Do not expose the product to rain or wet conditions.



## SYMBOLS



Objects thrown by the product could hit the user or bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is in operation.



Touch parts only when they are completely stopped.



Caution! Watch for falling objects.



Keep hands away from blades.



Warning! The device is not protected against electric shocks when it touches high-voltage lines! Maintain a safe distance of 10m from live electrical lines.

## SYMBOLS

### Symbols on the battery pack



Do not dispose of batteries. Return exhausted batteries to your local collection or recycling point.



Do not dispose of a battery pack in water!



Do not set on fire to dispose!



Do not expose the battery pack to sunlight or increased temperatures!



Batteries contain Li-ion waste. Do not dispose of batteries as unsorted municipal waste with household waste. Check with your Local Authority or local store for recycling advice.



Before use, carefully read through the user manual.

## SYMBOLS

### Symbols on the charger



Before use, carefully read through the user manual.



The charger is for indoor use only.



Protection class II.



Pole orientation.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was undertaken.



WEEE symbol. Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.


## TECHNICAL DATA

Mower Type	LH A20BN
Main voltage	10.8 V d.c. Lithium-Ion
Degree of Protection	IP X1
Cutting width (shrub trimming blade)	160 mm
Cutting length (grass trimming blade)	200 mm
Cutting length (reciprocating blade)	80 mm
Cutting width (mini scarifier blade)	100 mm
Battery type	ET-D1081
Battery capacity	1.5 Ah
Charger type	DC11-1260500
Charger input	100-240 V ~ , 50-60Hz 15W
Charger output	12.6 V d.c. 500 mA
Charging time	3 h
Protection class of charger	II
Net weight	2.94 kg

## DESCRIPTION OF PRODUCT


### Parts description

1. Working angle adjustment button
2. Shrub trimming blades
3. Tube lock lever
4. Auxiliary wheels
5. Safety button on the main body
6. On/Off trigger on the main body
7. Tube height adjustment lever
8. Safety button on the telescopic swivel handle
9. On/Off trigger on the telescopic swivel handle
10. Battery pack

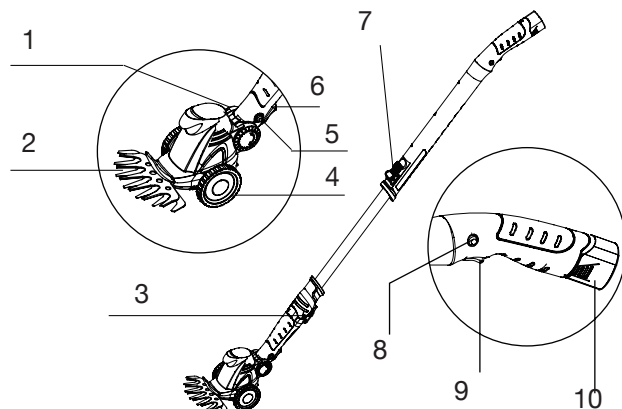

### Checking the box contents

- a. Battery pack
- b. working head with hedge trimmer
- c. Mini scarifier blade
- d. Shrub trimming blade
- e. Auxiliary wheels
- f. Reciprocating blade
- g. Manual
- h. Telescopic swivel handle
- i. Charger

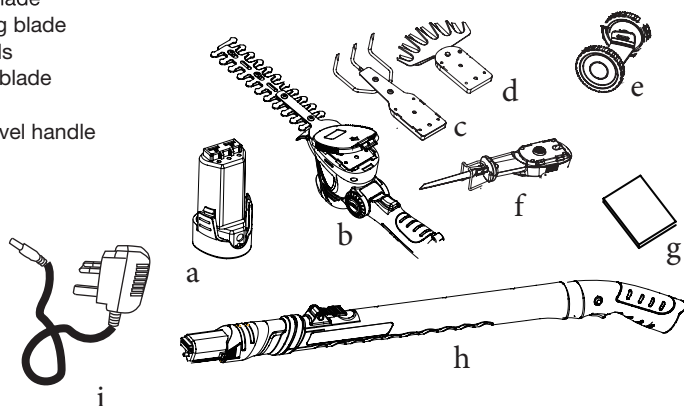

## OPERATION

### Charging the battery

Warning! Do not use other battery chargers.

Observe correct mains voltage, it should be between 230-240V~ 240V. Do not continue to press the On/ Off switch after the machine has been automatically switched off. The battery can be damaged.

The battery is supplied partially charged. To ensure full capacity of the battery, completely charge the battery in the battery charger before using your power tool for the first time.


1. Connect the battery with charger. The Indicator shows red when normal charging.
2. The Indicator will show green when battery pack has been fully charged.

### Choose the required blades

The blade can be changed rapidly and expediently without any tools. To change the blade, you must remove the blade cover at first.


1. Hold the machine in one hand as showed in the upper figure. Lever the retainer upwards with your thumb and forefinger of another hand.
2. Hold the blade cover firmly and pull it backwards.
3. Remove the blade cover upwards.
4. Take off the blades and install another blades.

**Warning!** DO NOT operate the switch before the blade cover is installed. Risk of injury!

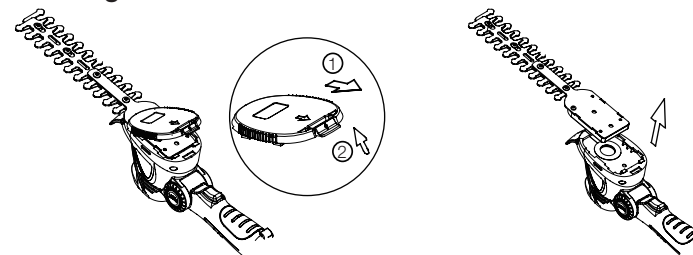

Install the blade cover following the steps.


1. Insert the blade cover align the two lines marked in the upper figure.
2. Push the blade cover forwards until the retainer fits in a suitable position.

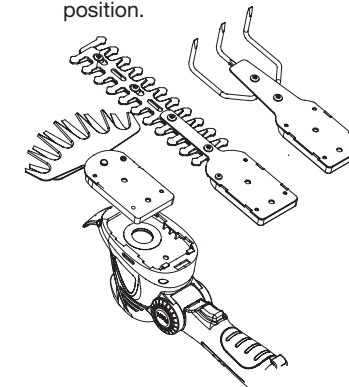

## OPERATION


### Using the reciprocating saw

1. Remove the equipped blade as previously described
2. Hold down the left button, and then forced down can remove the reciprocating saw blade
3. Install the blade cover following the steps as shown in the picture.
  - make sure the hook insert chassis.
  - According to the position the direction of the reciprocating saw blade assembly down by force.

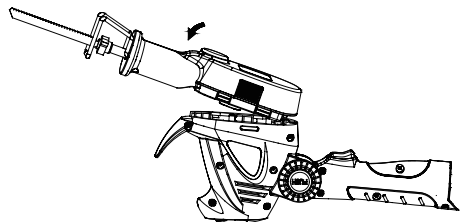

### Assembly and disassembly the battery pack

1. Always release the On/Off switch before insertion or removal of the battery pack.
2. To remove the battery pack, withdraw it from the tool while pressing the spring buttons 6 on both sides of the cartridge.
3. To insert the battery pack, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Always insert it all the way until it locks in place with a little click. If not, it may accidentally fall out of the tool, causing injury to you or someone around you.

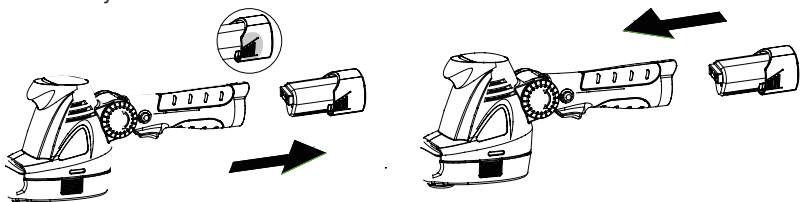

**NOTE:** One Battery pack has been assembled on the tools in original packaging.

**NOTE:** Do not use force when inserting the battery pack. If the cartridge does not slide in easily, it is not being inserted correctly.

### Operating your tools

#### Cutting without swivel handle:

Warning! Never remove or bridge the switching devices.

The starting lockout prevents your tools from being switched on unintentionally.


## OPERATION

#### To switch on:

1. Push lock-off button forward and depress the switch trigger.
2. Release the lock-off button again.

#### To switch off:

Release the on/off switch.

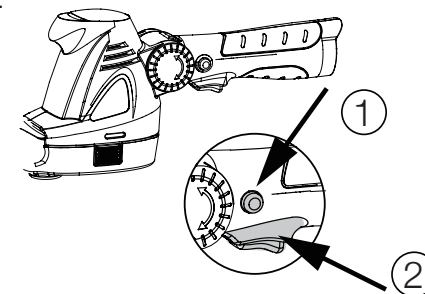


#### Cutting with swivel handle:

##### Fitting/removing the telescopic swivel handle

Fitting the telescopic swivel handle assembly:

1. Take out the battery pack
2. Guide the swivel handle assembly into the handle holder until the lock engages.

**NOTE:** The starting lockout and ON button on the tools no longer function when the swivel handle is mounted.

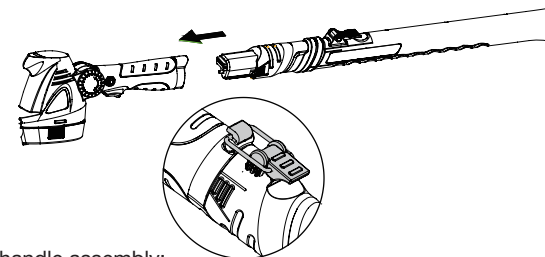

Removing the telescopic swivel handle assembly:

Press the release button and pull out the swivel handle assembly.

##### Fitting/removing the wheels assembly


Fitting the wheels:

Push the wheel assembly upward into the grass shear until both catches click into suitable place.

Removing the wheels:

Pull the wheel assembly downwards and remove.

**WARNING:** Do not turn on the switch when you fit or remove the wheels assembly. This can cause a serious injury.

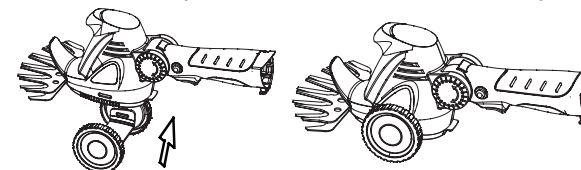


## OPERATION

### Adjust the height of the telescopic tube

The telescopic handle is fully height adjustable and can be adapted to suit your height.

**Warning:** Do not turn on the switch when you adjust the swivel handle. This can cause a serious injury.


1. Attach the swivel handle.
2. Open the lock button, one hand holding the tube the other hand holding the handle pull up
3. Pull the pole to the appropriate length, press the lock button, lock the tube intact.
4. Push lock-off button forward and press switch.

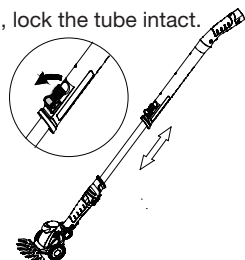

### Adjust the working head angle


Hold the handle tightly. Press the lock button up and then turn the cutter head to the desired position. Release the lock button again and check whether the cutter head is locked in place.

**Warning!** Remove the battery pack before adjusting or changing the moveable blade or cleaning.

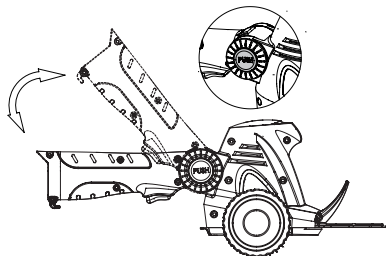

### Insert the battery pack

- Align the tongue on the battery cartridge with the groove in the housing and slip it into place.

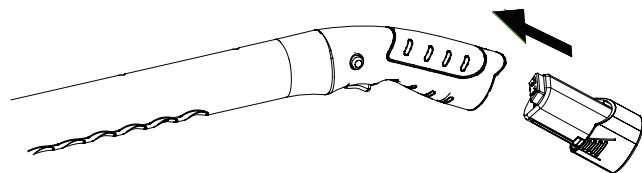

### To switch on:

1. Push lock-off button forward and depress the switch trigger.
2. Release the lock-off button again.

### To switch off:

Release the on/off switch.

## MAINTENANCE AND STORAGE

### Maintenance

1. Always switch the product off, disconnect the battery pack and let the product cool down before performing inspection, maintenance and cleaning work.
2. Keep the product clean. Remove debris from it after each use and before storage, using a soft damp cloth.
3. Regular and proper cleaning will help ensure safe use and prolong the life of the product.
4. Inspect the product before each use for worn or damaged parts. Do not operate if you find broken or worn parts.

**WARNING!** Only perform repairs and maintenance work according to these instructions. All further works must be performed by a qualified specialist.

### Cleaning

Before cleaning, inspecting or repairing your unit, make sure that the motor has stopped and is cool. Disconnect the battery pack to prevent accidental starting.

Note! To ensure the best performance of your product, it is important to keep it clean. Always clean your tools immediately after use.

Do not allow grass cuttings and other debris to become dry and hard on any of the product surfaces. This will directly affect the cutting performance. Never clean the product with a water jet or high pressure cleaner. The motor must remain dry. Do not use aggressive cleaning agents such as cold cleaner or petroleum ether.

1. Clean the product with a dry cloth. Use a brush for areas that are hard to reach.
2. Oil the cutting tool. Spray oil on all sides of the blades.

**NOTE!** Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they may cause damage to the cosmetic surfaces.

### Transportation

1. Switch the product off and disconnect the battery pack from the machine before transporting it anywhere.
2. Attach transportation guards, if applicable.
3. Always transport the product by its handle. When lifting the product use the transportation handle as an aid.
4. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
5. Secure the product to prevent it from slipping or falling over.

### Storage

1. Clean the product as described above and disconnect the battery pack.
2. Store the product and its accessories in a dry, frost-free area.
3. Always store the product in a place that is inaccessible to children. The ideal storage temperature is between 10°C and 30°C.
4. We recommend using the original packaging for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

## TROUBLESHOOTING

Fault	Possible cause	Troubleshooting
Multi-tool fails to start	Battery pack discharged?	Charge the battery
	Battery pack defective?	Contact service center
	Is the device defective?	Contact service center
poor cutting performance	blade is blunt	ask service center to buy a new one

## CE DECLARATION

To the provisions of Council Directives

We  
**SUMEC UK Co.,Ltd.**  
Unit A&B, Escrick Business Park  
Escrick, York YO 19 6FD

**Declare that the product:**

Machine Description: Cordless mini grass & hedge trimmer  
Machine Type: LH A20BN / N0E-10ET-10.8  
Function: Muti-Cutting

**Complies with the essential health and safety requirements of the following directives:**

EC Machinery Directive: 2006/42/EC

EC Directive of Electromagnetic Compatibility 2014/30/EC

EC Noise Directive 2000/14/EC & 2005/88/EC

WEEE Directive (2012/19/EU)

RoHS Directive (2011/65/EU)

**Standards and technical specification referred to :**

EN 55014-1:2017

EN 55014-2:2015;

EN 60745-2-15:2009+A1:2010

EN 60745-1:2009+A11:2010


EN 50636-2-94:2014;

EN62233:2008

Authorized Signatory

Date: 18.02.2021

Signature: \_\_\_\_\_

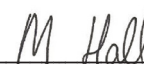

Place: York

Name: Mariana Hall

General Manager

SUMEC UK

Unit A&B Escrick Business Park

Escrick, York

YO19 6FD

