

Electric Outdoor Wall Heater

Assembly Instructions - Please keep for future reference

950/7463



Dimensions

Width - 50 cm

Depth - 16 cm

Height - 36 cm

Important - Please read this instructions fully before starting assembly


If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800.
Please visit the website www.argos.co.uk for more information.

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT.
[Sainsbury's \(NI\) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.](#)
Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW.
Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.
Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne,
County Meath, Ireland

Parts Description

Please check you have all the panels listed below

1. Heating Element Assembly
2. Body
3. Pull Switch
4. ST4*35mm x 4
5. Position Indication Plate
6. Wall plugs x 4

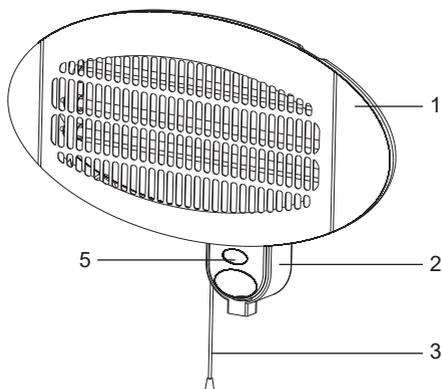

Warning Symbols

WARNING: In order to avoid overheating, do not cover the heater.



Do not cover

Warnings

- This electrical appliance complies with technical safety and electromagnetic compatibility standards.
- Never touch your heater when in operation (risk of burns).
- Never touch the heater with a wet hands.
- Never rotate the heater during operation. To change the angle of the heater, we waiting at least 15 minutes after the heater has been turned off to allow the heater to cool down.
- Never place anything on the heaters safety guard (e.g. Towel) as this could lead to the heater overheating or a fire.
- Never use your appliance to dry washing.
- Although the heating element has stopped glowing, it may still be hot and potentially dangerous. Check that the selection indicator (5) is in position off before taking any action.
- Switch off your appliance:
 - After use
 - In the event of malfunction
 - Before cleaning it.
- Never operate your appliance if it has fallen over.
- Never dismantle your appliance. An incorrectly repaired appliance maybe dangerous to the user. If you encounter any problems seek advice from a suitably qualified professional.

Warnings

- The warranty will be void in the event of damage arising from improper use.
- Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
- This movable appliance is designed for use in gardens, and can be used indoor and outdoor. The warranty will not apply to appliances used for professional usage. Although the heater may be used outdoors, the main plug must only be connected to the supply indoors.
- The heater is provided with an anti-tilt switch will switch off the heater if it is overturned, and will switch it on again automatically when it is restored to its upright position.
- The instruments in the minimum installation height 2.0 meters.
- This electrical appliance complies with technical safety and electromagnetic compatibility standards.
- Do not cover heater.
- This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.(IEC 60335-2-30)
- This heater must not be used on or near combustible materials, such as wooden decking or fencing.

Before Using

Before using the appliance at the first time, ensure that your mains voltage corresponds to voltage indicated on the appliance. **It is a class I appliance and must be earthed.**

Safety


CAUTION: Before fitting or removing the appliance, ensure that the heater's power line supplying the heater is disconnected. Check that the power line is connected to a 30A differential circuit breaker.

- This appliance is designed for use in gardens ,and any room in your house, including those where there is a risk of splashing. The installation and use of your appliance must comply with the applicable standards in your country.
- When it is switch on, an electrical heating appliance reaches very high temperature liable to cause burns. Make sure that all other users are aware of the risks.
- If you have any doubts concerning the installation process for this heater, please consult a qualified electrician.
- Children, the elderly and the infirm may not always be aware of the danger involved in using electrical appliances. Never allow this appliance to be used without supervision.
- The appliance must be positioned so that the plug is accessible.
- Do not use if the cord is damaged.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not place the appliance close to curtains and other combustible materials.

Appliance location



Step 1

Please pay attention during installation: the distance between the top of the product and ceiling should be more than 0.5m, the distance between the side of the product and corner should be more than 0.5m, the distance between the bottom of the product and floor should be more than 2m. In summary, To ensure safe use of the product. (As shown on the right)

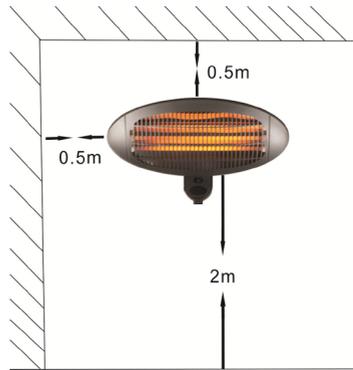

Step 2

DO NOT install inversely on a wall or on a ceiling. Heater MUST ONLY be operated when correctly fixed to a wall.

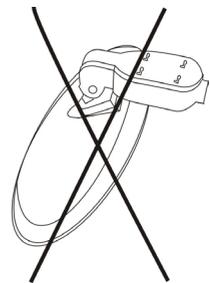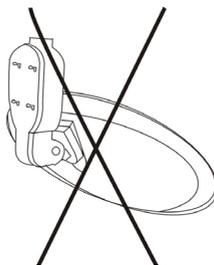


Fitting Instructions

WARNING! Before installing your appliance, you must disconnect the electrical supply at the circuit breaker.


Step 1

Punch corresponding holes on the wall which are the same as the back of the product wall-mounted holes. (As shown on the right)

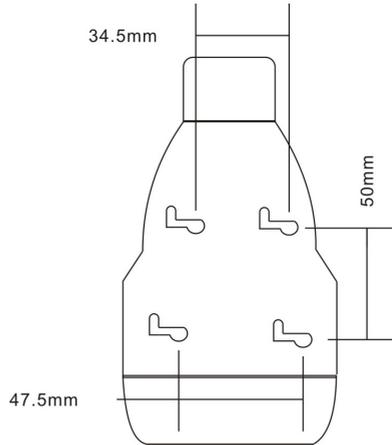

Step 2

Use the diameter 8 drill to punch holes on the wall where is already marked. (As shown on the right)

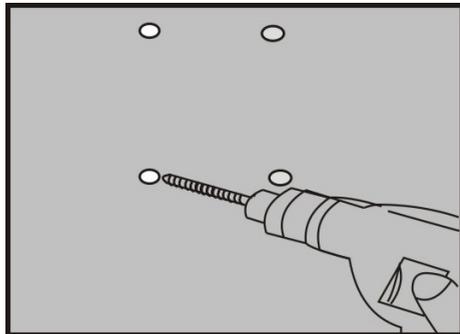


Fitting Instructions

Step 3


Put the 4 plastic expansion screws into the holes of the wall one by one, make the plastic expansion screws' outside diameter and the wall are flush. (As shown on the right)

IMPORTANT- please ensure wall type is strong enough

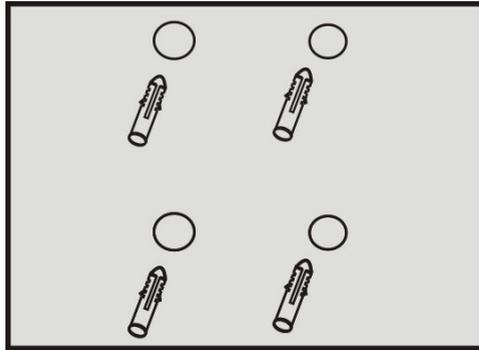

Step 4


Fasten the four ST4*35mm screws into the plastic expansion screws one by one, make the 4-5mm of screws higher than metope. (As shown on the right)

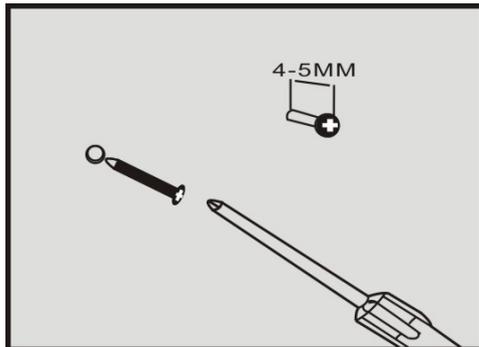

Fitting Instructions


Step 5

To wall mount the heater present the back of the heater to the wall and insert the screw heads into the corresponding holes on the back of the heater. Move the product to the left to secure the screw heads into the keyhole slots.

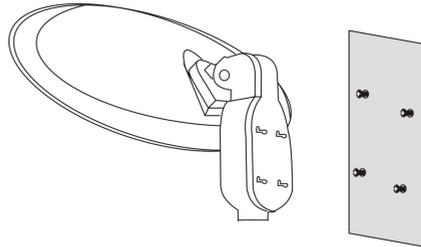

Step 6

The head of the heater can be tilted to direct heat downwards. DO NOT ADJUST THE HEAD WHILE IT IS HOT

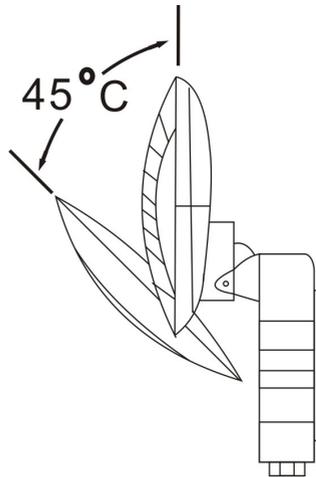

WARNING! Before installing your appliance, you must disconnect the electrical supply at the circuit breaker.

Operation

The appliance is switched on by means of the pull switch . The slight vibration noticeable when the appliance is switched on will stop after a few seconds.

Specification

- Power rate:2000W
- Cable length:1.5m
- Position 0: Stop
- Position 1: 650W (normal power)
- Position 2: 1300W (intermediate power)
- Position 3: 2000W (full power)



The product complies with the applicable UK directives and an evaluation method of conformity for these directives was done.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or local store for recycling advice.



Read the instruction manual before operating this machine.



The product complies with the RoHS directives and an evaluation method of conformity for these directives was done.



The product complies with IP34 standard.

Maintenance

Your appliance does not require any particular maintenance. However, in the event of a malfunction, **please consult a suitably qualified electrician.**

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**. Please visit the website www.argos.co.uk for more information.

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT.

Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.

Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW.

Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.

Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland