

# Electric Patio Heater

Assembly Instructions - Please keep for future reference

955/8319



## Dimensions

Width - 210 cm

Depth - 50 cm

Height - 50 cm

**Important - Please read this instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800.  
Please visit the website [www.argos.co.uk](http://www.argos.co.uk) for more information.

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT.

Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.

Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW.


Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.

Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne,  
County Meath, Ireland

# Parts Description

Please check you have all the panels listed below

- 1 Heating Element Assembly
- 2 Knob
- 3 Body
- 4 Position Indication Plate
- 5 Pull Switch
- 6 Tube Cover
- 7 Upper Post Assembly
- 8 3 x M5\*6 Screw
- 9 Middle Post
- 10 3 x M5\*6 Screw
- 11 Lower Post Assembly
- 12 Clamp
- 13 Power Cord
- 14 Base Cover
- 15 4 x M6\*30 Screw
- 16 Base Assembly

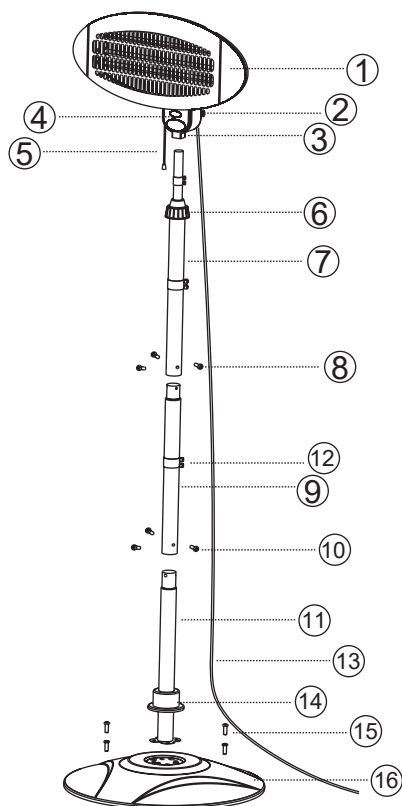

# Warning Symbols

**WARNING:** In order to avoid overheating, do not cover the heater.



**Do not cover**

## Warnings

- This electrical appliance complies with technical safety and electromagnetic compatibility standards.
- Never touch your heater when in operation (risk of burns).
- Never touch the heater with wet hands.
- Never rotate the heater during operation. To change the angle of the heater, wait at least 15 minutes after the heater has been turned off to allow the heater to cool down.
- Never place anything on the heaters safety guard (e.g. Towel) as this could lead to the heater overheating or a fire.
- Never use your appliance to dry washing.
- Although the heating element has stopped glowing, it may still be hot and potentially dangerous. Check that the selection indicator (5) is in position off before taking any action.
- Switch off your appliance:
  - After use
  - In the event of malfunction
  - Before cleaning it.
- Never operate your appliance if it has fallen over.
- Never dismantle your appliance. An incorrectly repaired appliance maybe dangerous to the user. If you encounter any problems seek professional advice from a suitable qualified professional.

# Warnings

- The warranty will be void in the event of damage arising from improper use.
- Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
- This movable appliance is designed for use in gardens, and can be used indoor and outdoor. The warranty will not apply to appliances used for professional usage. Although the heater may be used outdoors, the main plug must only be connected to the supply indoors.
- The heater is provided with an anti-tilt switch will switch off the heater if it is overturned, and will switch it on again automatically when it is restored to its upright position.
- Only use on a flat and level surface. Do not place on grass or gravel.
- This electrical appliance complies with technical safety and electromagnetic compatibility standards.
- Do not cover heater.
- This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.(IEC 60335-2-30)
- This heater must not be used on or near combustible materials, such as wooden decking or fencing.

## Before Using

Before using the appliance at the first time, ensure that your mains voltage corresponds to voltage indicated on the appliance. **It is a class I appliance and must be earthed.**

## Safety

**CAUTION:** Before fitting or removing the appliance, ensure that the heater's power line supplying the heater is disconnected. Check that the power line is connected to a 30A differential circuit breaker.


- This appliance is designed for use in gardens ,and any room in your house, including those where there is a risk of splashing. The installation and use of your appliance must comply with the applicable standards in your country.
- When it is switch on, an electrical heating appliance reaches very high temperature liable to cause burns. Make sure that all other users are aware of the risks.
- Children, the elderly and the infirm may not always be aware of the danger involved in using electrical appliances. Never allow this appliance to be used without supervision.
- The appliance must be positioned so that the plug is accessible.
- Do not use if the cord is damaged.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not place the appliance close to curtains and other combustible materials.

# Assembly

- Before installing your appliance, you must disconnect the electrical supply at the circuit breaker.


## Step 1

To fix the base plate to the ground. Take 8 pieces of M6\*30 and separate the base plate and base assembly into two pieces. Take 3 expansion screws, line up with the corresponding holes. Take 3x M4\*50 screws to fix into the ground. Now cover the base assembly. Take 4x M6\*30 to fix the base assembly to the base plate. See diagram.

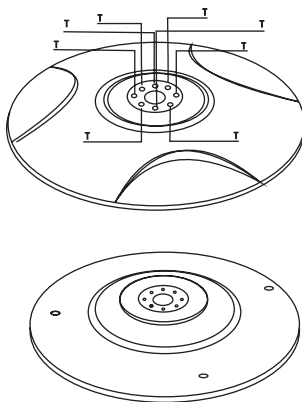

## Step 2


Insert the lower post assembly (11) into the base assembly (16) and then fix it tightly using 4 x M6\*30 screw, and insert the clamp (12) into the lower post (11). See diagram.

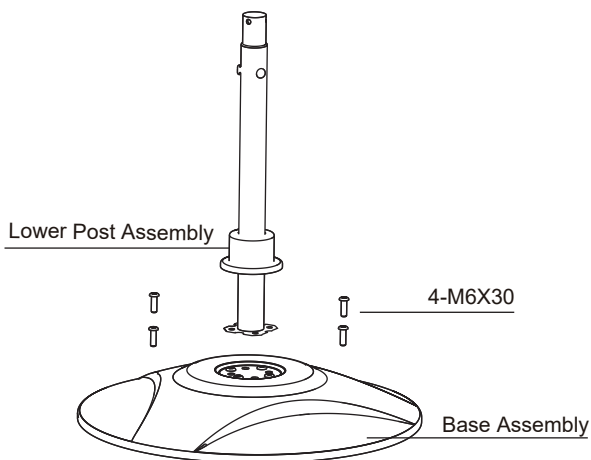

# Assembly


## Step 3

Join the lower post assembly and the middle post (9) together with 3-M5X6 screw. See diagram.

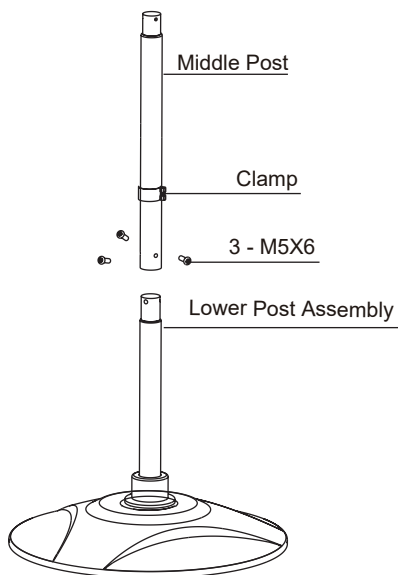

## Step 4


Join the upper post assembly and the middle post (9) together with 3-M5X6 screw. See diagram.

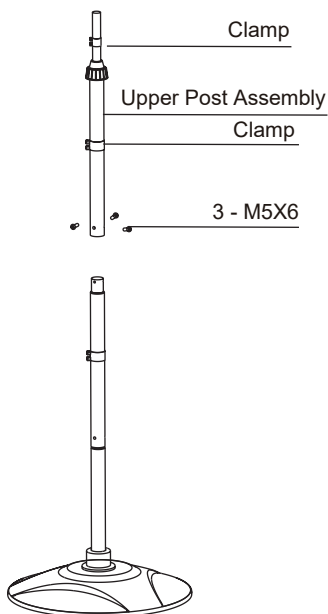

# Assembly


## Step 5

Join the heating element assembly (1) and the upper post assembly (7) together, then fix them tightly by rotating the knob(2), and put the power cord(13) supply into the clamp(12). See diagram.

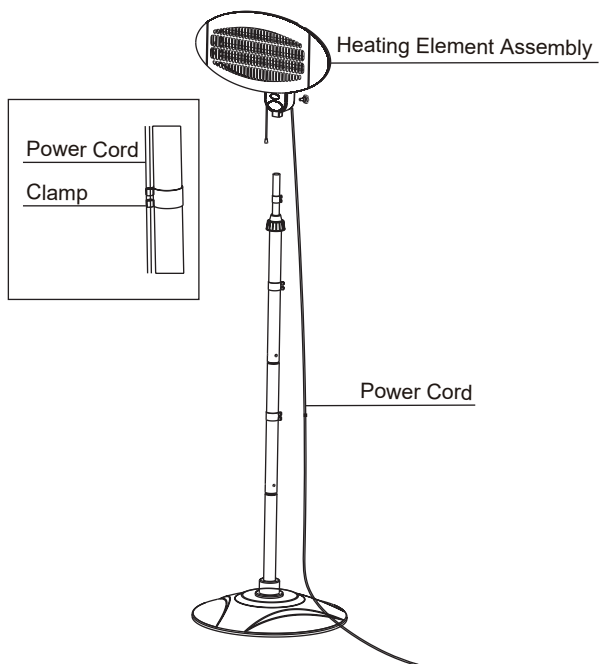

## Step 6

The head of the heater can be tilted to direct heat downwards.  
**DO NOT ADJUST THE HEAD WHILE IT IS HOT**

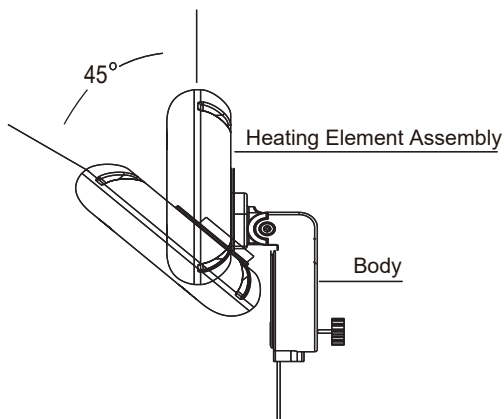



# Operation

The appliance is switched on by means of the pull switch (5). The slight vibration noticeable when the appliance is switched on will stop after a few seconds.

## Specification

- Power rate: 2000W
- Cable length: 1.8m
- Height adjustment: 1.8m~2.1m
- Position 0: Off
- Position 1: 650W (normal power)
- Position 2: 1300W (intermediate power)
- Position 3: 2000W (full power)



The product complies with the applicable UK directives and an evaluation method of conformity for these directives was done.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or local store for recycling advice.



Read the instruction manual before operating this machine.



The product complies with the RoHS directives and an evaluation method of conformity for these directives was done.



The product complies with IP34 standard.

# Maintenance

Your appliance does not require any particular maintenance. However, in the event of a malfunction, **please consult a suitably qualified electrician.**

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**. Please visit the website [www.argos.co.uk](http://www.argos.co.uk) for more information.

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT.

Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.

Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW.

Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.

Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland